

MU686/MU706
Digital Projector
User Manual

Table of contents

Important safety
instructions3
Introduction7
Projector features7
Shipping contents8
Projector exterior view9
Controls and functions10
Positioning your
projector14
Choosing a location14
Obtaining a preferred projected image size15
Connection17
Connecting video source devices18
Connecting video streaming dongle -
QCast (optional accessory)19
Operation21
Starting up the projector21
Adjusting the projected image22
Using the menus25
Securing the projector26
Switching input signal28
Magnifying and searching for details29
Selecting the aspect ratio29
Optimizing the image31
Setting the presentation timer34
Remote paging operations35
Freezing the image35
Hiding the image35
Locking control keys36
Operating in a high altitude environment36

 
Adjusting the sound	36
Jsing the test pattern	37
Jsing the teaching templates	38
Shutting down the projector	39
Direct power off	39
Menu operation	40
Maintenance	50
Care of the projector	50
_amp information	51
Troubleshooting	57
Troubleshooting	
_	58
Specifications	58 58
Specifications	58 58 59
Specifications Projector specifications Dimensions	58 58 59 59
Specifications Projector specifications Dimensions Ceiling mount installation	58 58 59 59
Specifications Projector specifications Dimensions Ceiling mount installation Timing chart	58 58 59 59 60

Important safety instructions

Your projector is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that you follow the instructions mentioned in this manual and marked on the product.

Safety Instructions

 Please read this manual before you operate your projector. Save it for future reference.




 Do not look straight at the projector lens during operation. The intense light beam may damage your eyes.




Refer servicing to qualified service personnel.



  Always open the lens shutter (if any) or remove the lens cap (if any) when the projector lamp is on.



 5. In some countries, the line voltage is NOT stable. This projector is designed to operate safely within a mains voltage between 100 to 240 volts AC, but could fail if power cuts or surges of ±10 volts occur. In areas where the mains voltage may fluctuate or cut out, it is recommended that you connect your projector through a power stabilizer, surge protector or uninterruptible power supply (UPS).



 Do not block the projection lens with any objects when the projector is under operation as this could cause the objects to become heated and deformed or even cause a fire. To temporarily turn off the lamp, press ECO BLANK on the projector or remote control.




Safety Instructions (Continued)


 The lamp becomes extremely hot during operation. Allow the projector to cool for approximately 45 minutes prior to removing the lamp assembly for replacement.




 Do not operate lamps beyond the rated lamp life. Excessive operation of lamps beyond the rated life could cause them to break on rare occasions.

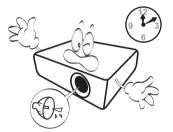

Never replace the lamp assembly or any electronic components unless the projector is unplugged.

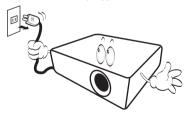


  Do not place this product on an unstable cart, stand, or table. The product may fall, sustaining serious damage.



 Do not attempt to disassemble this projector. There are dangerous high voltages inside which may cause death if you should come into contact with live parts. The only user serviceable part is the lamp which has its own removable cover.

 Under no circumstances should you ever undo or remove any other covers. Refer servicing only to suitably qualified professional service personnel.




 When the projector is under operation, you may sense some heated air and odor from its ventilation grill. It is a normal phenomenon and not a product defect.

Safety Instructions (Continued)

- Do not place this projector in any of the following environments.
 - Space that is poorly ventilated or confined. Allow at least 50 cm clearance from walls and free flow of air around the projector.
 - Locations where temperatures may become excessively high, such as the inside of a car with all windows rolled up.
 - Locations where excessive humidity, dust, or cigarette smoke may contaminate optical components, shorten the projector's life span and darken the image.



- Locations near fire alarms
- Locations with an ambient temperature above 40°C / 104°F
- Locations where the altitudes are higher than 3000 m (10000 feet).

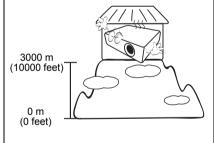

- 14. Do not block the ventilation holes.
 - Do not place this projector on a blanket, bedding or any other soft surface.
 - Do not cover this projector with a cloth or any other item.
 - Do not place inflammables near the projector.




If the ventilation holes are seriously obstructed, overheating inside the projector may result in a fire.

- Always place the projector on a level, horizontal surface during operation.
 - Do not use if tilted at an angle of more than 10 degrees left to right, nor at angle of more than 15 degrees front to back. Using the projector when it is not fully horizontal may cause a malfunction of, or damage to, the lamp.



16. Do not stand the projector on end vertically. Doing so may cause the projector to fall over, causing injury or resulting in damage to the projector.

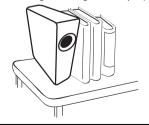


Safety Instructions (Continued)

Do not step on the projector or place any objects upon it. Besides probable physical damage to the projector, doing so may result in accidents and possible injury.




18. Do not place liquids near or on the projector. Liquids spilled into the projector may cause it to fail. If the projector does become wet, disconnect it from the power supply's power outlet and call BenQ to have the projector serviced.

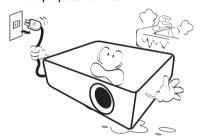

This product is capable of displaying inverted images for ceiling mount installation.



 Use only BenQ's Ceiling Mount Kit for mounting the projector and ensure it is securely installed.



20. This apparatus must be earthed.



(!) Ceiling mounting the projector We want you to have a pleasant experience using your BenO projector. so we need to bring this safety matter to your attention to prevent possible damage to person and property. If you intend to mount your projector on the ceiling, we strongly recommend that you use a proper fitting BenQ projector ceiling mount kit and that

If you use a non-BenQ brand projector ceiling mount kit, there is a safety risk that the projector may fall from the ceiling due to an improper attachment through the use of the wrong gauge or length screws.

you ensure it is securely and safely

installed.

You can purchase a BenQ projector ceiling mount kit from the place you purchased your BenQ projector. BenQ recommends that you also purchase a separate Kensington lock compatible security cable and attach it securely to both the Kensington lock slot on the projector and the base of the ceiling mount bracket. This will perform the secondary role of restraining the projector should its attachment to the mounting bracket become loose.



Hg - Lamp contains mercury. Manage in accordance with local disposal laws. See www.lamprecycle.org.

Introduction

Projector features

The projector offers the following features

SmartEco[™] starts your dynamic power saving

The SmartEco™ technology offers a new way of operating the projector lamp system and saves lamp power depending on the content brightness level.

Longest lamp life with SmartEco™ technology

The SmartEco™ technology lowers the power consumption and increases the lamp life.

ECO BLANK saves the lamp power

Pressing the **ECO BLANK** button to hide the image and immediately lower the lamp power at the same time.

· Less than 0.5W in standby condition

Less than 0.5W power consumption under standby mode.

Filter Free

Filter free design to lower maintenance and operating costs.

· One-key auto-adjustment

Pressing **AUTO** on the keypad or remote control to show the best picture quality immediately.

Built-in speaker(s)

Built-in speaker(s) providing mixed mono audio when an audio input is connected

· Auto Power Off, Signal Power On, Direct Power On

Auto Power Off function allows the projector to turn off automatically if no input signal is detected after a set period of time. **Signal Power On** function turns on your projector automatically once detecting the signal input and **Direct Power On** boots up the projector automatically when the power is connected.

· Instant Restart

Selectable **Instant Restart** function enables you to restart the projector immediately within 90 seconds after turning it off.

3D Function supported

Various 3D formats make the 3D function more flexible. By presenting the depth of the images, you can wear BenQ 3D glasses to enjoy the 3D movies, videos and sporting events in a more realistic way.


The apparent brightness of the projected image will vary depending on the ambient lighting conditions, selected input signal contrast/brightness settings, and is directly proportional to projection distance.
The lamp brightness will decline over time and may vary within the lamp manufacturers specifications. This is normal and expected behavior.

Shipping contents

Carefully unpack and verify that you have all of the items shown below. If any of these items are missing, please contact your place of purchase.

Standard accessories

- The supplied accessories will be suitable for your region, and may differ from those illustrated.
- *The warranty card is only supplied in some specific regions. Please consult your dealer for detailed information.

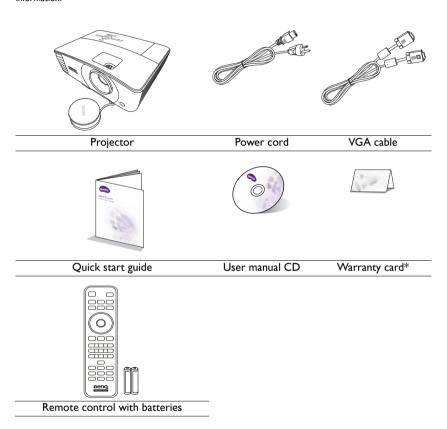

Optional accessories

- 1. Spare lamp kit
- 2. Ceiling mount kit
- 3. 3D glasses

- Video streaming dongle QCast dongle
- 5. RS232 cable

Projector exterior view


Front/upper side

Rear/lower side

- External control panel (See "Controls and functions" on page 10 for details.)
- 2. Speaker grill
- 3. Lamp cover
- 4. Vent (heated air exhaust)
- 5. Quick-release button
- 6. Lens cap
- 7. Focus and Zoom ring
- 8. Wireless cover
- 9. Vent (cool air intake)
- 10. Projection lens
- II. IR remote sensor
- 12. Mini USB port
- 13. RS232 control port
- 14. HDMI-input port
- USB Type-A port
 Provides 1.5A power. Used for charging the QCast dongle (optional accessory).
- 16. RGB signal output jack
- RGB (PC)/Component Video (YPbPr/ YCbCr) signal input jacks
- 18. Audio output jack
- 19. Audio input jack
- 20. S-Video input jack Video input jack
- 21. Audio (L/R) input jacks
- 22. AC power jack
- 23. Adjuster foot
- 24. Ceiling mount holes
- 25. Kensington anti-theft lock slot

Controls and functions

Projector

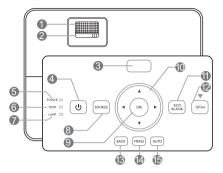

I. Focus ring

Adjusts the focus of the projected image.

2. Zoom ring

Adjusts the size of the image.

3. IR remote sensor

4. (I) POWER

Toggles the projector between standby mode and on.

5. POWER indicator light

Lights up or flashes when the projector is under operation.

6. TEMPerature warning light

Lights up red if the projector's temperature becomes too high.

7. LAMP indicator light

Indicates the status of the lamp. Lights up or flashes when the lamp has developed a problem.

8. SOURCE

Displays the source selection bar.

9. OK

Confirms the selected On-Screen Display 15. (OSD) menu item.

10. Arrow keys (▲Up, ▼ Down, ◀ Left,▶ Right)

When the On-Screen Display (OSD) menu is activated, these keys are used as directional arrows to select the desired menu items and to make adjustments.

II. ECO BLANK

Used to hide the screen picture.

12. OCast

- Switches the projector source to **HDMI-2/MHL**.
- Lights up when the QCast dongle or a MHL device is properly connected to the HDMI-2/MHL port.

13. BACK

Goes back to previous OSD menu, exits and saves menu settings.


14. MENU

Turns on the On-Screen Display (OSD) menu.

IS. AUTO

Automatically determines the best picture timings for the displayed image.

Remote control

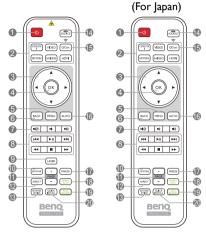

I. U POWER

Toggles the projector between standby mode and on.

 Source selection buttons (COMPUTER I, VIDEO, S-VIDEO, HDMI, QCast)

Selects an input source for display. (**NETWORK**)

No function.

Arrow keys (▲ Up, ▼ Down, ◀ Left, Right)

When the On-Screen Display (OSD) menu is activated, these keys are used as directional arrows to select the desired menu items and to make adjustments.

OK

Activates the selected On-Screen Display (OSD) menu item.

5. MENU

Turns on the On-Screen Display (OSD) menu.

6. BACK

Goes back to previous OSD menu, exits and saves menu settings.

7. ■ (((), ((), (())))

- Toggles projector audio between on and off.
- Decreases the projector audio volume.
- Increases the projector audio volume.
- - Goes to the previous file/Plays/Pauses/ Goes to the next file/Rewinds/Stops/ Fast-forwards during media playback.
 - Only available when controlling your smart device in MHL mode.

9. LASER

Emits visible laser pointer light for presentation purposes.

10. KEYSTONE

Launches the Keystone adjustment window.

II. PAGE +/PAGE -

Operate your display software program (on a connected PC) which responds to page up/down commands (like Microsoft PowerPoint).

12. ASPECT

Selects the display aspect ratio.

13. NETWORK SETTING

No function.

14. SOURCE

Displays the source selection bar.

15. OCast

Switches the projector source to **HDMI- 2/MHL**

16. AUTO

Automatically determines the best picture timings for the displayed image.

17. FREEZE

Freezes the projected image.

18. SMART ECO

Displays the lamp mode selection bar.

19. ECO BLANK

Used to hide the screen picture.

20. QUICK INSTALL

Quickly selects several functions to adjust the projected image and displays the test pattern.

Operating the **LASER** pointer

The Laser Pointer is a presentation aid for professionals. It emits red colored light when you press it.

The laser beam is visible. It is necessary to press and hold **LASER** for continuous output.



\bigwedge

WARNING:

Do not look into the laser light window or shine the laser light beam on yourself or others. See the warning messages on the back of the remote control prior to using it.

The laser pointer is not a toy. Parents should be mindful of the dangers of laser energy and keep this remote control out of the reach of children.

Remote control effective range

The remote control must be held at an angle within 30 degrees perpendicular to the projector's IR remote control sensor(s) to function correctly. The distance between the remote control and the sensor(s) should not exceed 8 meters (\sim 26 feet).

Make sure that there are no obstacles between the remote control and the IR sensor(s) on the projector that might obstruct the infra-red beam.

 
Operating the projector from the front
 Operating the projector from the top

 




Replacing the remote control batteries

- To open the battery cover, turn the remote control over to view its back, push on the finger grip on the cover and slide it up in the direction of the arrow as illustrated. The cover will slide off.
- Remove any existing batteries (if necessary) and install two AAA batteries observing
 the battery polarities as indicated in the base of the battery compartment. Positive
 (+) goes to positive and negative (-) goes to negative.
- Refit the cover by aligning it with the base and sliding it back down into position. Stop when it clicks into place.





/ WARNING:

- Avoid leaving the remote control and batteries in an excessive heat or humid environment like the kitchen, bathroom, sauna, sunroom or in a closed car.
- · Replace only with the same or equivalent type recommended by the battery manufacturer.
- Dispose of the used batteries according to the manufacturer's instructions and local environment regulations for your region.
- Never throw the batteries into a fire. There may be danger of an explosion.
- If the batteries are dead or if you will not be using the remote control for an extended period of time, remove the batteries to avoid damage to the remote control from possible battery leakage.

Positioning your projector

 
Choosing a location

Your room layout or personal preference will dictate which installation location you select. Take into consideration the size and position of your screen, the location of a suitable power outlet, as well as the location and distance between the projector and the rest of your equipment.

Your projector is designed to be installed in one of the following possible installation locations. Corresponding setting can be made in the OSD menu.

I. Front Table


Select this location with the projector placed on the table in front of the screen. This is the most common way to position the projector for quick setup and portability.



2. Front Ceiling

Select this location with the projector suspended upside-down from the ceiling in front of the screen.

 
Purchase the BenQ Projector Ceiling Mount Kit from your dealer to mount your projector on the ceiling.



3. Rear Ceiling

Select this location with the projector suspended upside-down from the ceiling behind the screen.

 
Note that a special rear projection screen and the BenQ Projector Ceiling Mount Kit are required for this installation location.



4. Rear Table

Select this location with the projector placed on the table behind the screen.

 Note that a special rear projection screen is required.



After turning on the projector, you can set the projector position by one of the following steps.

- Press MENU and then press

 /

 until the SYSTEM SETUP: Basic menu is highlighted. Press

 to highlight Projector Installation and press

 
 /

 to select a setting.
- Press QUICK INSTALL on the remote control and then press ▲/▼ until
 Projector Installation is highlighted. Press OK and press ◄/▶ to select a setting.

Obtaining a preferred projected image size

The distance from the projector lens to the screen, the zoom setting, and the video format each factors in the projected image size.

Projection dimensions



The screen aspect ratio is 16:10 and the projected picture is in a 16:10 aspect ratio

Screen size			Distance from screen (mm)			Vertical	
Diagonal		H W	W Min length	Average	Max length	offset	
Inch	mm	(mm)	(mm)	(max. zoom)	Average	(min. zoom)	(mm)
40	1016	538	862	991	1142	1292	0
50	1270	673	1077	1239	1427	1615	0
60	1524	808	1292	1486	1712	1939	0
70	1778	942	1508	1734	1998	2262	0
80	2032	1077	1723	1982	2283	2585	0
90	2286	1212	1939	2229	2569	2908	0
100	2540	1346	2154	2477	2854	3231	0
110	2794	1481	2369	2725	3139	3554	0
120	3048	1615	2585	2972	3425	3877	0
130	3302	1750	2800	3220	3710	4200	0
140	3556	1885	3015	3468	3996	4523	0
150	3810	2019	3231	3716	4281	4846	0
160	4064	2154	3446	3963	4566	5169	0
170	4318	2289	3662	4211	4852	5492	0
180	4572	2423	3877	4459	5137	5816	0
190	4826	2558	4092	4706	5422	6139	0
200	5080	2692	4308	4954	5708	6462	0
250	6350	3365	5385	6193	7135	8077	0
300	7620	4039	6462	7431	8562	9693	0

For example, if you are using an 120-inch screen, the recommended projection distance is 3425 mm.

If your measured projection distance is 5200 mm, the closest match in the "Distance from screen (mm)" column is 5137 mm. Looking across this row shows that a 180" (about 4.6 m) screen is required.




All measurements are approximate and may vary from the actual sizes.

BenQ recommends that if you intend to permanently install the projector, you should physically test the projection size and distance using the actual projector in situ before you permanently install it, so as to make allowance for this projector's optical characteristics. This will help you determine the exact mounting position so that it best suits your installation location.

Connection

When connecting a signal source to the projector, be sure to:

- 1. Turn all equipment off before making any connections.
- 2. Use the correct signal cables for each source.
- 3. Ensure the cables are firmly inserted.
- In the connections shown below, some cables may not be included with the projector (see "Shipping contents" on page 8). They are commercially available from electronics stores.
- The connection illustrations below are for reference only. The rear connecting jacks available on the projector vary with each projector model.

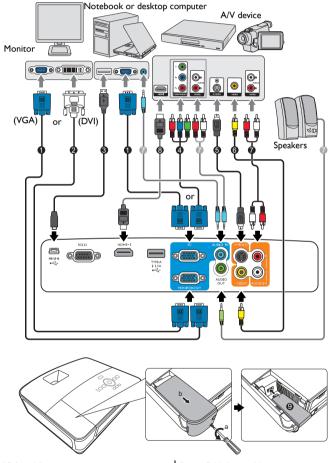

- I. VGA cable
- 2. VGA to DVI-A cable
- USB cable
- Component Video to VGA (D-Sub) adapter cable
- 5. S-Video cable
- 6. Video cable
- 7. Audio cable
- 8. HDMI cable
- 9. QCast dongle

Many notebooks do not turn on their external video ports when connected to a projector. Usually a key combo like $FN + F3$ or CRT/LCD key turns the external display on/off. Locate a function key labeled CRT/LCD or a function key with a monitor symbol on the notebook. Press FN and the labeled function key simultaneously. Refer to your notebook's documentation to find your notebook's key combination.
The D-Sub output only works when an appropriate D-Sub input is made to the ${\bf PC}$ jack.
If you wish to use this connection method when the projector is in standby mode, make sure the Monitor Out function is turned on in the SYSTEM SETUP: Advanced menu. See "Standby Settings" on page 48 for details.

Connecting video source devices

You need only connect the projector to a video source device using just one of the connecting methods, however each provides a different level of video quality. The method you choose will most likely depend upon the availability of matching terminals on both the projector and the video source device as described below:

Terminal name	Terminal appearance	Picture quality
HDMI/MHL		Best
Component Video		Better
S-Video		Good
Video	©	Normal

Connecting audio

The projector has built-in mono speaker(s) which are designed to provide basic audio functionality accompanying data presentations for business purposes only. Any stereo audio input (if provided), is mixed into a common mono audio output through the projector speaker(s).

The built-in speaker(s) will be muted when the **AUDIO OUT** jack is connected.

 
[3] If the selected video image is not displayed after the projector is turned on and the correct video source has been selected, check that the video source device is turned on and operating correctly. Also check that the signal cables have been connected correctly.

Connecting video streaming dongle - QCast (optional accessory)


This dongle allows you to perform a wireless projection from your smart device or computer. To purchase the QCast dongle, contact your local dealer.

Installation


 Loosen the screw that secures the wireless cover and open the wireless cover.



 Slide the switcher on the dongle to MHL and connect the dongle to the HDMI-2/MHL port.




 Replace the wireless cover and tighten the screw that secures the wireless cover.




Starting the wireless projection

- I. Turn on the projector.
- After the QCast dongle is properly connected to the HDMI-2/MHL port, the LED indicator lights up orange.
- When other MHL dongle or a MHL cable with a MHL-enabled device connected is plugged into the **HDMI-2/MHL** port, the LED indicator lights up orange.
 - Enable the wireless function using the QCast dongle by one of the following steps.

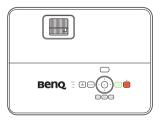

 Press QCast on the projector or remote control.





- Press SOURCE and select HDMI-2/MHL from the source selection bar.
- 4. You can start the wireless projection now.

If the wireless projection stops unexpectedly, press **QCast** to turn off the QCast dongle. Pressing **QCast** on the projector or remote control to reboot the dongle.

 


- The input source **HDMI-2/MHL** cannot be found when the projector automatically searches for the available signals.
- Compatibility with MHL dongles of other brands is not guaranteed.

Operation

Starting up the projector

 Plug the power cord into the projector and into a power outlet. Turn on the power outlet switch (where fitted). Check that the **POWER indicator** light on the projector lights orange after power has been applied.



Please use the original accessories (e.g. power cord) only with the device to avoid possible dangers such as electric shock and fire.

Press POWER to start the projector. As soon as the lamp lights up, a "Power
On Ring Tone" will be heard. The POWER indicator light flashes green and
stays green when the projector is on.

The start up procedure takes about 30 seconds. In the later stage of start up, a startup logo is projected.

(If necessary) Rotate the focus ring to adjust the image clearness.

To turn off the ring tone, see "Turning off the Power On/Off Ring Tone" on page 37 for details.

- If the projector is still hot from previous activity, it will run the cooling fan for approximately 90 seconds before energizing the lamp.
 - If the projector is activated for the first time, select your OSD language following the on-screen instructions.
 - If you are prompted for a password, press the arrow keys to enter a six-digit password. See "Utilizing the password function" on page 26 for details.
 - 5. Switch all of the connected equipment on.
 - 6. The projector will start to search for input signals. The current input signal being scanned appears in the upper left corner of the screen. If the projector doesn't detect a valid signal, the message "No Signal" will continue displaying until an input signal is found.

You can also press **SOURCE** on the projector or remote control to select your desired input signal. See "Switching input signal" on page 28 for details.



If the frequency/resolution of the input signal exceeds the projector's operating range, you will see the
 message "Out of Range" displayed on the background screen. Please change to an input signal which is
compatible with the projector's resolution or set the input signal to a lower setting. See "Timing chart" or
page 60 for details.

If no signal is detected for 3 minutes, the projector automatically enters saving mode.

Adjusting the projected image

 
Adjusting the projection angle

The projector is equipped with a quick-release adjuster foot and 2 rear adjuster feet. These adjusters change the image height and projection angle.

To adjust the projection angle:

- Press the quick-release button and lift the front of the projector. Once the image is positioned as desired, release the quickrelease button to lock the foot in position.
- Screw the rear adjuster feet to fine-tune the horizontal angle.

To retract the feet, screw the rear adjuster feet in a reverse direction.



Do not look into the lens while the lamp is on. The strong light from the lamp may cause damage to your eyes.

Be careful when you press the quickrelease button as it is close to the exhaust vent where hot air comes from

If the projector is not placed on a flat surface or the screen and the projector are not perpendicular to each other, the projected image becomes trapezoidal. To correct this situation, see "Correcting keystone" on page 23 for details.

Auto-adjusting the image

 
In some cases, you may need to optimize the picture quality. To do this, press **AUTO** on the projector or remote control. Within 3 seconds, the built-in Intelligent Auto Adjustment function will re-adjust the values of Frequency and Clock to provide the best picture quality.

The current source information will be displayed in the corner of the screen for 3 seconds.


This function is only available when PC signal (analog RGB) is selected.

Fine-tuning the image size and clarity

 Adjust the projected image to the size that you need using the zoom ring.



 Sharpen the image by rotating the focus ring.



Correcting keystone

Keystoning refers to the situation where the projected image is noticeably wider at either the top or bottom. It occurs when the projector is not perpendicular to the screen.

You can correct this automatically following these steps:

- I. Press **MENU** and then press **◄/▶** until the **DISPLAY** menu is highlighted.
- 2. Press ▼ to highlight Auto Keystone and press

To manually correct this, you will need to follow these steps:

- Do one of the following steps to display the keystone correction page.
 - Press KEYSTONE on the remote control.



- Press QUICK INSTALL on the remote control. Press ▼ to highlight Keystone and press OK.
- Press MENU and then press
 Press ▼ to highlight Keystone and press OK.
- The Keystone correction page displays. Press


 to correct keystoning at the top
 of the image. Press

 to correct keystoning at the bottom of the image.


Adjusting Corner Fit

You can manually adjust four corners of the image by setting the horizontal and vertical values.

- I. Do one of the following steps to display the corner fit correction page.
 - Press QUICK INSTALL on the remote control. Press ▼ to highlight Corner Fit and press OK.
 - Press MENU and then press ◄/▶ until the DISPLAY menu is highlighted. Press
 ▼ to highlight Corner Fit and press OK.
- Press ▲/▼/◄/▶ to select one corner and press OK.

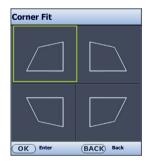

- 3. Press $\blacktriangle/\blacktriangledown$ to adjust vertical values.
- 4. Press **◄**/**▶** to adjust horizontal values.

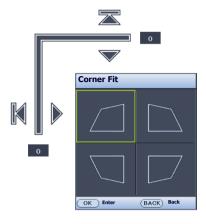

Using the menus

The projector is equipped with On-Screen Display (OSD) menus for making various adjustments and settings.

The OSD screenshots below are for reference only, and may differ from the actual design.

Below is the overview of the OSD menu.




The following example describes how to set the OSD language.

I. Press **MENU** on the projector or remote control to turn the OSD menu on.



 Use ◀/▶ to highlight the SYSTEM SETUP: Basic menu.

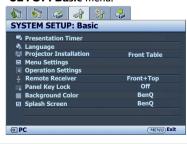

 Press ▼ to highlight Language and press OK.



- Press ▲/▼/ ◀ / ▶ to select a preferred language and press OK.
- 5. Press **BACK** to go back or press **MENU** to leave.

Securing the projector

Using a security cable lock

The projector has to be installed in a safe place to prevent theft. Otherwise, purchase a lock, such as the Kensington lock, to secure the projector. You can locate a Kensington lock slot on the rear side of the projector. See item 25 on page 9 for details.

A Kensington security cable lock is usually a combination of key(s) and the lock. Refer to the lock's documentation for finding out how to use it.

Utilizing the password function

For security purposes and to help prevent unauthorized use, the projector includes an option for setting up password security. The password can be set through the On-Screen Display (OSD) menu.

WARNING: You will be inconvenienced if you activate the password functionality and subsequently forget the password. Print out this manual (if necessary) and write the password you used in this manual, and keep the manual in a safe place for later recall.

Setting a password

- Once a password has been set and the power on lock is activated, the projector cannot be used unless the correct password is entered every time the projector is started.
 - Open the OSD menu and go to the SYSTEM SETUP: Advanced > Security Settings menu. Press OK. The Security Settings page appears.
 - 2. Highlight Change Security Settings and press OK.
 - As pictured to the right, the four arrow keys
 (▲, ▶, ▼, ◄) respectively represent 4 digits
 (1, 2, 3, 4). According to the password you
 desire to set, press the arrow keys to enter six
 digits for the password.
 - 4. Confirm the new password by re-entering the new password.
 - Once the password is set, the OSD menu returns to the **Security Settings** page.



 To activate the Power On Lock function, press ▲/▼ to highlight Power On Lock and press ◄/► to select On.

MPORTANT: The digits being input will display as asterisks on-screen. Write your selected password down here in this manual in advance or right after the password is entered so that it is available to you should you ever forget it.

6. To leave the OSD menu, press **BACK**.

If you forget the password

If the password function is activated, you will be asked to enter the six-digit password every time you turn on the projector. If you enter the wrong password, the password error message as pictured to the right will appear, and the **INPUT PASSWORD** message follows. You can retry by entering another six-digit password, or if you did not record the password in this



manual, and you absolutely do not remember it, you can use the password recall procedure. See "Entering the password recall procedure" on page 27 for details.

If you enter an incorrect password 5 times in succession, the projector will automatically shut down in a short time.

Entering the password recall procedure

- Press and hold AUTO on the projector or remote control for 3 seconds. The projector will display a coded number on the screen.
- Write down the number and turn off your projector.
- Seek help from the local BenQ service center to decode the number. You may be required to provide proof of purchase documentation to verify that you are an authorized user of the projector.



Changing the password

- Open the OSD menu and go to the SYSTEM SETUP: Advanced> Security Settings > Change Password menu.
- 2. Press **OK**. The message "**INPUT CURRENT PASSWORD**" appears.
- 3. Enter the old password.
 - If the password is correct, another message "INPUT NEW PASSWORD" appears.
 - ii. If the password is incorrect, the password error message will appear, and the message "INPUT CURRENT PASSWORD" appears for your retry. You can press BACK to cancel the change or try another password.
- Enter a new password.

IMPORTANT: The digits being input will display as asterisks on-screen. Write your selected password down here in this manual in advance or right after the password is entered so that it is available to you should you ever forget it.

Password: ___ __ __ ______

Keep this manual in a safe place.

- 5. Confirm the new password by re-entering the new password.
- You have successfully assigned a new password to the projector. Remember to enter the new password next time the projector is started.
- 7. To leave the OSD menu, press **BACK**.

Disabling the password function

To disable password protection, go back to the **SYSTEM SETUP: Advanced** > **Security Settings** > **Change Security Settings** menu after opening the OSD menu system. Press **OK.** The message "**INPUT PASSWORD**" appears. Enter the current password.

 If the password is correct, the OSD menu returns to the Security Settings page.

Press ▼ to highlight **Power On Lock** and press ◀/▶ to select **Off**. You will not have to enter the password next time when turning on the projector.

- ii. If the password is incorrect, the password error message will appear, and the message "INPUT PASSWORD" appears for your retry. You can press BACK to cancel the change or try another password.
- Though the password function is disabled, you need to keep the old password in hand should you ever need to re-activate the password function by entering the old password.

Switching input signal

The projector can be connected to multiple devices at the same time. However, it can only display one full screen at a time. When starting up, the projector automatically searches for the available signals.

Be sure the **Quick Auto Search** function in the **SOURCE** menu is **On** if you want the projector to automatically search for the signals.

To select the source:

- 1. Press **SOURCE**. A source selection bar appears.
- Press ▲/▼ until your desired signal is selected and press OK.

Once detected, the selected source information will display at the corner of the screen for seconds. If there is multiple equipment connected to the projector, repeat steps 1-2 to search for another signal.



The brightness level of the projected image will change accordingly when you switch between different input signals. Data (graphic)

"PC" presentations using mostly static images are generally brighter than "Video" using mostly moving images (movies).

The native display resolution of this projector is in a 16:10 aspect ratio. For best display picture results, you should select and use an input signal which outputs at this resolution. Any other resolutions will be scaled by the projector depending upon the "aspect ratio" setting, which may cause some image distortion or loss of picture clarity. See "Selecting the aspect ratio" on page 29 for details.

Changing Color Space

In the unlikely event that you connect the projector to a DVD player via the projector's **HDMI** input and the projected picture displays wrong colors, please change the color space to **YUV**.

To do this:

- Press MENU and then press ◀/▶ until the SOURCE menu is highlighted.
- Press ▼ to highlight Color Space Conversion and press ◄/► to select a suitable color space.
- This function is only available when the HDMI-input port is in use.

Magnifying and searching for details

If you need to find the details on the projected picture, magnify the picture. Use the direction arrow keys for navigating the picture.

- I. Press **MENU** and then press **◄** / **▶** until the **DISPLAY** menu is highlighted.
- 2. Press ▼ to highlight **Digital Zoom** and press **OK**. The Zoom bar appears.
- 3. Press \triangle repeatedly to magnify the picture to a desired size.
- To navigate the picture, press OK to switch to the panning mode and press the directional arrows (▲, ▼, ◄, ►) on the projector or remote control to navigate the picture.
- To reduce size of the picture, press AUTO to restore the picture to its original size.
 You can also press ▼ repeatedly until it is restored to the original size.
- The picture can only be navigated after it is magnified. You can further magnify the picture while searching for details.

Selecting the aspect ratio

The "aspect ratio" is the ratio of the image width to the image height. Most analog TV and some computers are in 4:3 ratio, and digital TV and DVDs are usually in 16:9 ratio.

With the advent of digital signal processing, digital display devices like this projector can dynamically stretch and scale the image output to a different aspect than that of the image input signal.

To change the projected picture ratio (no matter what aspect the source is):

 
- Using the remote control
- 1. Press **ASPECT** to show the current setting.
- Press ASPECT repeatedly to select an aspect ratio to suit the format of the video signal and your display requirements.
- Using the OSD menu
- I. Press **MENU** and then press **◄**/**▶** until the **DISPLAY** menu is highlighted.
- 2. Press ▼ to highlight Aspect Ratio.
- Press ◀/► to select an aspect ratio to suit the format of the video signal and your display requirements.

About the aspect ratio


[3] In the pictures below, the black portions are inactive areas and the white portions are active areas.

OSD menus can be displayed on those unused black areas.


 Auto: Scales an image proportionally to fit the projector's native resolution in its horizontal or vertical width. This is suitable for the incoming image which is neither in 4:3 nor 16:9 and you want to make most use of the screen without altering the image's aspect ratio.




2. Real: The image is projected as its original resolution, and resized to fit within the display area. For input signals with lower resolutions, the projected image will display smaller than if resized to full screen. You could adjust the zoom setting or move the projector towards the screen to increase the image size if necessary. You may also need to refocus the projector after making these adjustments.

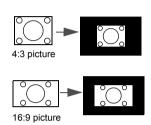

 
3. 4:3: Scales an image so that it is displayed in the center of the screen with a 4:3 aspect ratio. This is most suitable for 4:3 images like some computer monitors, standard definition TV and 4:3 aspect DVD movies, as it displays them without aspect alteration.



 4. 16:9: Scales an image so that it is displayed in the center of the screen with a 16:9 aspect ratio. This is most suitable for images which are already in a 16:9 aspect, like high definition TV, as it displays them without aspect alteration.



  16:10: Scales an image so that it is displayed in the center of the screen with a 16:10 aspect ratio. This is most suitable for images which are already in a 16:10 aspect, as it displays them without aspect alteration.



Optimizing the image

Using Wall Color

In the situation where you are projecting onto a colored surface such as a painted wall which may not be white, the Wall Color feature can help correct the projected picture's colors to prevent possible color difference between the source and projected pictures.

To use this function, go to the **DISPLAY** > **Wall Color** menu and press ◀/▶ to select a color which is closest to the color of the projection surface. There are several precalibrated colors to choose from: **Light Yellow**, **Pink**, **Light Green**, **Blue**, and **Blackboard**.

Selecting a picture mode

The projector is preset with several predefined picture modes so that you can choose one to suit your operating environment and input signal picture type.

To select an operation mode that suits your need, do the following steps.

- Bright mode: Maximizes the brightness of the projected image. This mode is suitable for environments where extra-high brightness is required, such as using the projector in well lit rooms.
- Presentation mode: Is designed for presentations. The brightness is emphasized in this mode to match PC and notebook coloring.
- sRGB mode: Maximizes the purity of RGB colors to provide true-to-life images regardless of brightness setting. It is most suitable for viewing photos taken with an sRGB compatible and properly calibrated camera, and for viewing PC graphic and drawing applications such as AutoCAD.
- Cinema mode: Is appropriate for playing colorful movies, video clips from digital cameras or DVs through the PC input for best viewing in a blackened (little light) environment.
- 5. **3D mode**: Is appropriate for playing 3D images and 3D video clips.
- User I/User 2 mode: Recalls the settings customized based on the current available picture modes. See "Setting the User I/User 2 mode" on page 31 for details.

Setting the User I/User 2 mode

There are two user-definable modes if the current available picture modes are not suitable for your need. You can use one of the picture modes (except the **User 1/User 2**) as a starting point and customize the settings.

- 1. Press **MENU** to open the On-Screen Display (OSD) menu.
- 2. Go to the **PICTURE** > **Picture Mode** menu.
- Press ◀/▶ to select User I or User 2.
- Press ▼ to highlight Reference Mode.
- This function is only available when **User I** or **User 2** mode is selected up in the **Picture Mode** sub-menu item.
 - 5. Press **◄**/▶ to select a picture mode that is closest to your need.
 - Press ▼ to select a menu item to be changed and adjust the value with ◀ / ▶ . See
 "Fine-tuning the image quality in user modes" below for details.

Fine-tuning the image quality in user modes

According to the detected signal type and selected picture mode, some of the below functions may not be available. Based on your needs, you can make adjustments to these functions by highlighting them and pressing $\blacktriangleleft/\triangleright$ on the projector or remote control.

Adjusting **Brightness**

The higher the value, the brighter the image. And the lower the setting, the darker the image. Adjust this control so the black areas of the image appear just as black and that detail in the dark areas is visible.







Adjusting Contrast

The higher the value, the greater the contrast. Use this to set the peak white level after you have previously adjusted the Brightness setting to suit your selected input and viewing environment.







Adjusting Color

Lower setting produces less saturated colors. If the setting is too high, colors on the image will be overpowering, which makes the image unrealistic.

Adjusting **Tint**

The higher the value, the more reddish the picture becomes. The lower the value, the more greenish the picture becomes.

Adjusting Sharpness

The higher the value, the sharper the picture becomes. The lower the value, the softer the picture becomes.

Adjusting **Brilliant Color**

This feature utilizes a new color-processing algorithm and system level enhancements to enable higher brightness while providing truer, more vibrant colors in picture. It enables a greater than 50% brightness increase in mid-tone images, which are common in video and natural scenes, so the projector reproduces images in realistic and true colors. If you prefer images with that quality, select **On**. If you don't need it, select **Off**.

When **Off** is selected, the **Color Temperature** function is not available.

Selecting a Color Temperature

The options available for color temperature settings vary according to the signal type selected.

- I. Cool: Makes images appear bluish white.
- 2. **Normal:** Maintains normal colorings for white.
- 3. Warm: Makes images appear reddish white.

Setting a preferred color temperature

To set a preferred color temperature:

- Highlight Color Temperature and select Warm, Normal or Cool by pressing

 ✓ / ▶ on the projector or remote control.
- Press ▼ to highlight Color Temperature Fine Tuning and press OK. The Color Temperature Fine Tuning page appears.

- Press ▲/▼ to highlight the item you want to change and adjust the values by pressing ◄/▶.
 - R Gain/G Gain/B Gain: Adjusts the contrast levels of Red, Green, and Blue.
 - R Offset/G Offset/B Offset: Adjusts the brightness levels of Red, Green, and Blue.
- 4. Press **BACK** to exit and save the settings

3D Color Management

In most installation situations, color management will not be necessary, such as in classroom, meeting room, or lounge room situations where lights remain on, or where building external windows allow daylight into the room.

Only in permanent installations with controlled lighting levels such as boardrooms, lecture theaters, or home theaters, should color management be considered. Color management provides fine color control adjustment to allow for more accurate color reproduction, should you require it.

Proper color management can only be achieved under controlled and reproducible viewing conditions. You will need to use a colorimeter (color light meter), and provide a set of suitable source images to measure color reproduction. These tools are not provided with the projector, however, your projector supplier should be able to provide you with suitable guidance, or even an experienced professional installer.

The Color Management provides six sets (RGBCMY) of colors to be adjusted. When you select each color, you can independently adjust its range and saturation according to your preference.


If you have purchased a test disc which contains various color test patterns and can be used to test the color presentation on monitors, TVs, projectors, etc, you can project any image from the disc on the screen and enter the **3D Color Management** menu to make adjustments.

To adjust the settings:

- I. Go to the **PICTURE** menu and highlight **3D Color Management**.
- Press OK on the projector or remote control and the 3D Color Management page appears.
- Highlight Primary Color and press ◀/► to select a color from among Red, Yellow, Green, Cyan, Blue, or Magenta.
- Press ▼ to highlight Hue and press ◄ / ► to select its range. Increase in the range will include colors consisted of more proportions of its two adjacent colors.

Please refer to the illustration to the right for how the colors relate to each other. For example, if you select Red and set its range at 0, only pure red in the projected picture will be selected. Increasing its range will include red close to yellow and red close to magenta.

5. Press ▼ to highlight Saturation and adjust its values to your preference by pressing ◀ /
 ▶ . Every adjustment made will reflect to the image immediately.

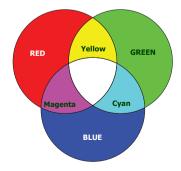

For example, if you select Red and set its value at 0, only the saturation of pure red will be affected.

- Saturation is the amount of that color in a video picture. Lower settings produce less saturated colors; a setting of "0" removes that color from the image entirely. If the saturation is too high, that color will be overpowering and unrealistic.
 - Press ▼ to highlight Gain and adjust its values to your preference by pressing ◄/
 The contrast level of the primary color you select will be affected. Every adjustment made will reflect to the image immediately.
 - 7. Repeat steps 3 to 6 for other color adjustments.
 - 8. Make sure you have made all of the desired adjustments.
 - 9. Press **BACK** to exit and save the settings.

Resetting current or all picture modes

- I. Go to the PICTURE menu and highlight Reset Picture Settings.
- 2. Press **OK** and press **△**/**▼** to select **Current** or **All**.
 - Current: returns current picture mode to the factory preset settings.
 - All: returns all picture modes to the factory preset settings.

Setting the presentation timer

Presentation timer can indicate the presentation time on the screen to help you achieve better time management when giving presentations. Follow these steps to utilize this function:

- Go to the SYSTEM SETUP: Basic > Presentation Timer menu and press OK to display the Presentation Timer page.
- Highlight Timer Period and decide the time period by pressing ◀/▶. The length
 of time can be set from 1 to 5 minutes in 1-minute increments and 5 to 240 minutes
 in 5-minute increments.
- If the timer is already on, the timer will restart whenever the Timer Period is reset.
 - 3. Press ▼ to highlight **Timer Display** and choose if you want the timer to show up on the screen by pressing ◀/▶.

Selection	Description	
Always	Displays the timer on screen throughout the presentation time.	
3 min/2 min/1 min	Displays the timer on screen in the last 3/2/1 minute(s).	
Never	Hides the timer throughout the presentation time.	

Press ▼ to highlight Timer Position and set the timer position by pressing ◀/▶.

 Press ▼ to highlight Timer Counting Direction and select your desired counting direction by pressing ◀/▶.

Selection	Description
Count Up	Increases from 0 to the preset time.
Count Down	Decreases from the preset time to 0.

 Press ▼ to highlight Sound Reminder and decide if you want to activate sound reminder by pressing ◀ /▶. If you select On, a double beep sound will be heard at

- the last 30 seconds of counting down/up, and a triple beep sound will be produced when the timer is up.
- To activate the presentation timer, press ▼ and press ◄/► to highlight On and press OK.
- A confirmation message appears. Highlight Yes and press OK on the projector or remote control to confirm. You will see the message "Timer is On" displaying on the screen. The timer starts counting when the timer is on.

To cancel the timer, perform the following steps:

- Go to the SYSTEM SETUP: Basic > Presentation Timer menu and highlight Off. Press OK. A confirmation message appears.
- Highlight Yes and press OK to confirm. You will see the message "Timer is Off" displaying on the screen.

Remote paging operations

Connect the projector to your PC or notebook with a USB cable prior to using the paging function. See "Connection" on page 17 for details.

You can operate your display software program (on a connected PC) which responds to page up/down commands (like Microsoft PowerPoint) by pressing **PAGE +/PAGE -** on the remote control.

If remote paging function doesn't work, check if the USB connection is correctly made and the mouse driver on your computer is updated to the latest version.

The remote paging function cannot work with Microsoft® Windows®98 operating system. Windows®XP or higher operating systems are recommended.

Freezing the image

Press **FREEZE** on the remote control to freeze the image. The word "**FREEZE**" will display in the upper left corner of the screen. To release the function, press any key on the projector or remote control.

Even if an image is frozen on the screen, the pictures are running on the video or other device. If the connected devices have active audio output, you will still hear the audio even though the image is frozen onscreen.

Hiding the image

In order to draw the audience's full attention to the presenter, you press **ECO BLANK** to hide the screen image. When this function is activated with an audio input connected, the audio can still be heard.

You can set the blank time in the **SYSTEM SETUP:** Basic > Operation Settings > Blank Timer menu to let the projector return the image automatically after a period of time when there is no action taken on the blank screen.

If the preset time spans are not suitable for your presentation, select **Disable**.

No matter **Blank Timer** is activated or not, you can press most of the keys on the projector or remote control to restore the picture.

Do not block the projection lens from projecting as this could cause the blocking object to become heated and deformed or even cause a fire.

Locking control keys

With the control keys on the projector locked, you can prevent your projector settings from being changed accidentally (by children, for example). When the **Panel Key Lock** is on, no control keys on the projector will operate except (b) **POWER**.

- Go to the SYSTEM SETUP: Basic > Panel Key Lock menu, and select On by pressing ◀/▶ on the projector or remote control. A confirmation message appears.
- 2. Highlight **Yes** and press **OK** to confirm.

To release panel key lock, use the remote control to enter the **SYSTEM SETUP: Basic** > **Panel Key Lock** menu and press ◀/▶ to select **Off**.

- Keys on the remote control are still active when panel key lock is enabled.
- If you turn off the projector without disabling panel key lock, the projector will still be in locked status the next time it is turned on.

Operating in a high altitude environment

We recommend you use the **High Altitude Mode** when your environment is between 1500 m –3000 m above sea level, and ambient temperature is between 0°C–30°C.

Do not use the **High Altitude Mode** if your altitude is between 0 m and 1500 m and ambient temperature is between 0°C and 35°C. The projector will be over cooled, if you turn the mode on under such a condition.

To activate the **High Altitude Mode**:

- Press MENU and then press ◀/▶ until the SYSTEM SETUP: Advanced menu is highlighted.
- Press ▼ to highlight High Altitude Mode and press ▼ / ► select On. A confirmation message appears.
- Highlight Yes and press OK.

Operation under "**High Altitude Mode**" may cause a higher decibel operating noise level because of increased fan speed necessary to improve overall system cooling and performance.

If you use this projector under other extreme conditions excluding the above, it may display auto shut-down symptoms, which is designed to protect your projector from overheating. In cases like this, you should switch to High Altitude mode to solve these symptoms. However, this is not to state that this projector can operate under any and all harsh or extreme conditions.

Adjusting the sound

The sound adjustments made as below will have an effect on the projector speaker(s). Be sure you have made a correct connection to the projector audio input. See "Connection" on page 17 for how the audio input is connected.

Muting the sound

To temporarily turn off the sound, press (), or:

- Press MENU and then press ◀/▶ until the SYSTEM SETUP: Advanced menu is highlighted.
- Press ▼ to highlight Audio Settings and press OK. The Audio Settings page appears.
- 3. Highlight **Mute** and press **◄/▶** to select **On**.

Adjusting the sound level

To adjust the sound level, press 1 / 1), or:

- I. Repeat steps I-2 above.
- 2. Press ▼ to highlight **Volume** and press ◀/▶ to select a desired sound level.

Turning off the **Power On/Off Ring Tone**

To turn off the ring tone:


- Repeat steps 1-2 above.
- 2. Press ▼ to highlight Power On/Off Ring Tone and press ◄/▶ to select Off.
- The only way to change **Power On/Off Ring Tone** is setting On or Off here. Setting the sound mute or changing the sound level will not affect the **Power On/Off Ring Tone**.

Using the test pattern

The projector is able to display the grid test pattern. It helps you adjust the image size and focus and check that the projected image is free from distortion.

To display the test pattern, do one of the following steps:

- Press QUICK INSTALL on the remote control. Press ▼ to highlight Test Pattern and press OK. Press ◄/▶ to select On.

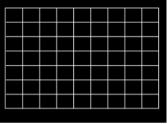

Using the teaching templates


The projector provides several preset patterns for various teaching purposes. To activate the pattern:

- Open the OSD menu and go to the DISPLAY > Teaching Template and press
 ▲/ ▼ to select Blackboard or Whiteboard.
- 2. Press **◄**/**▶** to choose the pattern you need.
- 3. Press **OK** to activate the pattern.

Teaching Template	Whiteboard	Blackboard
Letter Formation		
Worksheet		
Coordinate Chart		

Shutting down the projector

 - 1. Press **(b) POWER** and a confirmation message will display prompting you. If you don't respond in a few seconds, the message will disappear.
- Press POWER a second time. The POWER indicator light flashes orange, the projection lamp shuts down, and the fans will continue to run for approximately 90 seconds to cool down the projector.
- 1 To protect the lamp, the projector will not respond to any commands during the cooling process.
 - Once the cooling process finishes, a "Power Off Ring Tone" will be heard. The POWER indicator light is a steady orange and fans stop. Disconnect the power cord from the power outlet.
- To turn off the power ring tone, see "Turning off the Power On/Off Ring Tone" on page 37 for details.
- If the projector is not properly shut down, to protect the lamp, when you attempt to re-start the projector, the fans will run for a few minutes to cool down. Press (b) POWER again to start the projector after the fans stop and the POWER indicator light turns orange.
- Lamp life results will vary depending on environmental conditions and usage.



Direct power off

The AC power cord can be pulled out right after the projector is turned off. To protect the lamp, wait about 10 minutes before re-starting the projector. (When you attempt to re-start the projector, the fans may run for a few minutes to cool down. In such cases, press **DOWER** again to start the projector after the fans stop and the **POWER** indicator light turns orange.)

Menu operation

Menu system

Please note that the on-screen display (OSD) menus vary according to the signal type selected and the projector model you are using.

Main menu	Sub-menu		Options
	Wall Color		Off/Light Yellow/Pink/Light Green/Blue/
	Wall Color		Blackboard
	Aspect Ratio		Auto/Real/4:3/16:9/16:10
	Auto Keystone		On/Off
	Keystone		
	Corner Fit		_
	Position		
	Phase		
	H. Size		
1.	Digital Zoom		
DISPLAY		3D Mode	Auto/Top Bottom/Frame Sequential/ Frame Packing/Side by Side/Off
		3D Sync Invert	Disable/Invert
	3D	Save 3D Settings	3D Settings 1/3D Settings 2/ 3D Settings 3
		Apply 3D	3D Settings 1/3D Settings 2/
		Settings	3D Settings 3/Off
	Teaching	Blackboard	Off/Letter Formation/Worksheet/ Coordinate Chart
	Template	Whiteboard	Off/Letter Formation/Worksheet/ Coordinate Chart
	Picture Mode	Bright/Presentation	n/sRGB/Cinema/(3D)/User I/User 2
	Reference Mode	Bright/Presentation	n/sRGB/Cinema/(3D)
	Brightness		
	Contrast		
	Color		
	Tint		
	Sharpness		
2.	Brilliant Color		On/Off
PICTURE	Color Temperature		Cool/Normal/Warm
	Color Temperature Fine Tuning		R Gain/G Gain/B Gain/R Offset/ G Offset/B Offset
		Primary Color	R/G/B/C/M/Y
	3D Color	Hue	
	Management	Saturation	
		Gain	
	Reset Picture Se	ettings	Current/All/Cancel
3.	Quick Auto Sear	rch	On/Off
SOURCE	Color Space Cor	nversion	Auto/RGB/YUV

Main menu	Sub-menu		Options
		Timer Period	I~240 minutes
		Timer Display	Always/3 min/2 min/1 min/Never
		Timer Position	Top-Left/Bottom-Left/Top-Right/
	Presentation	i imer Position	Bottom-Right
	Timer	Timer Counting Direction	Count Down/Count Up
		Sound Reminder	On/Off
		On/Off	
	Language		English/Français/Deutsch Italiano/Español/Русский 繁體中文/简体中文/日本語/한국어/ Svenska/Nederlands/Türkçe/ Čeština/Português/ Ἰпи/Polski Magyar/Hrvatski/Română/ Norsk/Dansk/Български/Suomi/ Indonesian/Ελληνικά/العربية/हिन्दी
4.	Projector Installation		Front Table/Rear Table/Rear Ceiling/Front Ceiling
SYSTEM SETUP:	Menu Settings	Menu Display Time	5 sec/10 sec/20 sec/30 sec/Always
Basic		Menu Position	Center/Top-Left/Top-Right/
			Bottom-Right/Bottom-Left
		Reminder Message	On/Off
		Direct Power On	On/Off
		Signal Power On	On/Off
		Auto Power Off	Disable/3 min/10 min/15 min/ 20 min/25 min/30 min
	Operation Settings	Instant Restart	On/Off
	Settings	Blank Timer	Disable/5 min/10 min/15 min/ 20 min/25 min/30 min
		Sleep Timer	Disable/30 min/1 hr/2 hr/3 hr/4 hr/ 8 hr/12 hr
	Remote Receiver		
	Remote Receive	er	Front+Top/Front/Top
	Remote Receive Panel Key Lock	er	On/Off

Main menu	Sub-menu		Options
	High Altitude Mode		On/Off
		Mute	On/Off
	Adia Ca44in	Volume	
	Audio Settings	Power On/Off Ring Tone	On/Off
	Lawn Sattings	Lamp Mode	Normal/Economic/SmartEco/ LampSave
	Lamp Settings	Reset Lamp Time	er
_		Lamp Timer	
5.	Security	Change Password	
SYSTEM SETUP:	Settings	Change Security Settings	Power On Lock
Advanced	Baud Rate	2400/4800/9600/14400/19200/	
	Baud Rate		38400/57600/115200
	Test Pattern		On/Off
	Closed Caption	Closed Caption Enable	On/Off
		Caption Version	CCI/CC2/CC3/CC4
	Standby Settings	Monitor Out	On/Off
		Audio Pass	Off/Audio in/Audio L/R/HDMI-I/
	Jettings	Through	HDMI-2
	Reset All Setting	gs	Reset/Cancel
6. INFORMATION	Current System	Status	Source Picture Mode Lamp Mode Resolution JD Format Color System Lamp Usage Time Firmware Version

Note that the menu items are available when the projector detects at least one valid signal. If there is no equipment connected to the projector or no signal detected, limited menu items are accessible.

Description of each menu

	Function	Description	
	Wall Color	Corrects the projected picture's color when the projection surface is not white. See "Using Wall Color" on page 31 for details.	
	Aspect Ratio	There are several options to set the image's aspect ratio depending on your input signal source. See "Selecting the aspect ratio" on page 29 for details.	
	Auto Keystone	Corrects any keystoning of the image. See "Correcting keystone" on page 23 for details.	
	Keystone	page 25 for details.	
-	Corner Fit	See "Adjusting Corner Fit" on page 23 for details.	
DISPLAY menu	Position	Displays the position adjustment page. To move the projected image, use the directional arrow keys. The values shown on the lower position of the page change with every key press you made until they reach their maximum or minimum. This function is only available when a PC signal (analog RGB) is selected.	
nu	Phase	Adjusts the clock phase to reduce image distortion. This function is only available when a PC signal (analog RGB) is selected.	
	H. Size	Adjusts the horizontal width of the image. This function is only available when a PC signal (analog RGB) is selected.	
	Digital Zoom	Magnifies or reduces the projected image. See "Magnifying and searching for details" on page 29 for details.	

	Function	Description
		This projector features a 3D function which enables you to enjoy the 3D movies, videos, and sporting events in a more realistic way by presenting the depth of the images. You need to wear a pair of 3D glasses to view the 3D images.
		3D Mode
		The default setting is Auto and the projector automatically chooses an appropriate 3D format when detecting 3D contents. If the projector cannot recognize the 3D format, press ▲/▼ to choose a 3D mode.
		When the 3D function is on:
-		The brightness level of the projected image will decrease.
₫		The Picture Mode cannot be adjusted.
I. DISPLAY menu	3D	3D Sync Invert When you discover the inversion of the image depth, enable this function to correct the problem.
menu		Save 3D Settings When you have successfully displayed the 3D contents after making the appropriate adjustments, you can enable this function and choose a set of 3D settings to memorize current 3D settings.
		Apply 3D Settings After the 3D settings are saved, you can decide if you would like to apply them by choosing a set of 3D settings that you have saved. Once applied, the projector will automatically play the incoming 3D contents if it matches the 3D settings saved.
		Only the set(s) of 3D settings with memorized data is available.
	Teaching Template	See "Using the teaching templates" on page 38 for details.

	Function	Description
	Picture Mode	Pre-defined picture modes are provided so you can optimize your projector image set-up to suit your program type. See "Selecting a picture mode" on page 31 for details.
	Reference Mode	Selects a picture mode that best suits your need for the image quality and further fine-tune the image based on the selections listed on the same page below. See "Setting the User 1/User 2 mode" on page 31 for details.
	Brightness	Adjusts the brightness of the image. See "Adjusting Brightness" on page 32 for details.
	Contrast	Adjusts the degree of difference between dark and light in the image. See "Adjusting Contrast" on page 32 for details.
	Color	Adjusts the color saturation level the amount of each color in a video image. See "Adjusting Color" on page 32 for details.
2		This function is only available when a Video, S-Video or Component Video signal is selected.
2. PICTURE menu	Tint	Adjusts the red and green color tones of the image. See "Adjusting Tint" on page 32 for details.
Ę		This function is only available when a Video or S-Video signal is selected and the system format is NTSC.
Æ m	Sharpness	Adjusts the image to make it look sharper or softer. See "Adjusting Sharpness" on page 32 for details.
enu		This function is only available when a Video, S-Video or Component Video signal is selected.
	Brilliant Color	See "Adjusting Brilliant Color" on page 32 for details.
	Color Temperature	See "Selecting a Color Temperature" on page 32 for details.
	Color Temperature Fine Tuning	See "Setting a preferred color temperature" on page 32 for details.
	3D Color Management	See "3D Color Management" on page 33 for details.
	Reset Picture Settings	See "Resetting current or all picture modes" on page 34 for details.
3. SC	Quick Auto Search	See "Switching input signal" on page 28 for details.
3. SOURCE menu	Color Space Conversion	See "Switching input signal" on page 28 for details.

	Function	Description
	Presentation Timer	Reminds the presenter to finish the presentation within a certain time frame. See "Setting the presentation timer" on page 34 for details.
	Language	Sets the language for the On-Screen Display (OSD) menus. See "Using the menus" on page 25 for details.
	Projector Installation	The projector can be installed on a ceiling or behind a screen, or with one or more mirrors. See "Choosing a location" on page 14 for details.
.4	Menu Settings	Menu Display Time Sets the length of time the OSD will remain active after your last key press. Menu Position Sets the On-Screen Display (OSD) menu position.
SYSTE		Reminder Message Sets the reminder messages on or off.
EM SET	Operation Settings	Direct Power On Allows the projector to turn on automatically once the power is fed through the power cord.
4. SYSTEM SETUP: Basic menu		Signal Power On Sets whether to turn the projector directly on without pressing POWER or ON when the projector is in standby mode and the signal is feed through the VGA cable.
c menu		Auto Power Off Allows the projector to turn off automatically if no input signal is detected after a set period of time. See "Setting Auto Power Off" on page 51 for details.
		Instant Restart Selecting On enables you to restart the projector immediately within 90 seconds after turning it off.
		Blank Timer Sets the image blank time when the Blank feature is activated, once elapsed the image will return to the screen. See "Hiding the image" on page 35 for details.
		Sleep Timer Sets the auto-shutdown timer.

	Function	Description
4. S	Remote Receiver	Allows you to enable all the remote receivers or one specific remote receiver on the projector.
YSTEM	Panel Key Lock	Disables or enables all panel key functions except (*) POWER on the projector and keys on the remote control. See "Locking control keys" on page 36 for details.
SETU	Background Color	Sets the background color for the projector.
4. SYSTEM SETUP: Basic menu	Splash Screen	Allows you to select which logo screen will display during projector start-up.
5 7	High Altitude Mode	A mode for operation in high altitude areas. See "Operating in a high altitude environment" on page 36 for details.
TSYS	Audio Settings	See "Adjusting the sound" on page 36 for details.
SYSTEM SETUP: Advanced menu	Lamp Settings	Lamp Mode See "Setting the Lamp Mode" on page 51 for details. Reset Lamp Timer See "Resetting the lamp timer" on page 55 for details. Lamp Timer See "Getting to know the lamp hour" on page 51 for details on how the total lamp hour is calculated.
nced m	Security Settings	See "Utilizing the password function" on page 26 for details.
nenu	Baud Rate	Selects a baud rate that is identical with your computer's so that you can connect the projector using a suitable RS-232 cable and update or download the projector's firmware. This function is intended for qualified service personnel.
	Test Pattern	See "Using the test pattern" on page 37 for details.

	Function	Description
	Closed	Closed Caption Enable Activates the function by selecting On when the selected input signal carries closed captions. Captions: An on-screen display of the dialogue, narration, and sound effects of TV programs and videos that are closed captioned
5.	Caption	(usually marked as "CC" in TV listings). Caption Version
SYSTEN		Selects a preferred closed captioning mode. To view captions, select CC1, CC2, CC3, or CC4 (CC1 displays captions in the primary language in your area).
SYSTEM SETUP: Advanced menu		Monitor Out Selecting On enables the function. The projector can output a VGA signal when it is in standby mode and the PC jack is correctly connected to devices. See "Connection" on page 17 for how to make the connection.
	Standby Settings	Audio Pass Through Press ◀/▶ to choose the source that you wish to use in operation mode. See "Connection" on page 17 for how to make the connection. When the corresponding jacks are correctly connected to the device, the projector can output an audio signal to the external speaker when it is in standby mode. The built-in speaker(s) will be muted in standby mode. Enabling this function slightly increases the standby power consumption.
	Reset All Settings	Returns all settings to the factory preset values. The following settings will still remain: Keystone, User I, User 2, Reference Mode, 3D Color Management, Reset Picture Settings, Projector Installation, Language, High Altitude Mode, Security Settings, Baud Rate, Corner Fit, Lamp Timer.

	Function	Description
6.		Source Shows the current signal source.
	Current System Status	Picture Mode Shows the selected mode in the PICTURE menu.
N F O		Lamp Mode Shows the current lamp mode.
INFORMATION menu		Resolution Shows the native resolution of the input signal.
		3D Format Shows the current 3D mode.
		Color System Shows input system format.
		Lamp Usage Time Displays the number of hours the lamp has been used.
		Firmware Version Shows the firmware version of your projector.

Maintenance

Care of the projector

Your projector needs little maintenance. The only thing you need to do on a regular basis is to keep the lens and case clean.

Never remove any parts of the projector. Contact your dealer if other parts need replacing.

Cleaning the lens

Clean the lens whenever you notice dirt or dust on the surface. Please be sure to turn off the projector and let it cool down completely before cleaning the lens.

- · Use a canister of compressed air to remove dust.
- If there is dirt or smears, use lens-cleaning paper or moisten a soft cloth with lens cleaner and gently wipe the lens surface.
- Never use any type of abrasive pad, alkaline/acid cleaner, scouring powder, or volatile solvent, such as alcohol, benzene, thinner or insecticide. Using such materials or maintaining prolonged contact with rubber or vinyl materials may result in damage to the projector surface and cabinet material.

Cleaning the projector case

Before you clean the case, turn the projector off using the proper shutdown procedure as described in "Shutting down the projector" on page 39 and unplug the power cord.

- To remove dirt or dust, wipe the case with a soft, lint-free cloth.
- To remove stubborn dirt or stains, moisten a soft cloth with water and a neutral pH detergent. Then wipe the case.



Storing the projector

If you need to store the projector for an extended time, please follow the instructions below:

- Make sure the temperature and humidity of the storage area are within the recommended range for the projector. Please refer to "Specifications" on page 58 or consult your dealer about the range.
- · Retract the adjuster feet.
- Remove the battery from the remote control.
- Pack the projector in its original packing or equivalent.

Transporting the projector

It is recommended that you ship the projector with its original packing or equivalent.

Lamp information

Getting to know the lamp hour

When the projector is in operation, the duration (in hours) of lamp usage is automatically calculated by the built-in timer. The method of calculating the equivalent lamp hour is as follows:

Lamp Usage Time = (hours used in **Normal** mode) + (hours used in **Economic** mode) + (hours used in **SmartEco** mode) + (hours used in **LampSave** mode)

Total (equivalent) lamp hour = $2.50 \times$ (hours used in **Normal** mode) + $1.875 \times$ (hours used in **Economic** mode) + $1.25 \times$ (hours used in **SmartEco** mode) + $1.00 \times$ (hours used in **LampSave** mode).

To obtain the lamp hour information:

- Press MENU and then press ◀/▶ to highlight the SYSTEM SETUP: Advanced menu.
- Press ▼ to highlight Lamp Settings and press OK. The Lamp Settings page appears.
- 3. You will see the **Lamp Timer** information displaying on the menu.
- 4. To leave the menu, press **MENU**.

You can also get the lamp hour information on the **INFORMATION** menu.

Extending lamp life

The projector lamp is a consumable item. To keep the lamp life as long as possible, you can do the following settings via the OSD menu.

Setting the Lamp Mode

Setting the projector in **Economic**, **SmartEco** or **LampSave** mode extends the lamp operation life. To do so, go to the **SYSTEM SETUP**: **Advanced** > **Lamp Settings** > **Lamp Mode** menu and press **◄/►**.

Lamp mode	Description
Normal	Provides full lamp brightness
Economic	Lowers brightness to extend the lamp life and decreases the fan noise
SmartEco	Adjusts the lamp power automatically depending on the content brightness level
LampSave	Adjusts the lamp power automatically and lowers the brightness to extend the lamp life

Setting Auto Power Off

This function allows the projector to turn off automatically if no input signal is detected after a set period of time to prevent unnecessary waste of lamp life.

To set **Auto Power Off**, go into the **SYSTEM SETUP: Basic** > **Operation Settings** > **Auto Power Off** menu and press **◄**/**▶**. If the preset time lengths are not suitable for your presentation, select **Disable**. The projector will not automatically shut down in a certain time period.


Timing of replacing the lamp

When the **Lamp indicator** lights up red or a message appears suggesting it is time to replace the lamp, please consult your dealer or go to http://www.BenQ.com before installing a new lamp. An old lamp may cause a malfunction in the projector and in some instances the lamp may explode.



/!\ The **LAMP indicator light** and **TEMPerature warning light** will light up if the lamp becomes too hot. Turn the power off and let the projector cool for 45 minutes. If the Lamp or Temp indicator still lights up after turning the power back on, please contact your dealer. See "Indicators" on page 56 for details.

The following Lamp warning displays will remind you to change the lamp.

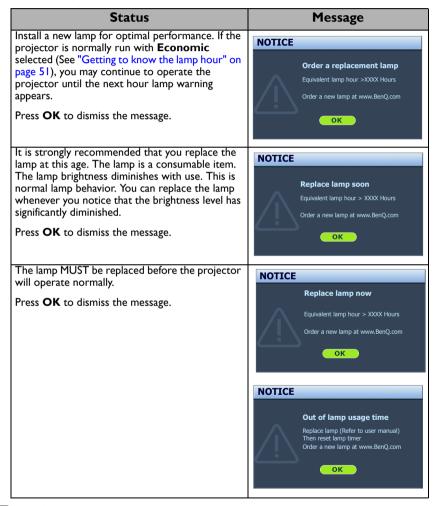


TXXXX" shown in the above messages are numbers that vary depending on different models.

Replacing the lamp

/ WARNING:

 - To reduce the risk of electrical shock, always turn the projector off and disconnect the power cord before changing the lamp.
- To reduce the risk of severe burns, allow the projector to cool for at least 45 minutes before replacing the lamp.
- To reduce the risk of injuries to fingers and damage to internal components, use caution when removing lamp glass that has shattered into sharp pieces.
- To reduce the risk of injuries to fingers and/or compromising image quality by touching the lens, do not
 touch the empty lamp compartment when the lamp is removed.
- This lamp contains mercury. Consult your local hazardous waste regulations to dispose of this lamp in a proper manner.
- To assure optimal performance from the projector, it is recommended that you purchase a qualified projector lamp for lamp replacement.
- If lamp replacement is performed while the projector is suspended upside-down from the ceiling, make sure that no one is underneath the lamp socket to avoid any possible injury or damage to the human eyes caused by fractured lamp.
- Ensure good ventilation when handling broken lamps. We recommend that you use respirators, safety
 glasses, goggles or face shield and wear protective clothing such as gloves.
- Turn the power off and disconnect the projector from the power outlet. If the lamp is hot, avoid burns by waiting for approximately 45 minutes until the lamp has cooled.
- Loosen the screw(s) that secure the lamp cover on the side of the projector until the lamp cover loosens.




3. Remove the lamp cover from the projector.





WARNING:

 - Do not turn the power on with the lamp cover removed.
- Do not insert your fingers between the lamp and the projector. The sharp edges inside the projector may cause injuries.



  - 5. Loosen the screw that secures the lamp.
- 6. Lift the handle so that it stands up.







Use the handle to slowly pull the lamp out of the projector.

WARNING:

  - Pulling it too quickly may cause the lamp to break and scatter broken glass in the projector.
- Do not place the lamp in locations where water might splash on it, children can reach it, or near flammable materials.
- Do not insert your hands into the projector after the lamp is removed. If you touch the optical components inside, it could cause color unevenness and distortion of the projected images.
- As shown in the figure, lower the new lamp.







- Insert the lamp connector.
- Tighten the screw that secures the lamp.
- 11. Ensure the handle is fully laid flat and locked in place.



  - Loose screw may cause a bad connection, which could result in malfunction.
- Do not over tighten the screw.
- Replace the lamp cover on the projector.






13. Tighten the screw(s) that secure the lamp cover.

/į\ WARNING:

 - Loose screw may cause a bad connection, which could result in malfunction.
- Do not over tighten the screw.



- Connect the power and restart the projector.
- Do not turn the power on with the lamp cover removed.

Resetting the lamp timer

15. After the startup logo, open the On-Screen Display (OSD) menu. Go to the SYSTEM SETUP: Advanced > Lamp Settings menu. Press OK. The Lamp Settings page displays. Highlight Reset Lamp Timer. A warning message displays asking if you want to reset the lamp timer. Highlight Reset and press OK. The lamp time will be reset to "0".

Do not reset if the lamp is not new or replaced as this could cause damage.

Indicators

Light			Status & Description
POWER	TEMP	LAMP	
		Pow	ver events
Orange	Off	Off	Stand-by mode
Green Flashing	Off	Off	Powering up
Green	Off	Off	Normal operation
Orange Flashing	Off	Off	Normal power-down cooling
Red Flashing	Red Flashing	Red Flashing	Download
Green	Off	Red	CW start fail
Red Flashing	Off	Off	Scaler shutdown fail (data abort)
Red	Off	Red	Scaler reset fail (video projector only)
Green	Off	Off	Burn-in ON
Green	Green	Green	Burn-in OFF
		Lan	np events
Off	Off	Red	Lamp1 error in normal operation
Off	Off	Orange Flashing	Lamp is not lit up
Green	Off	Orange	Lamp life exhausted
Off	Green	Red	Lamp door is open
		Ther	mal events
Red	Red	Off	Fan I error (the actual fan speed is outside the desired speed)
Red	Red Flashing	Off	Fan 2 error (the actual fan speed is outside the desired speed)
Red	Green	Off	Fan 3 error (the actual fan speed is outside the desired speed)
Red	Green Flashing	Off Fan 4 error (the actual fan speed is outside t desired speed)	
Green	Red	Off	Temperature I error (over limited temperature)

Troubleshooting

? The projector does not turn on.

Cause	Remedy	
There is no power from the power cord.	Plug the power cord into the AC power jack on the projector, and plug the power cord into the power outlet. If the power outlet has a switch, make sure that it is switched on.	
Attempting to turn the projector on again during the cooling process.	Wait until the cooling down process has completed.	

? No picture

Cause	Remedy
The video source is not turned on or connected correctly.	Turn the video source on and check that the signal cable is connected correctly.
The projector is not correctly connected to the input signal device.	Check the connection.
The input signal has not been correctly	Select the correct input signal with the SOURCE
selected.	key on the projector or remote control.
The lens cover is still closed.	Open the lens cover.

? Blurred image

Cause	Remedy	
The projection lens is not correctly focused.	Adjust the focus of the lens using the focus ring.	
The projector and the screen are not aligned properly.	Adjust the projection angle and direction as well as the height of the projector if necessary.	
The lens cover is still closed.	Open the lens cover.	

? Remote control does not work

Cause	Remedy	
The battery is out of power.	Replace the battery with new ones.	
There is an obstacle between the remote control and the projector.	Remove the obstacle.	
You are too far away from the projector.	Stand within 8 meters (26 feet) of the projector.	

? The password is incorrect

Cause	Remedy		
You do not remember the password.	Please see "Entering the password recall procedure" on page 27 for details.		

Specifications

Projector specifications

All specifications are subject to change without notice.

Optical

Resolution

1920 x 1200 WUXGA

Display system

1-CHIP DMD

I ens

 $F = 2.59 \sim 2.87$, $f = 16.88 \sim 21.88$ mm

Clear focus range

1.49-4.47 m @ Wide,

1.94-5.81 m @ Tele

Lamp

240 W lamp

Electrical

Power supply

AC100-240V, 3.5 A, 50-60 Hz (Automatic)

Power consumption

370 W (Max); < 0.5 W (Standby)

Mechanical

Weight

3.3 Kg (7.3 lbs)

Output terminals

RGB output

D-Sub 15-pin (female) x 1

Speaker

2 watt x 1

Audio signal output

Audio jack x 1

USB Type-A 5V/1.5A x 1 (for power supply only) Operating altitude

Control

RS-232 serial control

9 pin x 1

IR receiver x 2

USB Mini-B x 1

Input terminals

Computer input

RGB input

D-Sub 15-pin (female) x 1

Video signal input

S-VIDEO

Mini DIN 4-pin port x 1

VIDEO

RCA jack x 1

SD/HDTV signal input

Analog - Component RCA jack x 3

(through RGB input)

Digital - HDMI x 1; HDMI/MHL x 1

Audio signal input

Audio in

PC audio jack x 1

RCA audio jack (L/R) x 1

Environmental Requirements

Operating temperature

0°C-40°C at sea level

Storage temperature -20°C-60°C at sea level

Operating/Storage relative humidity

10%–90% (without condensation)


0-1499 m at 0°C-35°C

1500-3000 m at 0°C-30°C (with


High Altitude Mode on)

Dimensions

331 mm (W) x 114.4 mm (H) x 246.2 mm (D)

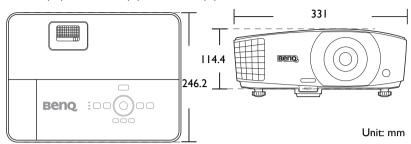

Ceiling mount installation

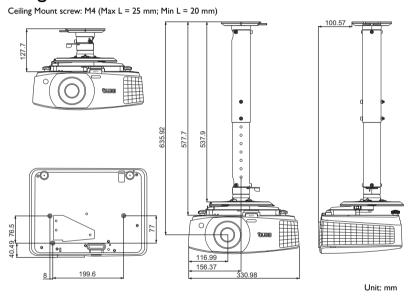

Timing chart

Supported timing for PC input

		Vertical	Horizontal	Pixel
Resolution	Mode	Frequency	Frequency	Frequency
110001441011	11000	(Hz)	(kHz)	(MHz)
	VGA_60*	59.940	31.469	25.175
	VGA_00	72.809	37.861	31.500
640 x 480	VGA_75	75.000	37.500	31.500
	VGA 85	85.008	43.269	36.000
720 x 400	720 x 400_70	70.087	31.469	28.3221
720 X 400	SVGA_60*	60.317	37.879	40.000
	SVGA_00	72.188	48.077	50.000
	SVGA_72 SVGA 75	75.000	46.875	49.500
800 x 600	SVGA_75 SVGA 85	85.061	53.674	56.250
	SVGA_65 SVGA 120**	05.001	55.074	30.230
	(Reduce Blanking)	119.854	77.425	83.000
	XGA_60*	60.004	48.363	65.000
	XGA_70	70.069	56.476	75.000
1024 x 768	XGA_75	75.029	60.023	78.750
1024 X 700	XGA_85	84.997	68.667	94.500
	XGA_120** (Reduce Blanking)	119.989	97.551	115.5
1152 x 864	1152 x 864 75	75	67.5	108
1001	BenQ		0= 000	10.000
1024 x 576	Notebook timing	60.0	35.820	46.966
1001 000	BenQ	24.00=		
1024 x 600	Notebook timing	64.995	41.467	51.419
1280 x 720	1280 x 720 60*	60	45.000	74.250
1280 x 768	1280 x 768 60*	59.87	47.776	79.5
	WXGA 60*	59.810	49.702	83.500
	WXGA_75	74.934	62.795	106.500
1280 x 800	WXGA_85	84.880	71.554	122.500
	WXGA_120** (Reduce Blanking)	119.909	101.563	146.25
	SXGA_60***	60.020	63.981	108.000
1280 x 1024	SXGA 75	75.025	79.976	135.000
	SXGA 85	85.024	91.146	157.500
	1280 x 960_60***	60.000	60.000	108.000
1280 x 960	1280 x 960 85	85.002	85.938	148.500
1360 x 768	1360 x 768 60***	60.015	47.712	85.5
1440 x 900	WXGA+_60***	59.887	55.935	106.500
1400 x 1050	SXGA+_60***	59.978	65.317	121.750
1600 x 1200	UXGA***	60.000	75.000	162.000
1680 x 1050	1680 x 1050 60***	59.954	65.29	146.25
640 x 480@67Hz	MAC13	66.667	35.000	30.240
832 x 624@75Hz	MAC16	74.546	49.722	57.280
1024 x 768@75Hz	MAC19	74.93	60.241	80.000
1152 x 870@75Hz	MAC21	75.060	68.680	100.000
1920 x 1080@60Hz	1920 x 1080 60	60	67.5	148.5
1920 x 1200@60Hz	1920 x 1200_60 (Reduce blanking)	59.95	74.038	154
L	(1 toddoo blariitii 19)	D	16:11 6:1	L

^{*}Supported timing for 3D signal in Frame Sequential, Top Bottom and Side by Side formats.

Supported timing for HDMI (HDCP) input

		Vertical	Horizontal	Pixel	
Resolution	Mode	Frequency	Frequency	Frequency	
		(Hz)	(kHz)	(MHz)	
	VGA_60*	59.940	31.469	25.175	
640 x 480	VGA_72	72.809	37.861	31.500	
040 X 400	VGA_75	75.000	37.500	31.500	
	VGA_85	85.008	43.269	36.000	
720 x 400	720 x 400_70	70.087	31.469	28.3221	
	SVGA_60*	60.317	37.879	40.000	
	SVGA_72	72.188	48.077	50.000	
800 x 600	SVGA_75	75.000	46.875	49.500	
000 X 000	SVGA_85	85.061	53.674	56.250	
	SVGA_120**	119.854	77.425	83.000	
	(Reduce Blanking)	119.004	11.425	03.000	
	XGA_60*	60.004	48.363	65.000	
	XGA_70	70.069	56.476	75.000	
1024 x 768	XGA_75	75.029	60.023	78.750	
1024 X 700	XGA_85	84.997	68.667	94.500	
	XGA_120**	119.989	97.551	115.5	
	(Reduce Blanking)	119.909	97.551	115.5	
1152 x 864	1152 x 864_75	75	67.5	108	
1024 x 576@60Hz	BenQ Notebook Timing	60.00	35.820	46.996	
1024 x 600@65Hz	BenQ Notebook Timing	64.995	41.467	51.419	
1280 x 720	1280 x 720_60*	60	45.000	74.250	
1280 x 768	1280 x 768_60*	59.870	47.776	79.5	
	WXGA_60*	59.810	49.702	83.500	
	WXGA_75	74.934	62.795	106.500	
1280 x 800	WXGA_85	84.880	71.554	122.500	
	WXGA_120**	119.909	101.563	146.25	
	(Reduce Blanking)				
	SXGA_60***	60.020	63.981	108.000	
1280 x 1024	SXGA_75	75.025	79.976	135.000	
	SXGA_85	85.024	91.146	157.500	
1280 x 960	1280 x 960_60***	60.000	60.000	108	
	1280 x 960_85	85.002	85.938	148.500	
1360 x 768	1360 x 768_60***	60.015	47.712	85.500	
1440 x 900	WXGA+_60***	59.887	55.935	106.500	
1400 x 1050	SXGA+_60***	59.978	65.317	121.750	
1600 x 1200	UXGA***	60.000	75.000	162.000	
1680 x 1050	1680 x 1050_60***	59.954	65.290	146.250	
640 x 480@67Hz	MAC13	66.667	35.000	30.240	
832 x 624@75Hz	MAC16	74.546	49.722	57.280	
1024 x 768@75Hz	MAC19	74.93	60.241	80.000	
1152 x 870@75Hz	MAC21	75.06	68.68	100.00	
1920 x 1080@60Hz	1920 x 1080_60	60	67.5	148.5	
1920 x 1200@60Hz	1920 x 1200_60 (Reduce blanking)	59.95	74.038	154	
	3D signal in Frame Sequential. Top Bottom and Side by Side formats				

^{*}Supported timing for 3D signal in Frame Sequential, Top Bottom and Side by Side formats.

^{**}Supported timing for 3D signal in Frame Sequential format.

^{****}Supported timing for 3D signal in **Top Bottom** and **Side by Side** formats.

The timings showing above may not be supported due to EDID file and VGA graphic card limitations. It is possible that some timings cannot be chosen.

The timings showing above may not be supported due to EDID file and VGA graphic card limitations. It is possible that some timings cannot be chosen.

Timina	Resolution	Vertical	Horizontal	Pixel Frequency
Timing		Frequency (Hz)	Frequency (kHz)	(MHz)
480i*	720 x 480	59.94	15.73	27
480p*	720 x 480	59.94	31.47	27
576i	720 x 576	50	15.63	27
576p	720 x 576	50	31.25	27
720/50p**	1280 x 720	50	37.5	74.25
720/60p***	1280 x 720	60	45.00	74.25
1080/50i****	1920 x 1080	50	28.13	74.25
1080/60i****	1920 x 1080	60	33.75	74.25
1080/24P**	1920 x 1080	24	27	74.25
1080/25P	1920 x 1080	25	28.13	74.25
1080/30P	1920 x 1080	30	33.75	74.25
1080/50P****	1920 x 1080	50	56.25	148.5
1080/60P****	1920 x 1080	60	67.5	148.5

^{*}Supported timing for 3D signal in Frame Sequential format.

Supported timing for Component-YPbPr input

Timing	Resolution	Vertical	Horizontal	Pixel Frequency
Tilling	Resolution	Frequency (Hz)	Frequency (kHz)	(MHz)
480i*	720 x 480	59.94	15.73	13.5
480p*	720 x 480	59.94	31.47	27
576i	720 x 576	50	15.63	13.5
576p	720 x 576	50	31.25	27
720/50p	1280 x 720	50	37.5	74.25
720/60p*	1280 x 720	60	45.00	74.25
1080/50i	1920 x 1080	50	28.13	74.25
1080/60i	1920 x 1080	60	33.75	74.25
1080/24P	1920 x 1080	24	27	74.25
1080/25P	1920 x 1080	25	28.13	74.25
1080/30P	1920 x 1080	30	33.75	74.25
1080/50P	1920 x 1080	50	56.25	148.5
1080/60P	1920 x 1080	60	67.5	148.5

^{*}Supported timing for 3D signal in Frame Sequential format.

^{**}Supported timing for 3D signal in Frame Sequential format.

^{****}Supported timing for 3D signal in **Top Bottom** and **Side by Side** formats.

^{**}Supported timing for 3D signal in Frame Packing, Top Bottom and Side by Side formats.

^{***}Supported timing for 3D signal in Frame Sequential, Frame Packing, Top Bottom and Side by Side formats.

^{*****}Supported timing for 3D signal in Side by Side format.

^{******}Supported timing for 3D signal in **Top Bottom** and **Side by Side** formats.

^[3] Displaying a 1080i(1125i)@60Hz or 1080i(1125i)@50Hz signal may result in slight image vibration.

Supported timing for Video and S-Video inputs

Video mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Color sub-carrier Frequency (MHz)
NTSC*	15.73	60	3.58
PAL	15.63	50	4.43
SECAM	15.63	50	4.25 or 4.41
PAL-M	15.73	60	3.58
PAL-N	15.63	50	3.58
PAL-60	15.73	60	4.43
NTSC4.43	15.73	60	4.43

^{*}Supported timing for 3D signal in Frame Sequential format.

Warranty and Copyright information

Limited warranty

BenQ warrants this product against any defects in material and workmanship, under normal usage and storage.

Proof of purchase date will be required with any warranty claim. In the event this product is found to be defective within the warranty period, BenQ's only obligation and your exclusive remedy shall be replacement of any defective parts (labor included). To obtain warranty service, immediately notify the dealer from which you purchased the product of any defects.

Important: The above warranty shall be void if the customer fails to operate the product in accordance with BenQ's written instructions, especially the ambient humidity must be inbetween 10% and 90%, temperature in-between 0°C and 35°C, altitude lower than 4920 feet, and avoiding to operate the projector in a dusty environment. This warranty gives you specific legal rights, and you may have other rights which vary from country to country.

For other information, please visit www.BenQ.com.

Copyright

Copyright © 2016 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

*DLP, Digital Micromirror Device and DMD are trademarks of Texas Instruments. Others are copyrights of their respective companies or organizations.

Patents

Please go to http://patmarking.benq.com/ for the details on BenQ projector patent coverage.