

IN2124/IN2126

User's Guide
Mode d'emploi
Benutzeranleitung
Manuale d'uso
Manual de Uso
Guia do Usuário
Gebruikershandleiding

Användarhandbok
Brukerhåndbok
Руководство по пользователю
사용 설명서
用戶指南
Panduan Pengguna
دليل المستخدم



PK739-A000-00
DISPERINDAG No. 0287/1.824.51/09.03

Regulatory models: IN2124, IN2126

InFocus

Bright Ideas Made Brilliant

Declaration of Conformity

Manufacturer: InFocus Corporation, 13190 SW 68th Parkway, Suite 200, Portland, Oregon 97223-8368 USA

We declare under our sole responsibility that this projector conforms to the following directives and norms:

ErP Directive 2009/125/EC

EMC Directive 2004/108/EC

EMC: EN 55022, EN 55024, EN 61000-3-2, EN 61000-3-3

Low Voltage Directive 2006/95/EC

Safety: IEC 60950-1: 2005; EN 60950-1:2006 + A11:2009

Trademarks

Apple, Macintosh, and PowerBook are trademarks or registered trademarks of Apple Computer, Inc. IBM is a trademark or registered trademark of International Business Machines, Inc. Microsoft, PowerPoint, and Windows are trademarks or registered trademarks of Microsoft Corporation. Adobe and Acrobat are trademarks or registered trademarks of Adobe Systems Incorporated. DLP®, DLP Link and the DLP logo are registered trademarks of Texas Instruments and BrilliantColor™ is a trademark of Texas Instruments. InFocus, In Focus, and INFOCUS (stylized) are either registered trademarks or trademarks of InFocus Corporation in the United States and other countries.



NOTE: This product is covered electrical and electronic equipment under the European Union's Waste from Electrical and Electronic Equipment ("WEEE") Directive (2002/96/EC). The WEEE Directive requires that covered equipment be collected and managed separately from typical household waste in all EU member states. Please follow the guidance of your local environmental authority or ask the shop where you purchased the product for collection or recycling options.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by InFocus Corporation may void authority to operate the equipment.

Canada

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Agency Approvals

cULus

Other specific Country Approvals may apply. Please see product certification label.

This document applies to regulatory model IN2124/IN2126.

Input ratings: 100-240Vac, 2.6A, 50-60Hz

InFocus reserves the right to alter product offerings and specifications at any time without notice.



Table of Contents

| | |
|--|----|
| Introduction | 4 |
| Positioning the projector | 6 |
| Connecting a computer source | 7 |
| VGA connection | 7 |
| HDMI connection | 7 |
| Connecting power | 7 |
| Optional computer connections | 7 |
| Displaying an image | 8 |
| Adjusting the image | 9 |
| Connecting a video device | 10 |
| Video device connections | 10 |
| Composite video connection | 10 |
| VGA connection | 10 |
| Component video connection | 10 |
| S-video connection | 10 |
| Shutting down the projector | 11 |
| Troubleshooting your setup | 11 |
| Using the remote control | 19 |
| Using the audio | 20 |
| Using the keypad buttons | 21 |
| Optimizing computer images | 22 |
| Presentation features | 22 |
| Optimizing video images | 23 |
| Customizing the projector | 23 |
| Using the menus | 24 |
| Basic Menu | 25 |
| Advanced Menu | 26 |
| Controlling the projector through a LAN environment | 30 |
| Controlling the projector remotely through a web browser | 31 |
| About Crestron e-Control® | 32 |
| Crestron RoomView | 34 |
| Maintenance | 35 |
| Cleaning the lens | 35 |
| Using the security lock | 35 |
| Replacing the projection lamp | 36 |

Important Operating Considerations for Safety

- Refer to this guide for proper startup and shutdown procedures.
- Follow all warnings and cautions in this manual and on the projector.
- Place the projector in a horizontal position no greater than 15 degrees off axis.
- Locate the projector at least 4' (1.2m) away from any heating or cooling vents.
- Do not block ventilation openings. Locate the projector in a well-ventilated area without obstructions to intake or exhaust vents. Do not place the projector on a tablecloth or other soft covering that may block the vents.
- Do not place the projector in direct sunlight, humid, greasy or dusty places or in places where the projector may come into contact with smoke or steam.
- Do not touch or block the projector lens with any objects as this can damage the projector lens. Scratches, gouges and other lens damage are not covered by the product warranty.
- Do not look directly into the lens while the projector is being used.
- Do not drop the projector.
- Do not spill liquid on the projector. Spilled liquid may damage the projector.
- Use the power cord provided. Connect the power cord to a receptacle with a protective safety (earth) ground terminal. A surge-protected power strip is recommended.
- Do not overload wall outlets.
- When disconnecting the power cord, hold the plug, not the cord.
- Wash hands after handling the cables supplied with this product.
- The projector remote control uses batteries. Make sure the batteries' polarity (+/-) is aligned correctly. Dispose of used batteries in accordance with local disposal laws.
- Use an InFocus approved ceiling mount kit for proper fitting, ventilation and installation. The warranty does not cover any damage caused by use of non-approved ceiling mount kits or by installing in an improper location.
- When the projector is ceiling mounted, wear protective eyewear to prevent eye injury before opening lamp door.

- Refer all service to qualified service personnel. Servicing your own projector can be dangerous to you and will void the warranty.
- Only use replacement parts specified by InFocus. Unauthorized substitutions may result in fire, electrical shock, or injury, and may void the warranty.
- Only genuine InFocus lamps are tested for use in this projector. Use of non InFocus lamps may cause electrical shock and fire, and may void the projector warranty.
- Hg – Lamp contains mercury. Manage in accordance with local disposal laws. See **www.lamprecycle.org**.
- The projector uses a high-pressure mercury glass lamp. The lamp may fail prematurely, or it may rupture with a popping sound if jolted, scratched, or handled while hot. The risk of lamp failure or rupture also increases as the lamp age increases; please replace the lamp when you see the "Replace Lamp" message.
- In the unlikely event of a lamp rupture, particles may exit through the projector vents. Keep people, food, and drinks out of the "keep out" area under and around the projector, as indicated by the "X" areas below.

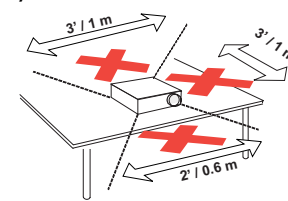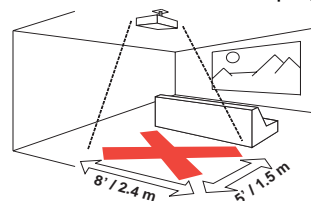

- Follow these instructions to help ensure image quality and lamp life over the life of the projector. Failure to follow these instructions may affect the warranty. For complete details of the warranty, see the Warranty/Safety booklet.

Introduction

Your new digital projector is simple to connect, easy to use, and straightforward to maintain. It is a versatile projector that is flexible enough for business presentations and home video viewing too. IN2124 has native XGA 1024 x 768 resolution, and IN2126 has native WXGA 1280 x 800 resolution. It is compatible with a wide variety of computers and video devices.

Product specifications



To read the latest specifications on your multimedia projector, be sure to visit our website at www.infocus.com, as specifications are subject to change.

Accessories

The standard accessories that came with your projector are listed in the included Quick Start documentation. Optional accessories can be found on our website at www.infocus.com/support or at your retailer or dealer.

Online registration


Register your projector on our website at www.infocus.com/register to activate your warranty and receive product updates, announcements, and registration incentives.

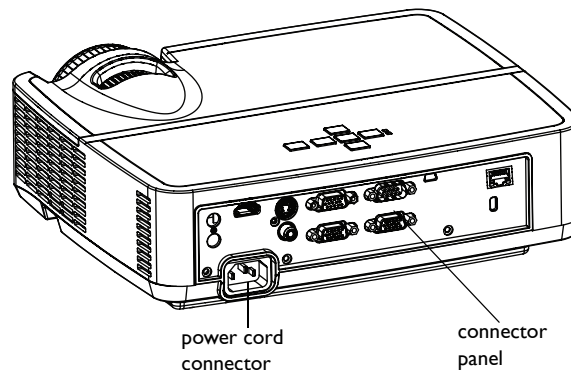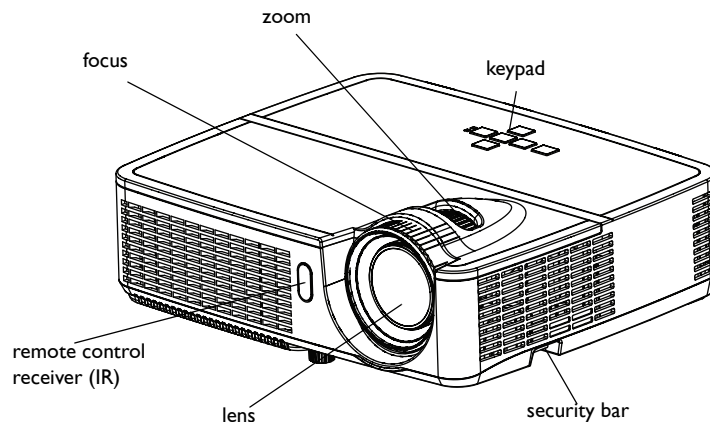

Connector panel

The projector provides both computer and video connection options, including:

- VGA computer
- Composite video
- HDMI
- S-video
- USB mini B connector for firmware upgrades and presentation slide control.
- Monitor out, for VGA pass through to an external monitor.
- Audio input for video and computer.
- Audio output to external speakers.
- RS-232 serial control. Command control codes are on our support website at **www.infocus.com/support**.
- LAN for RJ45 LAN control.

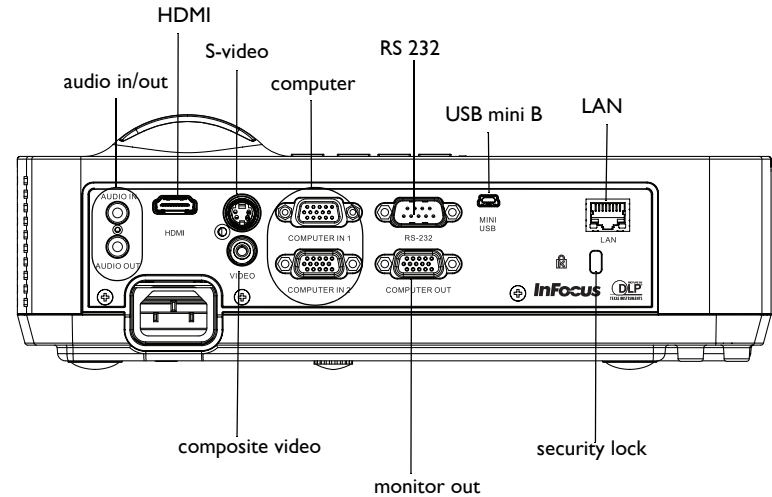

Positioning the projector

To determine where to position the projector, consider the size and shape of your screen, the location of your power outlets, and the distance between the projector and the rest of your equipment. Here are some general guidelines:

- Position the projector on a flat surface at a right angle to the screen. IN2124 must be at least 45.3" (1.2m) from the projection screen, and IN2126 must be at least 55.4" (1.4m) from the projection screen.
- If you are installing the projector on the ceiling, we strongly recommend using InFocus approved ceiling mounts for proper fitting, ventilation and installation. Refer to the installation guide that comes with the InFocus Ceiling Mount Kit (p/n PRJ-MNT-UNIV) for more information. The warranty does not cover any damage caused by use of non-approved ceiling mount kits or by installing in an improper location. To turn the image upside down, see "Ceiling mount" on page 27. We recommend using an InFocus authorized ceiling mount.
- Position the projector the desired distance from the screen. The distance from the lens of the projector to the screen and the video format determine the size of the projected image.
- The image offset is 115% +/-5%. This means that if you have an image 60 inches (1.5 meters) tall from a table-mounted projector, the bottom of the image will be 9 inches (22.9 cm) above the centerline of the lens.

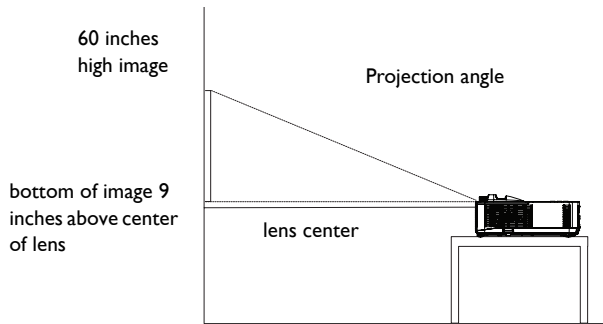


Table 1: IN2124 (XGA) Screen size

| Diagonal Screen Size (inches/m) | Size of the Projected Image Width (inches/m) | Distance to screen | |
|---------------------------------|--|-----------------------------|-----------------------------|
| | | Minimum distance (inches/m) | Maximum distance (inches/m) |
| 30"/0.8m | 24"/0.6m | 45.3"/1.2m | 50.6"/1.3m |
| 60"/1.5m | 48"/1.2m | 92.2"/2.3m | 102.9"/2.6m |
| 80"/2.0m | 64"/1.6m | 123.5"/3.1m | 137.7"/3.5m |
| 100"/2.5m | 80"/2.0m | 154.8"/3.9m | 172.5"/4.4m |
| 150"/3.8m | 120"/3.0m | 233.0"/5.9m | 259.6"/6.6m |

Table 2: IN2126 (WXGA) Screen size

| Diagonal Screen Size (inches/m) | Size of the Projected Image Width (inches/m) | Distance to screen | |
|---------------------------------|--|-----------------------------|-----------------------------|
| | | Minimum distance (inches/m) | Maximum distance (inches/m) |
| 45"/1.1m | 38"/1.0m | 55.4"/1.4m | 69.3"/1.8m |
| 60"/1.5m | 51"/1.3m | 74.5"/1.9m | 92.9"/2.4m |
| 80"/2.0m | 68"/1.7m | 100.0"/2.5m | 124.4"/3.2m |
| 100"/2.5m | 85"/2.2m | 125.5"/3.2m | 155.8"/4.0m |
| 150"/3.8m | 128"/3.2m | 189.2"/4.8m | 234.6"/6.0m |

Connecting a computer source

VGA connection

Connect one end of the provided computer cable to the **Computer in 1/Computer in 2** connector on the projector and the other to the VGA connector on your computer. If you are using a desktop computer, you will need to disconnect the monitor cable from the computer's video port first.

HDMI connection

HDMI is a standard, uncompressed, all-digital audio/video interface. HDMI provides an interface between sources, such as set-top boxes, DVD players, and receivers and your projector. Plug an HDMI cable into the video-out connector on the video device and into the HDMI connector on the projector.

Connecting power

Connect the black power cord to the **Power** connector on the rear of the projector and to your electrical outlet. If the Power Saving Mode feature is off, the Power LED on the Status Indicator Panel (page 11) blinks blue. If the Power Saving Mode feature is on, the Power LED is steady blue. By default, this feature is off. You can change the setting, see page 28. **NOTE:** Always use the power cord that shipped with the projector.

Optional computer connections

To get sound from the projector, connect an audio cable (optional cable, not included) to your computer and to the **Audio in** connector on the projector. You may also need an adapter.

If you are using a desktop computer and want to see the image on your computer screen as well as on the projection screen, connect to the desktop's computer cable to Computer 1 and the desktop's monitor cable to the **Computer out** connector on the projector.


connect VGA cable




connect HDMI



connect power

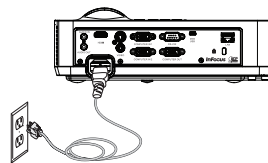

connect audio cable

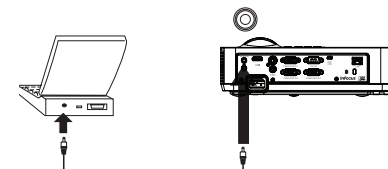

Displaying an image

Press the **Power** button.

The Power LED lights blue, and the fans start to run. When the lamp comes on, the start up screen displays. It can take up to a minute for the image to achieve full brightness.

No start up screen? Get help on page 12.

Turn on your computer or video device.

The image should appear on the projection screen. If it doesn't, press the **Source** button on the projector's keypad or remote.

If you are using a VGA cable to connect your computer to the projector:


If using a laptop, make sure its external video port is active.

Many laptops do not automatically turn on their external video port when a projector is connected. Usually a key combination like FN + F8 or CRT/LCD key turns the external display on and off. Locate a function key labeled CRT/LCD or a function key with a monitor symbol. Press FN and the labeled function key simultaneously.



Refer to your laptop's documentation for more information about your laptop's key combination.

No laptop image? Try pressing the **Auto Image** button on the remote.
Get help on page 12.

press Power button

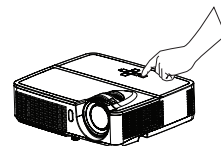

turn on computer or video device

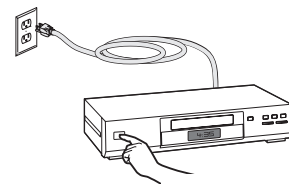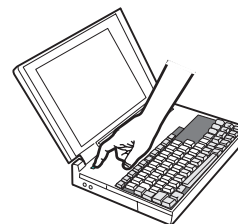

activate laptop's external port



monitor key or
LCD/CRT key



FN key



Adjusting the image

If necessary, adjust the height of the projector by rotating the elevator foot to extend the foot.

If necessary, rotate the leveling foot located at the rear of the projector.

Avoid placing your hands near the hot exhaust vent at the front of the projector.

Position the projector the desired distance from the screen at a 90 degree angle to the screen.

See page 6 for a table listing screen sizes and distances.

Adjust the zoom or focus.


If the image is not square, first make sure that the projector is perpendicular to the screen. If the image is larger or smaller on the top or bottom edge of the screen, press the top **Keystone** button to reduce the upper part of the image, and press the bottom **Keystone** button to reduce the lower part.

If the left or right side of the screen is larger or smaller the other, you can turn the projector to the left or to the right a few degrees to square the image.


Adjust the Contrast or Brightness in the Basic Menu. See page 25 for help with these menu adjustments.

adjust height


elevator
foot

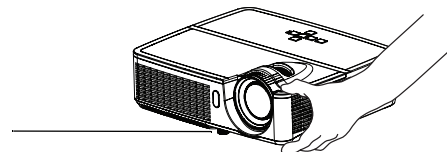


adjust distance

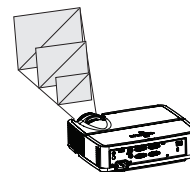


adjust zoom and focus

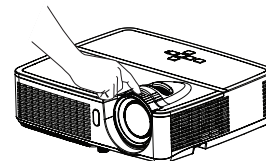

adjust keystone

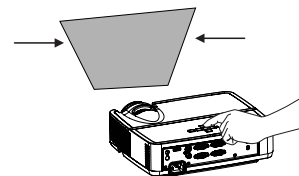

adjust Basic Menu

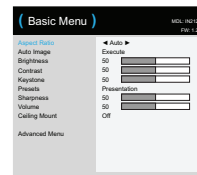

Connecting a video device

You can connect video devices such as VCRs, DVD players, camcorders, digital cameras, video game consoles, HDTV receivers, and TV tuners to the projector. You can connect the audio directly to the projector to get sound from the built-in speaker, or you can bypass the projector's audio system and connect the audio directly from your source to a stereo or home theater system.

You can connect the projector to most video devices that can output video. You cannot directly connect the coaxial cable that enters your house from a cable or satellite company, the signal must pass through a tuner first. Examples of tuners are digital cable boxes, VCRs, digital video recorders, and satellite TV boxes. Basically, any device that can change channels is considered a tuner.

Before connecting your projector, you should decide which aspect ratio you want to use. The projector's Aspect Ratio setting is accessed through the Resize button on the remote or through the projector's Basic Menu. See page 25 for more information.

Video device connections

No video cables are provided with the projector. You can order cables from InFocus or provide your own.

HDMI connection

HDMI is a standard, uncompressed, all-digital audio/video interface. HDMI provides an interface between sources, such as set-top boxes, DVD players, and receivers and your projector. Plug an HDMI cable into the video-out connector on the video device and into the HDMI connector on the projector.

Composite video connection

Plug the composite video cable's yellow connector into the video-out connector on the video device. Plug the other yellow connector into the yellow **Video** connector on the projector.

VGA connection

If your video device has a 15-pin VGA output, plug one end of the included computer cable into the VGA connector on your video source. This connector may be labeled "To Monitor" on the video source. Plug the computer cable into either the **Computer In 1** or **Computer In 2** connector on the projector.

Component video connection

If your HD video device has component connectors, an optional Component to VGA adapter can be used. Plug the component cable into the video device. Plug the other end of the component cable into the adapter and plug the adapter into the **Computer** connector.

S-video connection

Plug the S-video cable's connector into the video-out connector on the video device. Plug the other connector into the **S-Video** connector on the projector.

Audio

For audio, connect a 3.5mm stereo cable to the **Audio In** connector on the projector and to your source. If your source uses RCA audio connectors, a Y-cable or adapter may be used. (Note: A separate audio connection is not required for HDMI source inputs.)

Shutting down the projector

Auto Off Time

The projector also has an Auto Off Time feature that automatically turns the projector off after no active sources are detected and no user interaction with the projector is performed for 30 minutes. By default, this feature is off. You can change the length of time, see page 29.

Turning off the projector

To turn the projector off, press the **Power** button on the remote or keypad. The lamp turns off and the Power LED blinks blue for 1 minute while the fans continue to run to cool the lamp. If the Power Saving Mode feature is on and when the lamp has cooled, the LED lights blue and the fans stop. If the Power Saving Mode feature is off and when the lamp has cooled, the LED blinks blue and the fans stop. Unplug the power cable to completely power off the projector.

Troubleshooting your setup






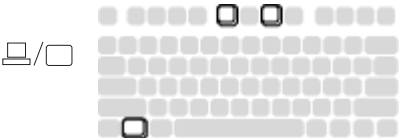
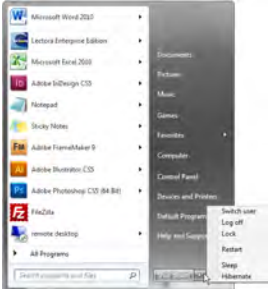
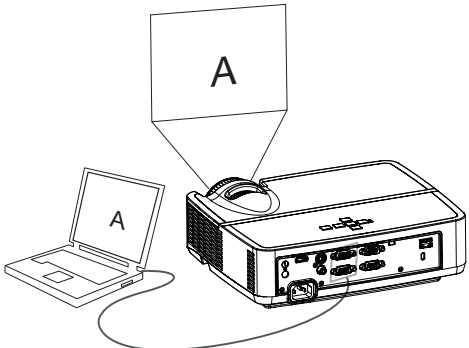
If your image appears correctly on the screen, skip to the next section. If it does not, troubleshoot the setup.



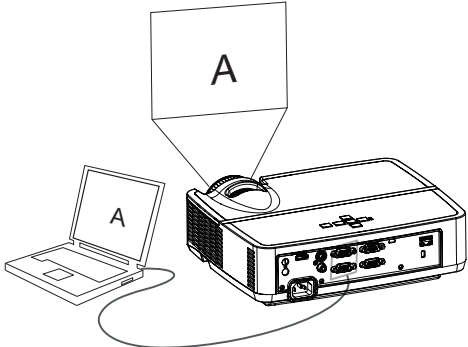
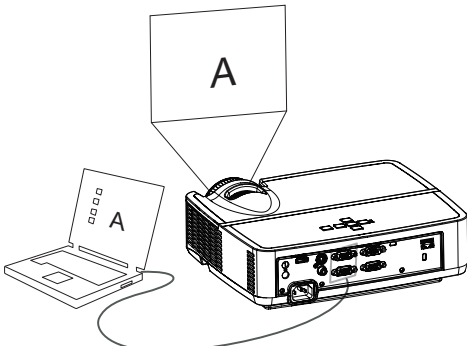
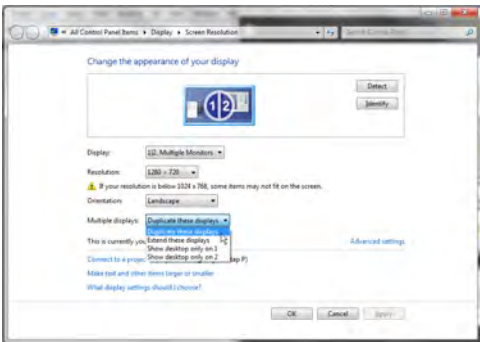
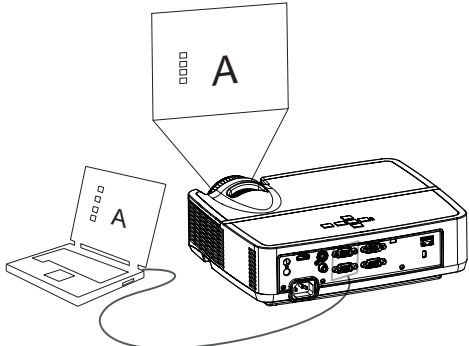
The Status Indicator Panel on top of the projector indicates the state of the projector and can help you troubleshoot.








- ☐ POWER
- ☐ TEMP/LAMP


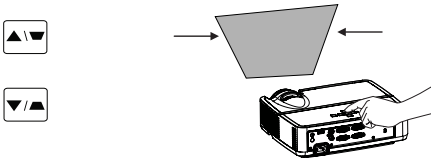


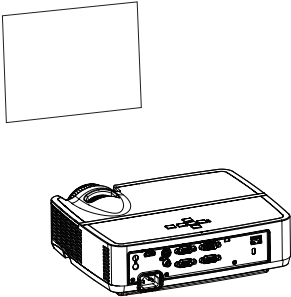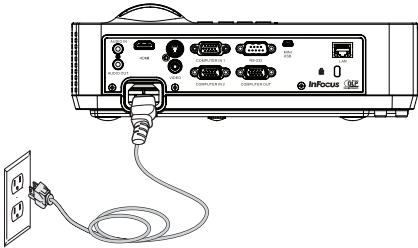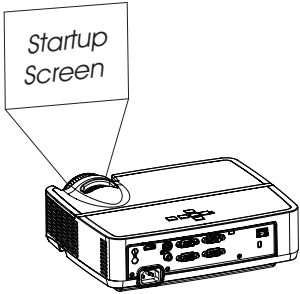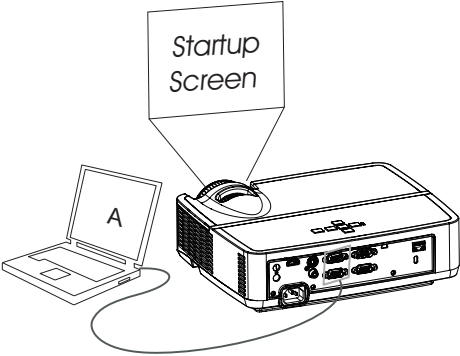

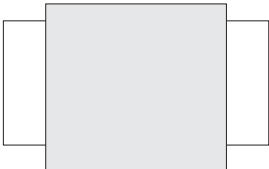
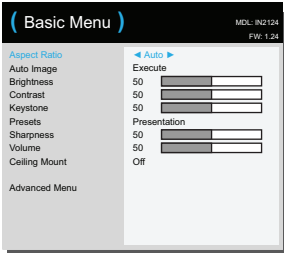
 
Table 3: Status indicator light behavior and meaning

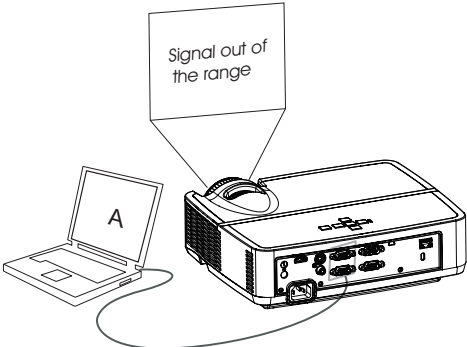
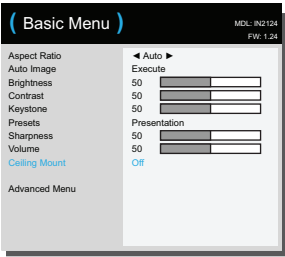


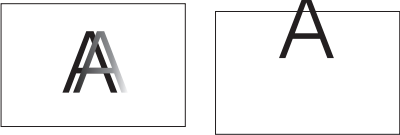


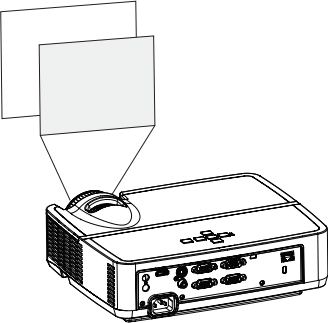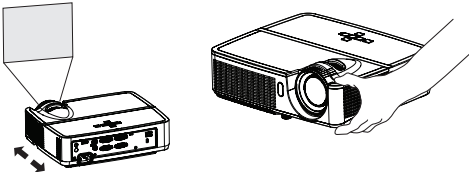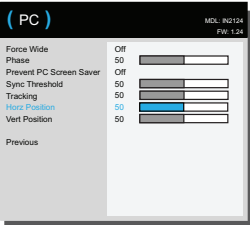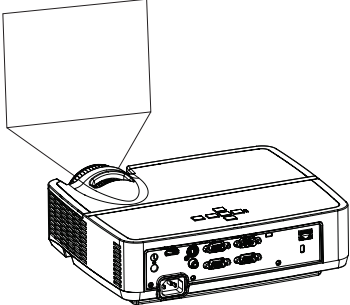

| Status Indicator Light | Meaning |
|--|---|
| POWER: Solid blue | 1. If the Power Saving Mode feature is on, the projector is plugged in. 2. The projector is on and initialized. 3. The projector is in normal operation. |
| POWER: Blinking blue | 1. If the Power Saving Mode is off, the projector is plugged in. 2. The projector is powering down and the fans are cooling the projector. |
| POWER: Blinking blue TEMP/LAMP: Blinking pink | The projector fan(s) are not operating correctly and the projector has been shut down. |
| POWER: Solid blue TEMP/LAMP: Blinking pink | The lamp failed to ignite. Contact Technical Support if the problem persists. Visit www.infocus.com/support to contact service. |
| POWER: Solid blue TEMP/LAMP: Blinking red | The lamp has reached its end of life and must be replaced. The lamp will continue to operate until it fails. Contact Technical Support. Repair may be needed. |
| POWER: Solid blue TEMP/LAMP: Blinking blue | 1. The projector is overheating and the lamp will be shut off. The fans will continue to run. 2. The projector will not turn back on until the cooling process is complete. |







| Problem | Solution | Result |
|---|--|--|
| <p data-bbox="53 118 265 141">No start up screen</p>  | <p data-bbox="666 118 1060 169">Plug power cord into the projector press power button</p>  | <p data-bbox="1190 118 1355 141">Correct image</p>  |
| <p data-bbox="53 508 378 531">Only start up screen appears</p>  | <p data-bbox="666 508 1008 560">Press the Source button  activate laptop's external port</p>  <p data-bbox="683 818 835 841">Restart laptop</p>  | <p data-bbox="1190 508 1494 531">Computer image projected</p>  |



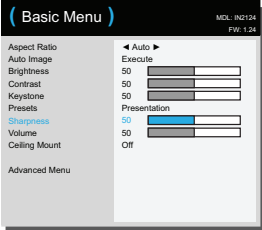
| Problem | Solution | Result |
|--|---|---|
| <p>No computer image, just the words “Signal out of range”</p>  | <p>Press the Auto Image button on remote Adjust computer refresh rate (Windows 7: Control Panel > Display > Screen Resolution > Advanced Settings > Adapter tab). Varies per operating system.</p>  <p>You may also need to set a different resolution on your computer, as shown in the following problem, “image fuzzy or cropped”</p> | <p>Computer image projected</p>  |
| <p>Only my laptop's background appears, not the Desktop icons</p>  | <p>Change the Multiple Display setting to "Duplicate these displays" (Windows 7: Control Panel > Display > Screen Resolution). Varies per operating system.</p>  | <p>Background and Desktop projected</p>  |

| Problem | Solution | Result |
|---|--|--|
| <p data-bbox="52 112 319 141">Image fuzzy or cropped</p>  | <p data-bbox="604 95 1135 210">Change the computer's "Resolution" setting to match the projector's resolution (Windows 7: Control Panel > Display > Screen Resolution). Varies per operating system.</p>  | <p data-bbox="1182 112 1508 141">Image clear and not cropped</p>  |
| <p data-bbox="52 583 390 611">Image not centered on screen</p>  | <p data-bbox="604 577 939 606">Move projector, adjust height</p>  <p data-bbox="649 881 850 1013">Adjust horizontal or vertical position in Advanced Menu > Image > PC... menu</p>  | <p data-bbox="1182 577 1348 606">Correct image</p>  |
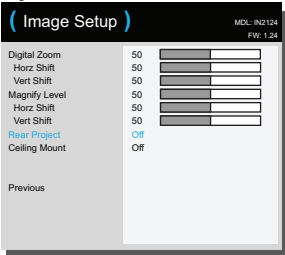
| Problem | Solution | Result |
|--|--|--|
| Image not square  | Adjust Keystone on keypad  | Square image  |
| Image not sharp  | Adjust Sharpness in the Basic Menu  | Correct image  |
| Image does not fit 4:3 or 16:9 screen  | Change aspect ratio to 4:3 or 16:9 in Basic Menu > Aspect Ratio menu  | Correct image  |
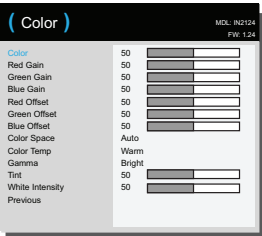
| Problem | Solution | Result |
|---|--|--|
| <p>Image upside down</p>  | <p>Turn off Ceiling Mount in Basic menu</p>  | <p>Correct image</p>  |
| <p>Image reversed left to right</p>  | <p>Turn off Rear Project in Advanced Menu > Setup > Image Setup... menu</p>  | <p>Correct image</p>  |
| <p>Projected colors don't match source</p>  | <p>Adjust the items in the Advanced Menu > Image > Color... menu</p>  | <p>Correct image</p>  |
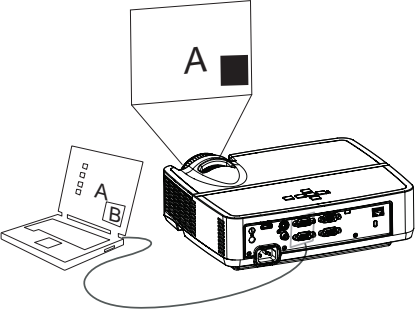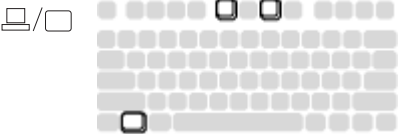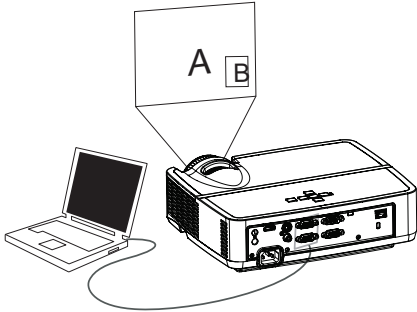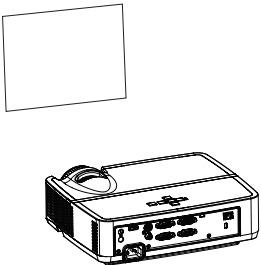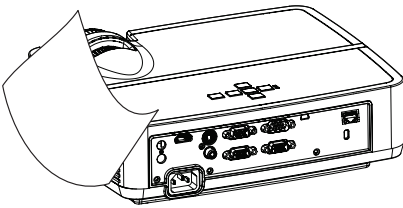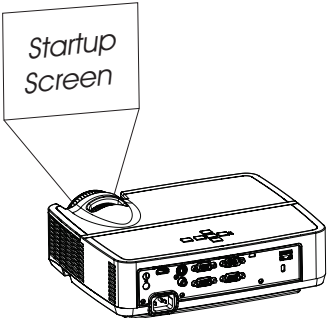
| Problem | Solution | Result |
|--|--|---|
| <p>The video embedded in my PowerPoint presentation does not play on the screen</p>  | <p>Turn off the internal LCD display on your laptop</p>  | <p>Embedded video plays correctly</p>  |
| <p>Lamp won't turn on, the projector is overheating</p> <div data-bbox="100 764 227 827"> <input type="checkbox"/> POWER <input type="checkbox"/> TEMP/LAMP </div> <p>Overheating indicator</p>  | <p>Make sure vents aren't blocked, turn off the projector and allow it to cool for one minute</p>  | <p>Lamp turns on</p>  |
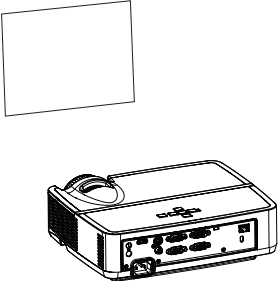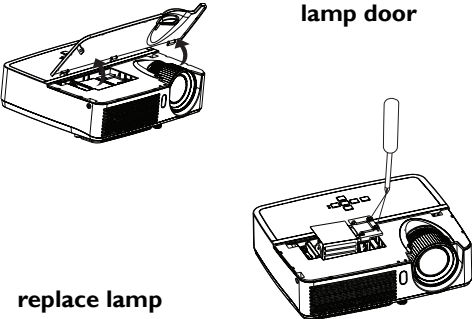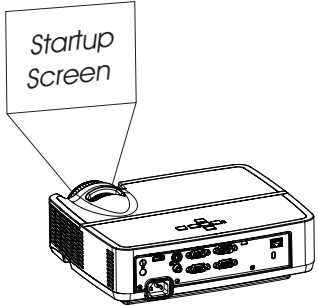
| Problem | Solution | Result |
|---|--|---|
| <p data-bbox="48 101 557 153">“Replace lamp” message appears at startup, lamp won’t turn on</p>  | <p data-bbox="604 105 1025 130">Lamp must be replaced (see page 36)</p>  <p data-bbox="951 153 1069 176">lamp door</p> <p data-bbox="666 437 814 460">replace lamp</p> | <p data-bbox="1182 96 1347 119">Lamp turns on</p>  <p data-bbox="1326 199 1416 257">Startup Screen</p> |

Still need assistance?

If you need assistance, visit our website at www.infocus.com/support or call us. See the Warranty/Safety booklet for support contact information.

This product is backed by a limited warranty. An extended warranty plan may be purchased from your dealer. When sending the projector in for repair, we recommend shipping the unit in its original packing material, or having a professional packaging company pack the unit. Please insure your shipment for its full value.

Using the remote control

The remote uses two (2) AAA batteries (not provided). They are easily installed by removing the cover from the remote's back, aligning the + and - ends of the batteries, sliding them into place, and then replacing the cover.

Caution:

- When replacing the remote batteries, be aware that using batteries other than AAA batteries may risk severe damage to the remote. When disposing of the batteries, be sure to do so in an environmentally proper manner.
- If the remote control gets wet, wipe it dry immediately.
- Avoid excessive heat and humidity.
- Ensure the batteries' polarity (+/-) is aligned correctly.
- Do not mix new and old batteries together, or mix different types of batteries together.
- Replace the batteries as soon as they run out.
- Remove batteries from the remote control when storing or not in use for a prolonged period.

To operate, point the remote at the front of the projector (not at the computer). The range of optimum operation is about 15 feet (4.5m).

Press the remote's **Power** button to turn the projector on and off (see page 11 for shutdown info).

Press the remote's **Menu** button to open the projector's menu system. Use the arrow buttons to navigate, and the **Select** button to select features and adjust values in the menus. See page 24 for more info on the menus.


The remote also has:

- **Volume** buttons adjust the sound.
- **Custom** button that can be assigned to a special function, like Blank Screen or Freeze (see page 27).
- **Source** button brings up a menu of all possible sources allowing the user to switch the active source.
- **Blank** button to blank the screen.
- **Presets** button to select stored settings (see page 25).
- **Mute** button to silence the audio.

- **Auto Image** button to resynch the projector to the source.
- **Resize** button to switch among aspect ratios (see page 25).
- **Help** button to get help with connecting sources and improving the picture.
- **ESC** button to go back to previous OSD menu.
- **PC** button to cycle through the Computer sources.
- **Video** button to cycle through Composite/S-Video/HDMI input sources.
- **Keystone** buttons adjust the squareness of the image
- **Magnify** buttons magnify and reduce the projected picture size.
- **Freeze** button to pause the projected image.
- **Overscan** button remove noise around the video image.
- **AV Mute** button blanks the projected image and mutes audio.

Troubleshooting the remote

- Make sure the batteries are installed in the proper orientation and are not dead.
- Make sure you're pointing the remote at the projector or the screen, not the computer, and are within the remote range of 15 feet (4.5m). For best results, point the remote at the projector.

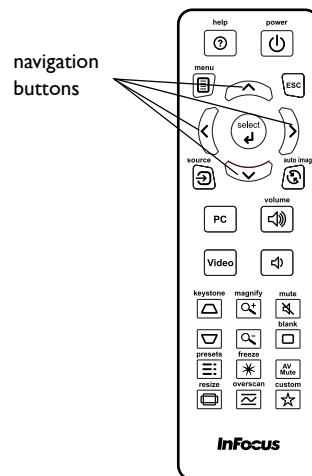

Using the audio

Using the projector's speakers

Connect the audio source to the Audio In connectors to hear audio through the projector speakers.

Amplified speakers may also be connected to the projector using the Audio Out connector.


To adjust the volume, press the **Volume** buttons on the remote.

Troubleshooting Audio

If you aren't hearing the audio, check the following:

- Make sure the audio cable is connected to the Audio In connector on the projector, and that the other end of the cable is connected to an Audio Out connector on the source (not a "line-in" or "microphone" connector).
- Make sure the volume is turned up enough. Press the **Volume** button on the remote.
- Make sure the correct source is active.
- Adjust the audio source.
- If playing a video, make sure the playback has not been paused.

connect audio cable

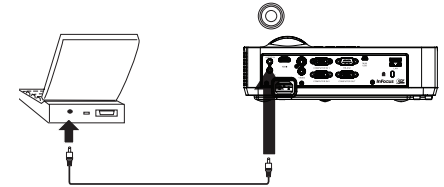

Using the keypad buttons

Most buttons are described in detail in other sections, but here is an overview of their functions:


Power—turns the projector on and off (page 8).

Right arrow/Presets - When the menu is displayed, the right arrow button navigates through the menu. When the menu is not displayed, this button cycles through available preset options.

Up arrow/Keystone - When the menu is displayed, the up arrow button navigates through the menu. When the menu is not displayed, this button adjusts the squareness of the image (page 9).

Down arrow/Keystone - When the menu is displayed, the down arrow button navigates through the menu. When the menu is not displayed, this button adjusts the squareness of the image (page 9).

Left arrow/Source - When the menu is displayed, the left arrow button navigates through the menu. When the menu is not displayed, this button brings up a source menu, allowing the user to change the active source (page 8).

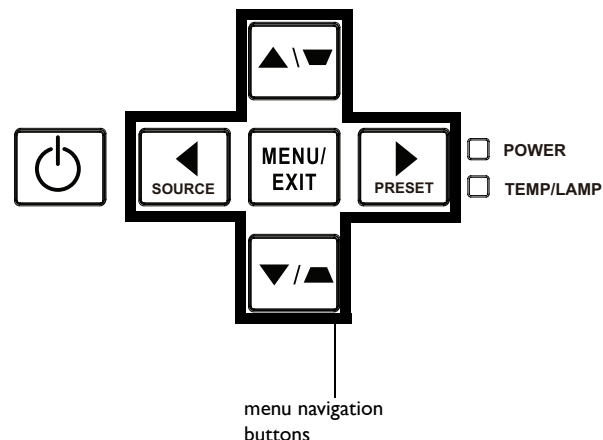

Optimizing computer images

After the projector is running and the image is on the screen, you can optimize the image using the onscreen menus. For general information on using the menus, see page 24.

- Select default image settings using a preset appropriate to your environment.
- Adjust the Keystone, Contrast, or Brightness (page 25).
- Change the Aspect Ratio. Choose the option that best fits your input source (page 25).
- Adjust the Color Temperature (page 26).
- Adjust the Phase, Tracking, or Horizontal or Vertical position (page 26).
- Once you have optimized the image for a particular source, you can save the settings using Presets. This allows you to quickly recall these settings later (page 25).

Presentation features

Several features are provided to make giving presentations easier. Here is an overview, details are found in the menu section.

- The Custom key allows you to assign various features to the button. The default effect is Source Info, which displays information about the projector and current source. See page 27 for details.
- The Search Screen option lets you change the appearance of the blank screen and start up screen (page 28).
- Auto Off Time is provided to automatically shut down the projector after several minutes. This helps preserve lamp life (page 28).

Optimizing video images

After your video device is connected properly and the image is on the screen, you can optimize the image using the onscreen menus. For general information on using the menus, see page 24.

- Adjust the Keystone, Contrast, Brightness, Color, or Tint (page 25).
- Change the Aspect Ratio. Choose the option that best fits your input source (page 25).
- Select a Sharpness setting (page 25).
- Adjust the Color Temperature. Select a listed warmth value (page 26).
- Turn on Overscan to remove noise on the edges of the image (page 27).

Customizing the projector

You can customize the projector for your specific setup and needs. See page 27 for details on these features.



- For rear projection, turn Rear Project on in the Advanced Menu > Setup > Image Setup... menu.
- For ceiling mounted projection, turn Ceiling Mount on in the Basic menu.
- Specify which source the projector checks first for active video during power-up.
- Specify the function of the Custom key on the remote.
- Turn the projector's display messages on and off.
- Turn on power saving features.
- Specify appearance of blank screen and startup screen.
- Specify the language viewed on the menus.
- Save settings for the active source as a preset.

Using the menus


- 1 To open the menus, press the **Menu** button on the keypad or remote. (The menus automatically close after 60 seconds if no buttons are pressed.) Use the arrow buttons to move up and down to review the menu options.
- 2 To enter a submenu, highlight the desired submenu and press > on the keypad or **Select** on remote.
- 3 To adjust a menu setting, highlight the desired menu option and press < or > to scroll through the available adjustments.
- 4 Press the **Menu** button to exit the menu system.

The menus are grouped by usage:

- The Basic Menu provides common adjustments.
- The Advanced Menu provides more complex adjustments.

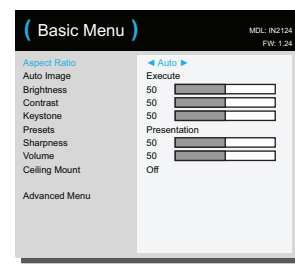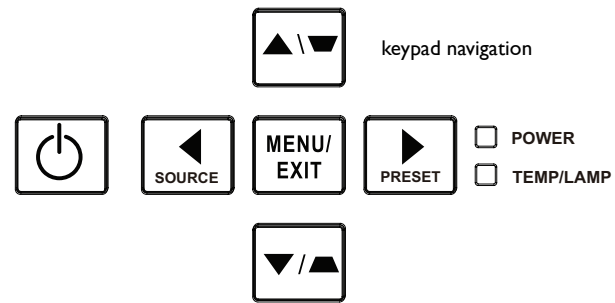

Basic Menu

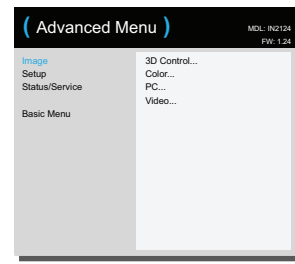

Advanced Menu

Basic Menu

To adjust the following settings, highlight the setting, use the right and left arrows to adjust the values.

Aspect Ratio: Aspect ratio is the ratio of the image width to image height. TV screens are usually 4:3. HDTV and most DVDs are 16:9.

Select Auto to have the projector choose the ratio. Choose Native to see the unmodified input with no resizing by the projector. Select 16:9 to watch enhanced widescreen DVDs.

Auto Image: resets the projector to the source.

Brightness: changes the intensity of the image.

Contrast: controls the degree of difference between the lightest and darkest parts of the picture and changes the amount of black and white in the image.

Keystone: adjusts the image vertically and makes a squarer image. You can also adjust keystone from the keypad.



Presets: Presets are provided that optimize the projector for displaying computer presentations and video images under certain conditions. Note: Users can save their settings as a User Preset.

Sharpness: Changes the clarity of the edges of a video image. Select a sharpness setting.

Volume: increases or decreases the audio volume.

Ceiling Mount: turns the image upside down for ceiling-mounted projection.

Basic Menu

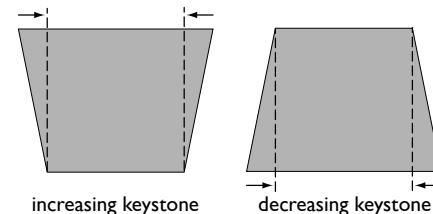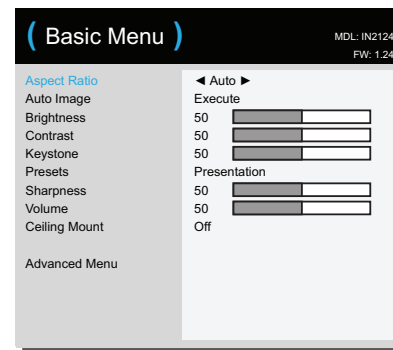

Advanced Menu

Advanced Menu

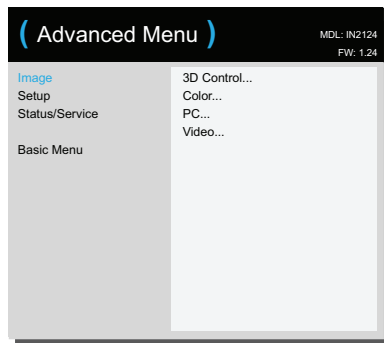


Image:

3D Control:

3D Control: allows you to enjoy 3D (stereoscopic) content. Your projector supports two synchronization modes (External Sync and DLP Link™) for controlling LCD shutter glasses. In addition to the projector, you will need a pair of 3D shutter glasses, 3D content, and 3D compatible source (and emitter). Ensure the glasses you choose are consistent with the synchronization mode you will be using.

3D Sync Invert: (Only applies when 3D control is set to DLP Link™.) If the image appears to flutter, look odd or if the image depth looks off or you experience eye strain, turn this feature on to see if the image improves.

Color...

Color: adjusts a video image from black and white to fully saturated color. The color setting applies to video sources only.

Red/Green/Blue Gain: adjusts the gain of the red, green or blue channel of the image.

Red/Green/Blue Offset: adjusts the offset of the red, green or blue channel of the image.

Color Space: applies to computer and component video sources. It allows you to select a color space that has been specifically tuned for the input signal. When Auto is selected, the projector automatically determines the standard. To choose a different setting, turn off Auto, then choose RGB for computer sources or choose either REC709 or REC601 for component video sources.

Color Temperature: changes the intensity of the colors. Select a listed relative warmth value.

Gamma: select the appropriate gamma from among Video, Film, Bright, and CRT.

Tint: adjusts the red-green color balance in the image of NTSC video images. The tint setting applies to NTSC video sources only.

White Intensity: increases the brightness of whites that are near 100%.

PC:

Force Wide: when this is off, the analog locking algorithms choose the standard mode resolution (4:3) as the preferred default resolution. When this is on, the analog locking algorithms choose wide mode resolution (16:10) as the preferred default resolution.

Phase: adjusts the horizontal phase of a computer source.

Prevent PC Screen Saver: prevents your computer from going into Screen Save mode. The projector must be connected to the PC via a USB cable for this feature to work.

Sync Threshold: (progressive signals only) If a hardware device, such as a DVD player, is not syncing properly with the projector, select this option to help it to sync when connected to the projector.

Tracking: adjusts the vertical scan of a computer source.

Horizontal/Vertical Position: adjusts the position of a computer source.

Video:

Detect Film: determines whether the original source of the input video was film (progressive) or video (interlaced).

Overscan: removes noise around the video image.

Set Black Level: analyzes the current input image and calculates an offset value which is then added to the analog to digital converter black level value. This ensures optimum black level for each analog source.

Setup:

Audio Setup...

Internal Speaker: turns the internal speaker on or off.

Closed Captioning...

Closed Captions: controls closed captioning. If the source is NTSC and contains captions on the selected channel, then the projector will display caption text overlaid on the image. When Closed Captions is off and volume is muted, closed captioning will appear. Options are: Off, CC1 and CC2.

Image Setup...

Digital Zoom: reduces the size of projector's display area. If the display area has been resized by this setting, it can be moved by changing the **Horz Shift** and **Vert Shift** settings.

Magnify Level: magnifies the image. If the image has been magnified by this setting, it can be moved by changing the **Horz Shift** and **Vert Shift** settings.

Rear Project: reverses the image so you can project from behind a translucent screen.

Ceiling Mount: turns the image upside down for ceiling-mounted projection.

Keypad/Remote Settings...

Blank Key: select what to display when the blank key on the remote is pressed: your custom snapshot, a solid color screen (blue, black or white), or the factory logo screen.

Custom Key: allows you to assign a different function to the Custom button, allowing you to quickly and easily use the effect. Highlight an effect and press ^ or v on the keypad or **Select** on remote to choose a different one.

- **Blank Screen:** displays an empty screen.

- **Mute:** turns off all sound.
- **Source:** brings up a menu of available sources.
- **Auto Image:** resets the projector to the source.
- **Freeze Screen:** pauses the projected image.
- **Source Info:** the default action. Shows the Source Info menu.
- **Projector Info:** shows the Projector Info menu.
- **Overscan:** removes noise around the image.
- **AV Mute:** enables or disables AV Mute function.
- **Closed Captions:** enables or disables Closed Captions.
- **Keypad:** enables or locks the projector keypad.

Lamp...

Programmed Dimming: When enabled, Programmed Dimming enhances contrast ratios in dark scenes and disables Lamp Low Power. Programmed Dimming will impact lamp life and system noise performance. Programmed Dimming works in conjunction with the lamp. If Lamp Low Power is enabled, Programmed Dimming is unavailable.

Lamp Low Power: toggles between on and off. Turn it on to lower the light output of the lamp. This also lowers the fan speed, making the projector quieter.

OSD Setup...

Language: allows you to select a language for the onscreen display.

Menu Position: allows you to change the position of the On Screen Display items.

Menu Transparency: allows you to change how much of the projected image behind the menu you can see. As the value increases, more of the image behind the menu is visible.

Show Messages: displays status messages (such as “Searching”) in the lower-left corner of the screen.

PIN Settings

PIN Protect: The PIN (personal identification number) feature allows you to password protect your projector. Once you enable the PIN feature, you must enter the PIN before you can project an image. Use the **Up/Down/Left/Right** arrows buttons on the remote or keypad to set a 4-button press sequence. If you enter an incorrect PIN 3 times in succession, the projector will automatically shut down. If you lose or forget your custom PIN, contact InFocus Technical Support.

To enter the PIN at projector startup:

Power up the projector. The “**Enter PIN**” dialog box displays after the startup screen. Enter the PIN. Use the **Up/Down/Left/Right** arrows buttons on the remote or keypad to enter the correct 4-button press sequence. See the description above for instructions.

To change the PIN:

Select “**Change PIN...**” in the Advanced Menu > Setup > PIN settings menu. Enter the existing PIN. Enter the new PIN.

Power

Power Saving Mode: When the Power Saving Mode is On and the projector is in standby (powered off but connected to AC power), the monitor out function will not work.

Source

Auto Source: When this feature is On, the projector automatically finds the active source, checking the selected Power-up Source first. When this feature is Off, the projector defaults to the source selected in Power-up Source. To display another source, you must manually select one by pressing the **Source** button on the remote or keypad and selecting one from the displayed Source menu.

Power-up Source: determines which source the projector checks first for active video during power-up.

Search Screen: allows you to display a blank screen instead of the default screen at startup, and when no source is detected.

Timer

Auto Off Time: automatically turns the projector off after no signals are detected for a preset number of minutes. If an active signal is received before the projector powers down, the image will be displayed.

High Altitude Setting

High Altitude Setting: We recommend you turn on the High Altitude Mode when your environment is between 5000' (1500m) and 10,000' (3000m) above sea level.

Network

Allow you to configure the network settings.

DHCP: Abbreviation for Dynamic Host Configuration Protocol. This protocol automatically assigns IP Address to networked devices.

- When the “**DHCP**” is set to “**On**”, it takes some time to obtain IP address from DHCP server.
- When the “**DHCP**” is set to “**Off**”, that means user will set IP address by manually.

IP Address: Numerical address to identify networked computers. This function can only be used when **DHCP** is set to **Off**.

- The IP Address is the number that identifies this projector on the network. You cannot have two devices with the same IP Address on the same network.
- The IP Address “0.0.0.0” is prohibited.

Subnet Mask: A numeric value to define the number of bits used for a network address of a divided network (or subnet) in an IP Address. This function can only be used when DHCP is set to Off.

- The Subnet Mask “0.0.0.0” is prohibited.

Default Gateway: A server (or router) to communicate across networks (subnets) that are divided by a Subnet Mask. This function can only be used when DHCP is set to Off.

DNS: Setup DNS server address when DHCP is disabled.

Mac Address: Abbreviation for Media Access Control Address. Mac Address is a unique ID number assigned to each network adapter.

Apply: Save and execute the wired network settings.

Restart Network...: Restart network settings.

Status/Service:


Source Info: a read-only display of current source settings.

Projector Info: a read-only display of current projector settings.


Reset Lamp Hours...: resets the lamp hours used counter in the Projector Info menu to zero. Do this only after changing the lamp.

Factory Reset...: restores all settings to their factory default settings.

Service Code...: only used by authorized service personnel.

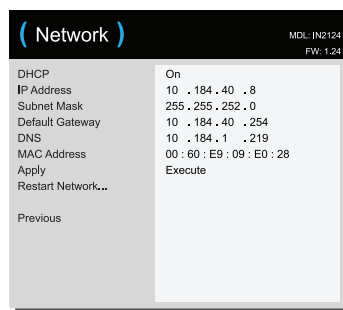


Network Menu

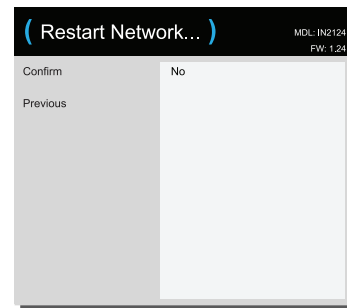

Restart Network...

Controlling the projector through a LAN environment

The projector supports Crestron® software. With correct settings for the **Network** menu, you can manage the projector from a computer using a web browser when the computer and the projector are properly connected to the same local area network.

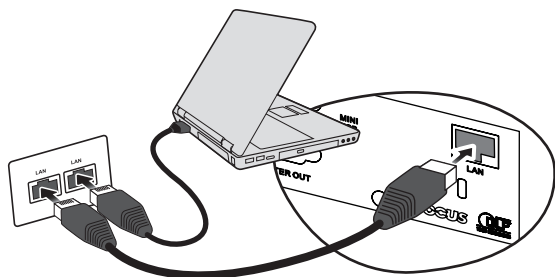

(An example of connection)

Configuring the LAN control setting

If you are in a DHCP environment:

- 1 Take a RJ45 cable and connect one end to the RJ45 LAN input jack of the projector and the other end to the RJ45 port .
- 2 Press **MENU/EXIT** on the projector or **Menu** on the remote control and then press **◀/▶** until the **Network** menu is highlighted.
- 3 Press **▼** to highlight **Network** and press **Select** on the remote control. The **Network** page is displayed.
- 4 Press **▼** to highlight **DHCP** and press **◀/▶** to select **On**.
- 5 Press **▼** to highlight **Apply** and press **Select** on the remote control.
- 6 Please wait for around 15 - 20 seconds, and then re-enter the **Network** page. The **IP address**, **Subnet Mask**, **Default Gateway**, **DNS** and **Mac Address** settings will be displayed. Write down the IP address displayed in the **IP address** row.

- If the Projector IP Address still does not display, contact your network administrator.
- If the RJ45 cables are not properly connected, the IP Address, Subnet Mask, Default Gateway, DNS and Mac Address settings will display 0.0.0.0. Make sure the cables are properly connected and perform the procedures above again.
- If you need to connect to the projector in its standby mode, set the **Power Saving Mode** feature to **Off**.

 
If you are in a non-DHCP environment:

- 1 Repeat steps 1-3 above.
 - 2 Press **▼** to highlight **DHCP** and press **◀/▶** to select **Off**.
 - 3 Contact your ITS administrator for information on the **IP address**, **Subnet Mask**, **Default Gateway**, **DNS** and **Mac Address** settings.
 - 4 Press **▼** to select the item you want to modify and press **Select** on the remote control.
 - 5 Press **◀/▶** to move the cursor and enter the value.
 - 6 To save the settings, press **Select** on the remote control. If you do not want to save the settings, press **MENU/EXIT** on the projector or **Menu** on the remote control.
 - 7 Press **▼** to highlight **Apply** and press **Select** on the remote control.
- If the RJ45 cables are not properly connected, the IP Address, Subnet Mask, Default Gateway, DNS and Mac Address settings will display 0.0.0.0. Make sure the cables are properly connected and perform the procedures above again.
 - If you wish to connect to the projector in its standby mode, be sure to select RJ45 and obtain the IP Address, Subnet Mask, Default Gateway, DNS and Mac Address information when the projector is on.

Controlling the projector remotely through a web browser

Once you have the correct IP address for the projector and the projector is on or in standby mode, you can use any computer that is on the same local area network to control the projector.

- If you are using Microsoft Internet Explorer, make sure it is version 7.0 or higher.
 - The screen shots in this manual are for reference only, and may differ depending on your browser.
- 1 Enter the address of the projector in the address bar of your browser and press **Enter**.



- 2 The main page of the Network Control displays.



- **Accessing the Network Settings or the Email Alert page requires an Administrator password. The default password is "0000".**
- 3 This page allows you to make adjustments to the AMX and SNMP settings. In the AMX Device Discovery field, when **ON** is selected, the projector can be detected by AMX controllers connected to the same network. For details about AMX Device Discovery, visit the AMX website at <http://www.amx.com>.



- 4 If your projector is connected to a network which supports Simple Mail Transfer Protocol (SMTP), you can configure it to alert you via email about significant events.



- 5 The **Creston (e-Control)** page displays the Creston e-Control user interface. See the next page for details.

Please pay attention to the input length and character limitations (including character and punctuation restrictions) listed below:


| Category Item | | Input-Length | Maximum Number of Characters |
|------------------|----------|----------------------|------------------------------|
| Network Settings | Network | DHCP/Manual | (N/A) |
| | | IP Address | XXX.XXX.XXX.XXX |
| | | Subnet Mask | XXX.XXX.XXX.XXX |
| | | Gateway | XXX.XXX.XXX.XXX |
| | | DNS Server | XXX.XXX.XXX.XXX |
| | | AMX device discovery | (N/A) |
| | Password | Administrator | (N/A) |
| | | New Password | 4 |
| | | Confirm Password | 4 |
| | SNMP | SysLocation | 22 |
| | | SysName | 22 |
| | | SysContact | 22 |

| | | | |
|-------------|-----------------|-------------------|-------|
| Email Alert | Email Setting | To | 40 |
| | | Cc | 40 |
| | | Subject | 40 |
| | | From | 40 |
| | SMTP Setting | Server | 30 |
| | | User Name | 21 |
| | | Password | 14 |
| | Alert Condition | Fan Error | (N/A) |
| | | Lamp Error | (N/A) |
| | | Temperature Error | (N/A) |
| Submit | | (N/A) | |
| | Issue Test Mail | (N/A) | |

- / > < \$ % + \ ' " are prohibited.

About Crestron e-Control®

I The **Crestron e-Control®** page provides a variety of virtual keys to control the projector or adjust the projector's image.

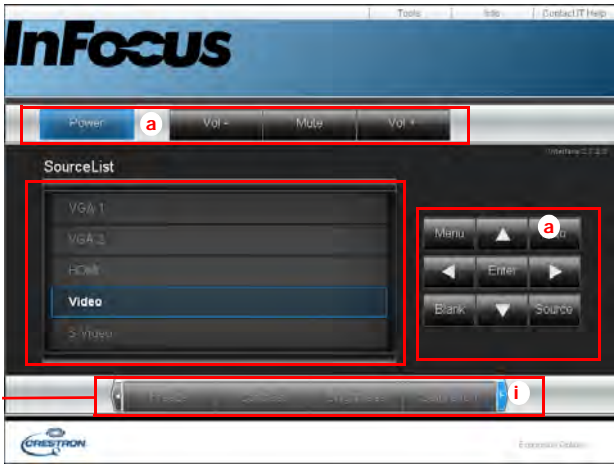

You can press ◀ / ▶ to reveal more buttons.

- a. These buttons function the same as the ones on the OSD menus or remote control.
- **Source List:** To switch the source, click on the desired source.
- **Menu:** Use to go back to previous OSD menu, exit and save menu settings.
- When you use the projector control panel or remote control to change the OSD menu settings, it may take a while for the web browser to synchronize these changes with the projector.


2 The **Tools** page allows you to manage the projector, configure the LAN control settings and remotely access the network operations of this projector.

Please pay attention to the input length and character limitations (including character and punctuation restrictions) listed below:


| Category | Item | Input-Length | Maximum Number of Characters |
|-----------------------|-----------------|--------------|------------------------------|
| Crestron Control | IP Address | 15 | |
| | IP ID | 4 | |
| | Port | 5 | |
| Projector | Projector Name | 22 | |
| | Location | 22 | |
| | Assigned To | 22 | |
| Network Configuration | DHCP (Enabled) | (N/A) | |
| | IP Address | 15 | |
| | Subnet Mask | 15 | |
| | Default Gateway | 15 | |
| | DNS Server | 15 | |
| | Enabled | (N/A) | |
| User Password | New Password | 15 | |
| | Confirm | 15 | |
| | Enabled | (N/A) | |
| Admin Password | New Password | 15 | |
| | Confirm | 15 | |

- a. This area is only used with a Crestron Control System. Please contact Crestron or refer to the Crestron user manual for setup information.
- b. This area is used for naming the projector, associating it with a particular location, assigning a responsible party to it, and adjusting network settings.
- c. This area is used to set User and Admin passwords. When password protection is enabled, unauthorized changes to the projector configuration will be avoided.
- To prevent errors, only enter alphanumeric characters on the **Tools** page.
- After configuring the settings, press the **Send** button and the data will be saved in the projector.
- Press **exit** to go back to the Crestron remote network operation page.

- / > < \$ % + \ ' " are prohibited.

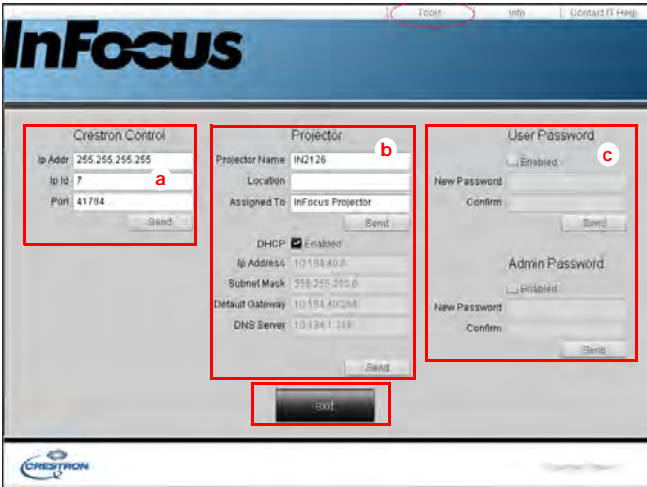


3 The **Info** page displays the information and status of this projector.

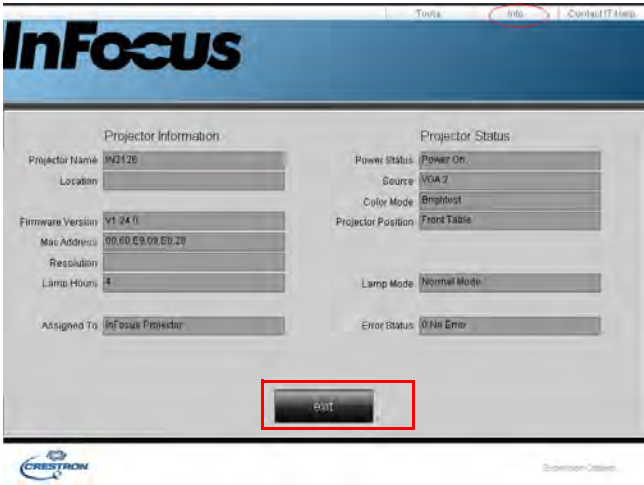

Crestron RoomView

From the Crestron RoomView software in the **Edit Room** page, enter the IP Address (or hostname) as shown on the projector's on-screen display (OSD) menu, "02" for IPID, and "41794" for the reserved Crestron control port.

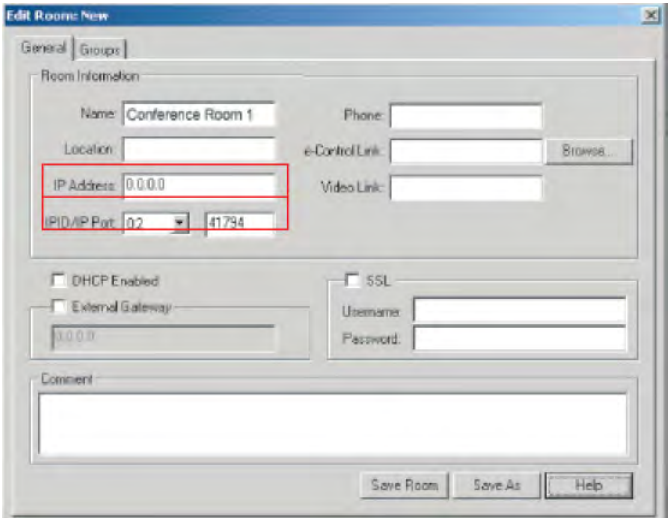

For the Crestron RoomView user guide and information about RoomView settings and commands, go to: http://www.crestron.com/products/roomview_connected_embedded_projectors_devices/resources.asp

Press **exit** to go back to the Crestron remote network operation page.


4 After pressing the **Contact IT Help** button, the **Help Desk** window will display in the upper right corner of the screen. You will be able to send messages to RoomView™ software administrators/users who are connected to the same local area network.

- For more information, visit <http://www.crestron.com> and www.crestron.com/getroomview.

Maintenance

Cleaning the lens

- 1 Apply a non-abrasive camera lens cleaner to a soft, dry cloth.
 - Projector must be off and the lens must be at room temperature.
 - Avoid using an excessive amount of cleaner, and don't apply the cleaner directly to the lens. Abrasive cleaners, solvents or other harsh chemicals might scratch the lens.
- 2 Lightly wipe the cleaning cloth over the lens in a circular motion.

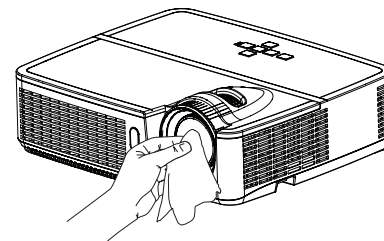


WARNINGS:

- Turn the projector off and unplug power cord before cleaning any part of the projector.
- Do not touch or block the projector lens with any objects as this can damage the projector lens. Scratches, gouges and other lens damage are not covered by the product warranty.
- Do not open any cover on the projector, except the lamp cover.
- Do not attempt to service this product yourself as opening and removing covers may expose you to dangerous voltage and other hazards. Refer all servicing to qualified service personnel.

Using the security lock

The projector has a security lock for use with a Cable Lock System. Refer to the information that came with the lock for instructions on how to use it.

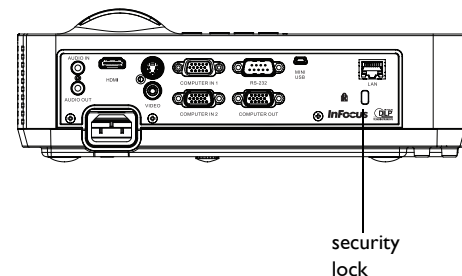

Replacing the projection lamp

The Lamp Hours timer in the Projector Info menu counts the number of hours the lamp has been in use. Twenty hours before the lamp life expires, the message “Replace lamp” displays on the screen at startup.




- **NOTE:** Be sure to use the InFocus lamp module designed for this projector. You can order new lamps from www.infocus.com (in select areas), your retailer or your dealer. **Only genuine InFocus lamps are tested for use in this projector.** Use of non InFocus lamps may cause electrical shock and fire, and may void the projector warranty. InFocus is not liable for the performance, safety or certification of any other lamps.

WARNINGS:

- The projector uses a high-pressure mercury glass lamp. The lamp may fail prematurely, or it may rupture with a popping sound if jolted, scratched, or handled while hot. The risk of lamp failure or rupture also increases as the lamp age increases; please replace the lamp when you see the “Replace Lamp” message.
- To avoid burns, allow the projector to cool for at least 60 minutes before you replace the lamp.
- Do not touch or block the projector lens with any objects as this can damage the projector lens. Scratches, gouges and other lens damage are not covered by the product warranty.
- Unplug the power cord before replacing the lamp.
- Do not drop the lamp module. The glass may shatter and cause injury.
- Do not touch the glass surface of the lamp module. Fingerprints can obscure projection sharpness and may cause the glass to shatter.
- Be extremely careful when removing the lamp housing. In the unlikely event that the lamp ruptures, small glass fragments may be generated. The lamp module is designed to contain most of these fragments, but use caution when removing it.
- Before replacing a ruptured lamp, clean the lamp compartment and dispose of cleaning materials. Wash hands after lamp replacement.
- When replacing the lamp while the projector is ceiling-mounted, wear protective eyewear to prevent eye injury.

Hg – Lamp contains mercury. Manage in accordance with local disposal laws. See www.lamprecycle.org.

- 1 Turn off the projector and unplug the power cord.
- 2 Wait 60 minutes to allow the projector to cool thoroughly.
- 3 Remove the lamp door, located on top of the projector, by removing the screw on the side of the lamp door, sliding the door forward, and lifting the lamp door off.
- 4 Loosen the captive screws that attach the lamp housing to the projector.
NOTE: If the projector is installed on a ceiling mount, be careful not to drop the lamp module once the captive screws are loosened.
- 5 Carefully lift the lamp straight up, off of the alignment pins; being careful not to pinch the lamp connector. Dispose of the lamp in an environmentally proper manner.
- 6 Install the new lamp module, aligning the pins properly. Be careful not to pinch the lamp connector.
- 7 Tighten the screws. (**NOTE:** If the pins have not been aligned properly, the screws will not tighten securely.)
- 8 Replace the lamp door by (a) aligning the hinges, (b) putting the lamp door down and (c) locking it back into place.
- 9 Replace the lamp door screw and tighten securely.
- 10 Plug in the power cord and press the Power button to turn the projector back on.
- 11 To reset the lamp hour timer, navigate to the **Advanced Menu > Status/Service** menu and select **Reset Lamp Hours...**

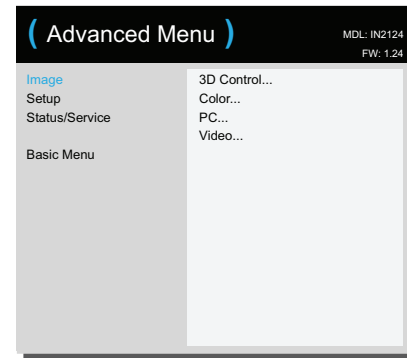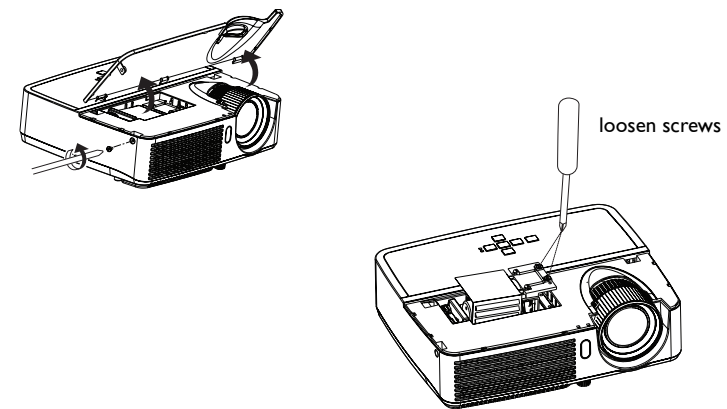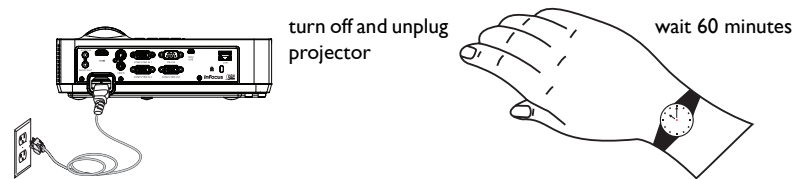

INDEX

Numerics

3D Sync Invert 26

A

Apply 29

Aspect Ratio 25

Audio In Computer connector 7

Auto Image 25

Auto Off Time 29

Auto Source 28

AV Mute 27

B

Blank Key 27

Blank Screen 27

Brightness 25

C

Cable box 10

Ceiling Mount 27

Closed Captions 27

Color Space 26

Computer In connector 7

Connecting Video device 10

Contacting InFocus 18

Contrast 25

Crestron e-Control® 32

Crestron RoomView 34

Customer service contact information 18

D

Default Gateway 29

Detect Film 26

DHCP 29

Digital Zoom 27

DNS 29

F

Factory Reset 29

Focus 9

Force wide 26

Freeze Screen 27

G

Gamma 26

H

HDTV 25

High Altitude Setting 29

Horizontal Position 26

Horz Shift 27

I

Internal Speaker 27

IP Address 29

K

Keypad 27

Keypad buttons 21

Keystone 25

L

Lamp Low Power 28

LAN 30

M

Mac Address 29

Magnify Level 27

Menu Transparency 28

Menu usage 24

Mute 27

N

Network 29

O

Overscan 27

P

Phase 26

PIN Protect 28

Power connector 7

Power cord 7

Power Saving Mode 28

Prevent PC Screen Saver 26
Programmed Dimming 28
Keypad buttons 21
Menus 24
Positioning 6
Setting up 6
Troubleshooting problems 11
Projector Info 27, 29

R

Rear Project 27
Red/Green/Blue Gain 26
Red/Green/Blue Offset 26
Remote control 19
Resetting the projector 29
Restart Network... 29

S

Search Screen 28
Service 29
Set Black Level... 27
Sharpness 25
Show Messages 28
Source 27
Source Info 27, 29
Subnet mask 29
Sync Threshold 26

T

Tint 26
Tracking 26
Troubleshooting 11
TV tuner 10

U

USB 5

V

Vert Shift 27
Vertical Position 26
Volume 25

Volume button 20

W

Warranty 18
web browser 31

Z

Zoom 9