


IN3128HD

User's Guide
Mode d'emploi
Benutzeranleitung
Manuale d'uso
Manual de Uso
Guia do Usuário
Gebruikershandleiding

Användarhandbok
Brukerhåndbok
Руководство по пользователю
사용 설명서
用戶指南
Panduan Pengguna
دليل المستخدم

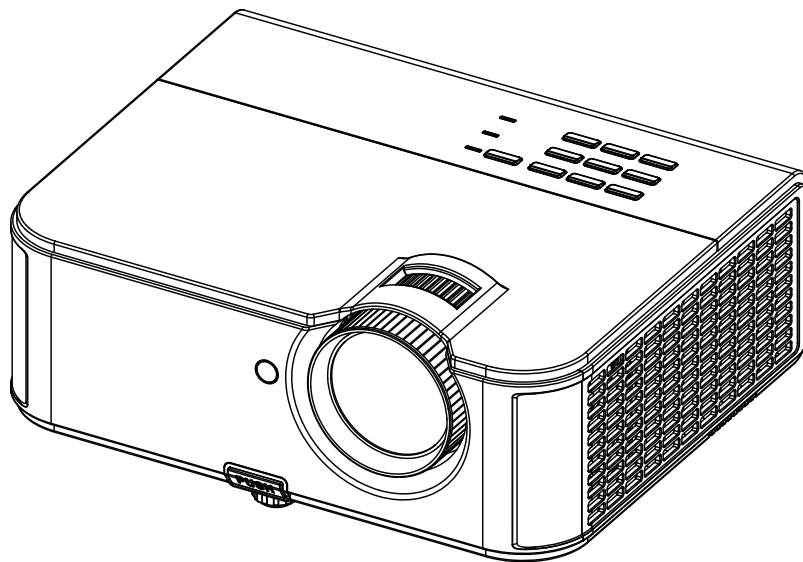

Regulatory models: IN3128HD

PM239-A000-00
DISPERINDAG No. 0287/1.824.51/09.03

InFocus

Bright Ideas Made Brilliant

Declaration of Conformity

Manufacturer: InFocus Corporation, 13190 SW 68th Parkway, Suite 200, Portland, Oregon 97223-8368 USA

We declare under our sole responsibility that this projector conforms to the following directives and norms:

ErP Directive 2009/125/EC

EMC Directive 2004/108/EC

EMC: EN 55024:2010, EN 55022:2010, EN 61000-3-2:2006+A1:2009+A2:2009, EN 61000-3-3:2008

Low Voltage Directive 2006/95/EC

Safety: IEC 60950-1: 2005;EN 60950-1:2006 +A1:2009

Trademarks

Apple, Macintosh, and PowerBook are trademarks or registered trademarks of Apple Computer, Inc. IBM is a trademark or registered trademark of International Business Machines, Inc. Microsoft, PowerPoint, and Windows are trademarks or registered trademarks of Microsoft Corporation. Adobe and Acrobat are trademarks or registered trademarks of Adobe Systems Incorporated. DLP®, DLP Link and the DLP logo are registered trademarks of Texas Instruments and BrilliantColor™ is a trademark of Texas Instruments. InFocus, In Focus, and INFOCUS (stylized) are either registered trademarks or trademarks of InFocus Corporation in the United States and other countries.



NOTE: This product is covered electrical and electronic equipment under the European Union's Waste from Electrical and Electronic Equipment ("WEEE") Directive (2002/96/EC). The WEEE Directive requires that covered equipment be collected and managed separately from typical household waste in all EU member states. Please follow the guidance of your local environmental authority or ask the shop where you purchased the product for collection or recycling options.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by InFocus Corporation may void authority to operate the equipment.

CE Warning

This product is considered Class A for EU market.

Canada

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Agency Approvals

cULus

Other specific Country Approvals may apply. Please see product certification label.

This document applies to regulatory model IN3128HD.

Input ratings: 100-240Vac, 3.8A, 50-60Hz

InFocus reserves the right to alter product offerings and specifications at any time without notice.



Table of Contents

Introduction	4
Positioning the projector	6
Connecting a computer source	7
VGA connection	7
HDMI connection	7
Connecting power	7
Optional computer connections	7
Displaying an image	8
Adjusting the image	9
Connecting a video device	10
Video device connections	10
Composite video connection	10
VGA connection	10
Component video connection	10
S-video connection	10
Shutting down the projector	11
Troubleshooting your setup	11
Using the remote control	19
Using the audio	20
Using the keypad buttons	21
Optimizing computer images	22
Presentation features	22
Optimizing video images	23
Customizing the projector	23
Using the menus	24
Basic Menu	25
Advanced Menu	26
Controlling the projector through a LAN environment	30
Controlling the projector remotely through a web browser	31
Displaying images through iFPresenter	35
Displaying pictures with a USB storage device	38
Maintenance	40
Cleaning the lens	40
Using the security lock	40
Replacing the projection lamp	41

Important Operating Considerations for Safety

- Refer to this guide for proper startup and shutdown procedures.
- Follow all warnings and cautions in this manual and on the projector.
- Place the projector in a horizontal position no greater than 15 degrees off axis.
- Locate the projector at least 4' (1.2m) away from any heating or cooling vents.
- Do not block ventilation openings. Locate the projector in a well-ventilated area without obstructions to intake or exhaust vents. Do not place the projector on a tablecloth or other soft covering that may block the vents.
- Do not place the projector in direct sunlight, humid, greasy or dusty places or in places where the projector may come into contact with smoke or steam.
- Do not touch or block the projector lens with any objects as this can damage the projector lens. Scratches, gouges and other lens damage are not covered by the product warranty.
- Do not look directly into the lens while the projector is being used.
- Do not drop the projector.
- Do not spill liquid on the projector. Spilled liquid may damage the projector.
- Use the power cord provided. Connect the power cord to a receptacle with a protective safety (earth) ground terminal. A surge-protected power strip is recommended.
- Do not overload wall outlets.
- When disconnecting the power cord, hold the plug, not the cord.
- Wash hands after handling the cables supplied with this product.
- The projector remote control uses batteries. Make sure the batteries' polarity (+/-) is aligned correctly. Dispose of used batteries in accordance with local disposal laws.
- Use an InFocus approved ceiling mount kit for proper fitting, ventilation and installation. The warranty does not cover any damage caused by use of non-approved ceiling mount kits or by installing in an improper location.
- When the projector is ceiling mounted, wear protective eyewear to prevent eye injury before opening lamp door.

- Refer all service to qualified service personnel. Servicing your own projector can be dangerous to you and will void the warranty.
- Only use replacement parts specified by InFocus. Unauthorized substitutions may result in fire, electrical shock, or injury, and may void the warranty.
- Only genuine InFocus lamps are tested for use in this projector. Use of non InFocus lamps may cause electrical shock and fire, and may void the projector warranty.
- Hg – Lamp contains mercury. Manage in accordance with local disposal laws. See www.lamprecycle.org.
- The projector uses a high-pressure mercury glass lamp. The lamp may fail prematurely, or it may rupture with a popping sound if jolted, scratched, or handled while hot. The risk of lamp failure or rupture also increases as the lamp age increases; please replace the lamp when you see the "Replace Lamp" message.
- In the unlikely event of a lamp rupture, particles may exit through the projector vents. Keep people, food, and drinks out of the "keep out" area under and around the projector, as indicated by the "X" areas below.

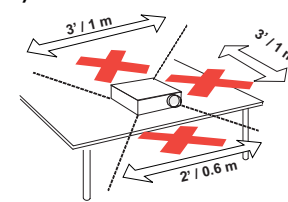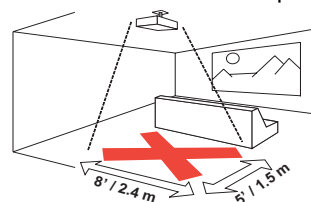

- Follow these instructions to help ensure image quality and lamp life over the life of the projector. Failure to follow these instructions may affect the warranty. For complete details of the warranty, see the Warranty/Safety booklet.

Introduction

Your new digital projector is simple to connect, easy to use, and straightforward to maintain. It is a versatile projector that is flexible enough for business presentations and home video viewing too. IN3128HD has native 1920 x 1080 resolution. It is compatible with a wide variety of computers and video devices.

Product specifications



To read the latest specifications on your multimedia projector, be sure to visit our website at www.infocus.com, as specifications are subject to change.

Accessories

The standard accessories that came with your projector are listed in the included Quick Start documentation. Optional accessories can be found on our website at www.infocus.com/support or at your retailer or dealer.

Online registration


Register your projector on our website at www.infocus.com/register to activate your warranty and receive product updates, announcements, and registration incentives.

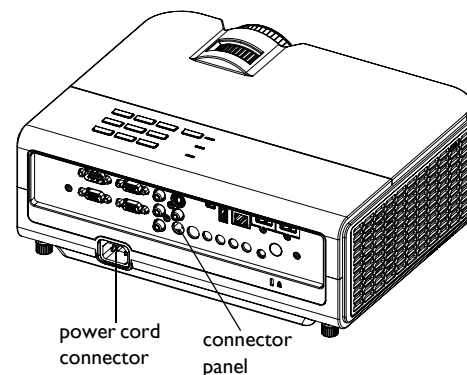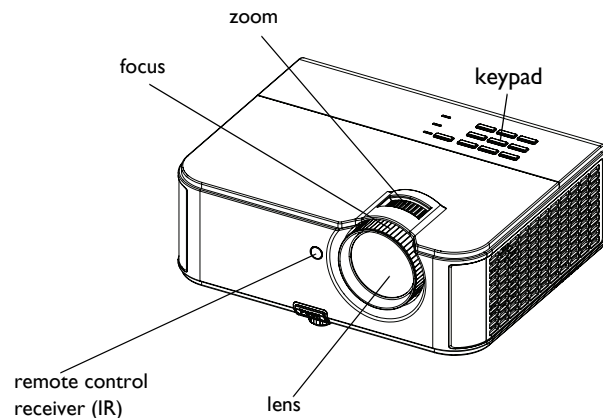

Connector panel

The projector provides both computer and video connection options, including:

- HDMI (2)
- VGA computer (2)
- Component video
- S-video
- Composite video
- Monitor out (for external monitors)
- Audio inputs (1 RCA; 2 3.5mm)
- Audio output
- Microphone input
- USB A (for JPEG presentations from a USB flash drive, for connecting a mouse, keyboard or wireless adapter, and for firmware upgrades)
- USB mini B (for presentation slide control)
- LAN (RJ45 for network control and video over LAN)
- 12 volt DC output (max. 0.75A; for screen trigger)
- RS232 (Serial command codes available at www.infocus.com/support)

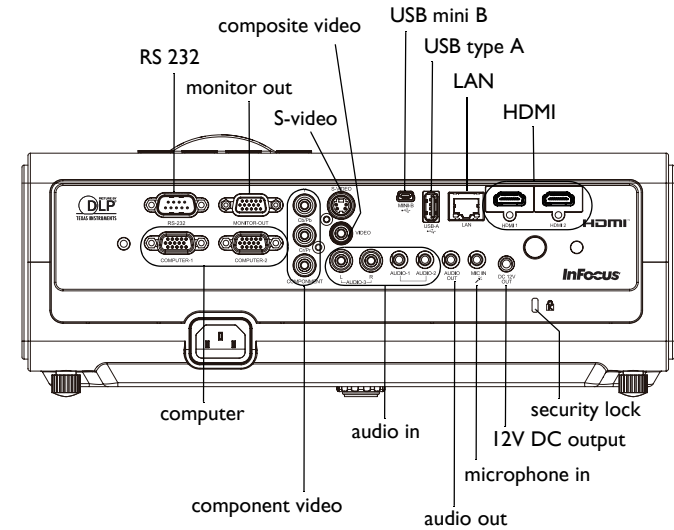

Positioning the projector

To determine where to position the projector, consider the size and shape of your screen, the location of your power outlets, and the distance between the projector and the rest of your equipment. Here are some general guidelines:

- Position the projector on a flat surface at a right angle to the screen. It must be at least 48" (1.2m) from the projection screen.
- If you are installing the projector on the ceiling, we strongly recommend using InFocus approved ceiling mounts for proper fitting, ventilation and installation. Refer to the installation guide that comes with the InFocus Ceiling Mount Kit (p/n PRJ-MNT-UNIV) for more information. The warranty does not cover any damage caused by use of non-approved ceiling mount kits or by installing in an improper location. To turn the image upside down, see "Ceiling mount" on page 26. We recommend using an InFocus authorized ceiling mount.
- Position the projector the desired distance from the screen. The distance from the lens of the projector to the screen and the video format determine the size of the projected image.
- The image offset is 134% +/-5%. This means that if you have an image 60 inches (1.5 meters) tall from a table-mounted projector, the bottom of the image will be 20.4 inches (51.8 cm) above the centerline of the lens.


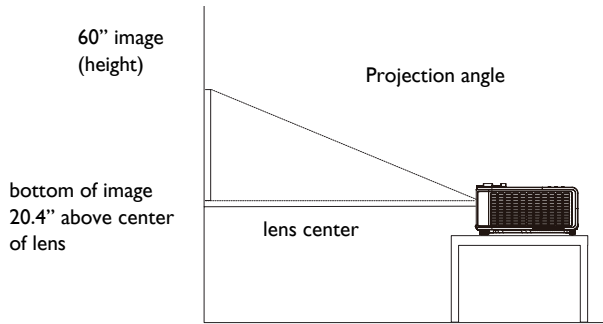


Table 1: IN3128HD (1080P) Screen size

Diagonal Screen Size (inches/m)	Size of the Projected Image Width (inches/m)	Distance to screen	
		Minimum distance (inches/m)	Maximum distance (inches/m)
40"/1.0m	35"/0.9m	48"/1.2m	72"/1.8m
60"/1.5m	52"/1.3m	72"/1.8m	108"/2.7m
80"/2.0m	70"/1.8m	96"/2.4m	144"/3.7m
100"/2.5m	87"/2.2m	120"/3.1m	180"/4.6m
150"/3.8m	131"/3.3m	180"/4.6m	270"/6.9m

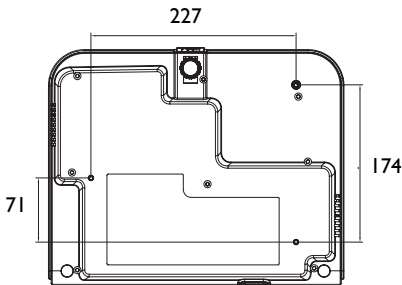

Ceiling mount screws:
M4x8 (Max. L= 8mm)
Unit: mm

Connecting a computer source

VGA connection

Connect one end of the provided computer cable to the **Computer 1/Computer 2** connector on the projector and the other to the VGA connector on your computer. If you are using a desktop computer, you will need to disconnect the monitor cable from the computer's video port first.

HDMI connection

HDMI is a standard, uncompressed, all-digital audio/video interface. HDMI provides an interface between sources, such as set-top boxes, DVD players, and receivers and your projector. Plug an HDMI cable into the video-out connector on the video device and into either the **HDMI 1** or **HDMI 2** connector on the projector.

Connecting power

Connect the black power cord to the **Power** connector on the rear of the projector and to your electrical outlet. If the Power Saving Mode feature is off, the Power LED on the Status Indicator Panel (page 11) blinks blue. If the Power Saving Mode feature is on, the Power LED is steady blue. By default, this feature is off. You can change the setting, see page 27. **NOTE:** Always use the power cord that shipped with the projector.

Optional computer connections


To get sound from the projector, connect an audio cable (optional cable, not included) to your computer and to the **Audio 1** or **Audio 2** connector on the projector. You may also need an adapter.

If you are using a desktop computer and want to see the image on your computer screen as well as on the projection screen, connect to the desktop's computer cable to Computer 1 and the desktop's monitor cable to the **Monitor out** connector on the projector.


connect VGA cable




connect HDMI

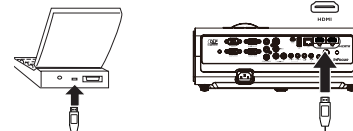

connect power

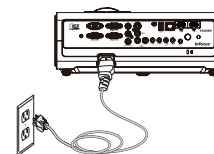

connect audio cable

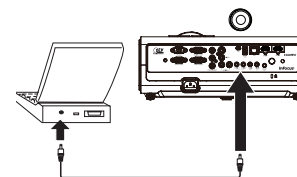

Displaying an image

Press the **Power** button.

The Power LED lights blue, and the fans start to run. When the lamp comes on, the start up screen displays. It can take up to a minute for the image to achieve full brightness.

No start up screen? Get help on page 12.

Turn on your computer or video device.

The image should appear on the projection screen. If it doesn't, press the **Source** button on the projector's keypad or remote.

If you are using a VGA cable to connect your computer to the projector:


If using a laptop, make sure its external video port is active.

Many laptops do not automatically turn on their external video port when a projector is connected. Usually a key combination like FN + F8 or CRT/LCD key turns the external display on and off. Locate a function key labeled CRT/LCD or a function key with a monitor symbol. Press FN and the labeled function key simultaneously.



Refer to your laptop's documentation for more information about your laptop's key combination.

No laptop image? Try pressing the **Auto** button on the projector's keypad or **Auto Image** button on the remote. Get help on page 12.

press Power button

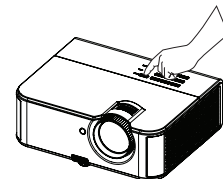


turn on computer or video device

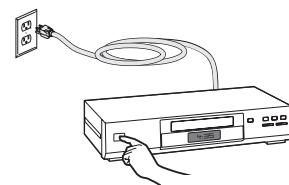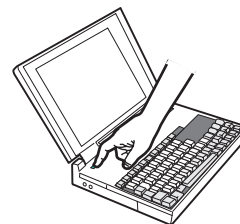

activate laptop's external port



monitor key or
LCD/CRT key

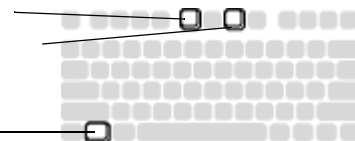

FN key

Adjusting the image

If necessary, adjust the height of the projector by pressing the elevator foot release button to extend the foot.

If necessary, rotate the leveling feet located at the rear of the projector.

Position the projector the desired distance from the screen at a 90 degree angle to the screen.

See page 6 for a table listing screen sizes and distances.


Adjust the zoom or focus.

If the image is not square, first make sure that the projector is perpendicular to the screen. If the image is larger or smaller on the top or bottom edge of the screen, press the top **Keystone** button to reduce the upper part of the image, and press the bottom **Keystone** button to reduce the lower part.


If the left or right side of the screen is larger or smaller the other, you can turn the projector to the left or to the right a few degrees to square the image.

Adjust the Contrast or Brightness in the Basic Menu. See page 25 for help with these menu adjustments.

adjust height

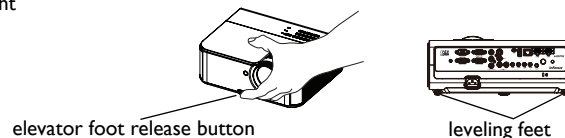

adjust distance

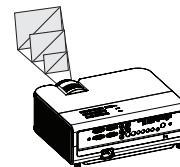


adjust zoom and focus



adjust keystone



adjust Basic Menu

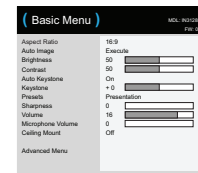

Connecting a video device

You can connect video devices such as VCRs, DVD players, camcorders, digital cameras, video game consoles, HDTV receivers, and TV tuners to the projector. You can connect the audio directly to the projector to get sound from the built-in speaker, or you can bypass the projector's audio system and connect the audio directly from your source to a stereo or home theater system.

You can connect the projector to most video devices that can output video. You cannot directly connect the coaxial cable that enters your house from a cable or satellite company, the signal must pass through a tuner first. Examples of tuners are digital cable boxes, VCRs, digital video recorders, and satellite TV boxes. Basically, any device that can change channels is considered a tuner.

Before connecting your projector, you should decide which aspect ratio you want to use. The projector's Aspect Ratio setting is accessed through the Resize button on the remote or through the projector's Basic Menu. See page 25 for more information.

Video device connections

No video cables are provided with the projector. You can order cables from InFocus or provide your own.

HDMI connection

HDMI is a standard, uncompressed, all-digital audio/video interface. HDMI provides an interface between sources, such as set-top boxes, DVD players, and receivers and your projector. Plug an HDMI cable into the video-out connector on the video device and into one of the HDMI connectors (HDMI 1 or HDMI 2) on the projector.

Composite video connection

Plug the composite video cable's yellow connector into the video-out connector on the video device. Plug the other yellow connector into the yellow **Video** connector on the projector.

VGA connection

If your video device has a 15-pin VGA output, plug one end of the included computer cable into the VGA connector on your video source. This connector may be labeled "To Monitor" on the video source. Plug the computer cable into either the **Computer 1** or **Computer 2** connector on the projector.

Component video connection

If your HD video device has component connectors, connect one end of an RCA Component cable to the component video output connectors of the Video source device. Plug the other end of the RCA Component cable to the **Y Cb/Pb Cr/Pr** connectors on the projector.

You may use an optional Component to VGA adapter. Plug the component cable into the video device. Plug the other end of the component cable into the adapter and plug the adapter into the **Computer 1** or **Computer 2** connector.

S-video connection

Plug the S-video cable's connector into the video-out connector on the video device. Plug the other connector into the **S-Video** connector on the projector.

Audio

For PC audio jack, connect a 3.5mm stereo cable to the **Audio 1** or **Audio 2** connector on the projector and to your source. If your source uses RCA audio connectors, a Y-cable or adapter may be used. For RCA audio jack, connect a RCA stereo cable to the **Audio/L** and **Audio/R** connectors on the projector and to your source. (Note: A separate audio connection is not required for HDMI source inputs.)

Shutting down the projector

Auto Off Time

The projector also has an Auto Off Time feature that automatically turns the projector off after no active sources are detected and no user interaction with the projector is performed for 30 minutes. By default, this feature is off. You can change the length of time, see page 27.

Turning off the projector

To turn the projector off, press the **Power** button on the remote or keypad. The lamp turns off and the Power LED blinks blue for 1 minute while the fans continue to run to cool the lamp. If the Power Saving Mode feature is on and when the lamp has cooled, the LED lights blue and the fans stop. If the Power Saving Mode feature is off and when the lamp has cooled, the LED blinks blue and the fans stop. Unplug the power cable to completely power off the projector.






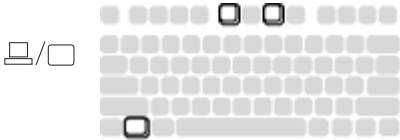
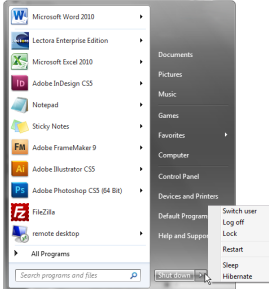
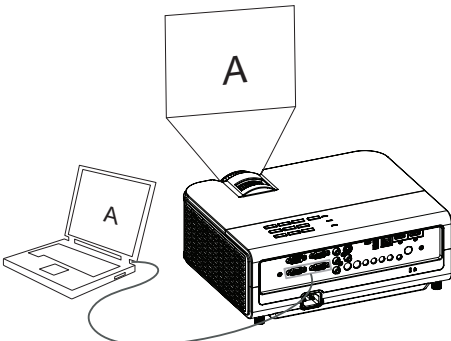
Troubleshooting your setup

If your image appears correctly on the screen, skip to the next section. If it does not, troubleshoot the setup.

The Status Indicator Panel on top of the projector indicates the state of the projector and can help you troubleshoot.


Table 2: Status indicator light behavior and meaning

Status Indicator Light	Meaning
POWER: Solid blue	1. If the Power Saving Mode feature is on, the projector is plugged in. 2. The projector is on and initialized. 3. The projector is in normal operation.
POWER: Blinking blue	1. If the Power Saving Mode is off, the projector is plugged in. 2. The projector is powering down and the fans are cooling the projector.
POWER: Blinking blue TEMP: Blinking red LAMP: Blinking red	The projector fan(s) are not operating correctly and the projector has been shut down.
POWER: Solid blue TEMP: Blinking red LAMP: Blinking red	The lamp failed to ignite. Contact Technical Support if the problem persists. Visit www.infocus.com/support to contact service.
POWER: Solid blue TEMP: Off LAMP: Blinking red	The lamp has reached its end of life and must be replaced. The lamp will continue to operate until it fails. Contact Technical Support. Repair may be needed.
POWER: Solid blue TEMP: Blinking red LAMP: Off	1. The projector is overheating and the lamp will be shut off. The fans will continue to run. 2. The projector will not turn back on until the cooling process is complete.

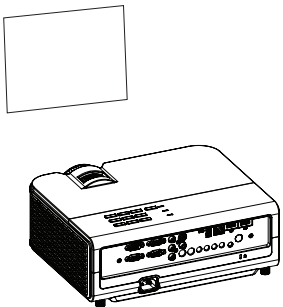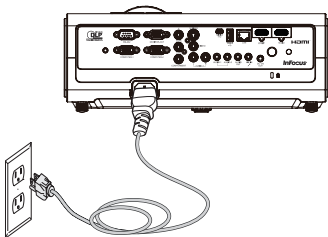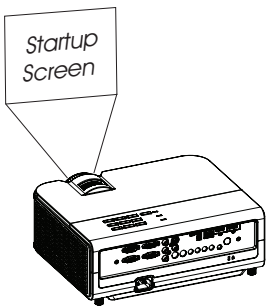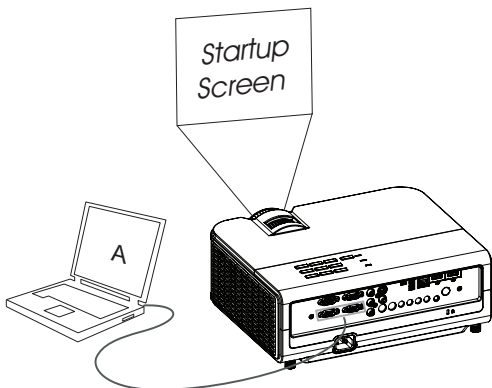Problem	Solution	Result
<p>No start up screen</p> 	<p>Plug power cord into the projector press power button</p> 	<p>Correct image</p> 
<p>Only start up screen appears</p> 	<p>Press the Source button  activate laptop's external port</p>  <p>Restart laptop</p> 	<p>Computer image projected</p> 


Problem

No computer image, just the words “Signal out of range”

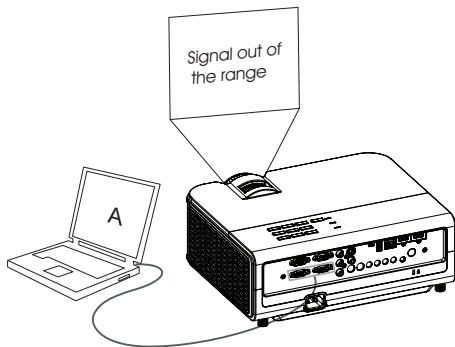

Solution


Press the Auto Image button on remote
Adjust computer refresh rate (Windows 7: Control Panel > Display > Screen Resolution > Advanced Settings > Adapter tab). Varies per operating system.

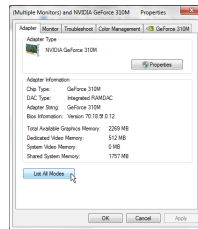


You may also need to set a different resolution on your computer, as shown in the following problem, “image fuzzy or cropped”

Result


Computer image projected

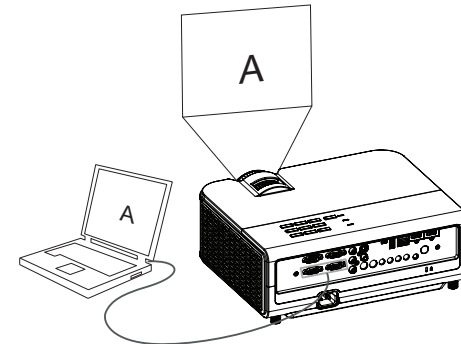


Only my laptop's background appears, not the Desktop icons


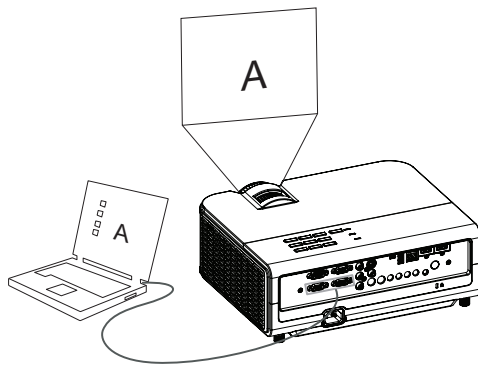

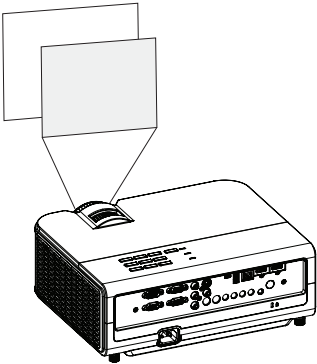
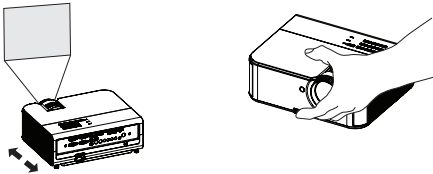
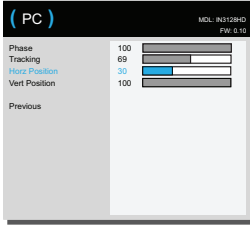
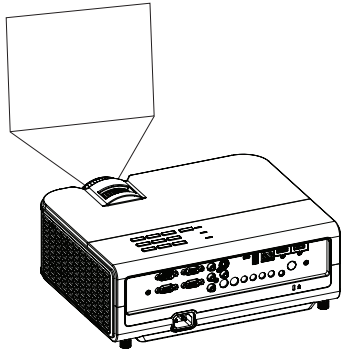



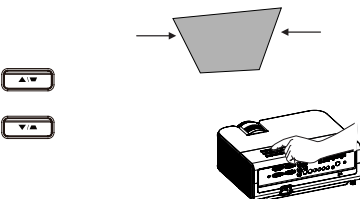


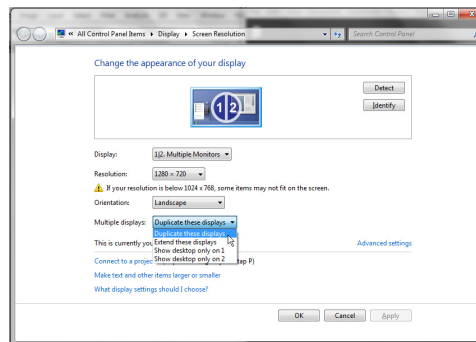

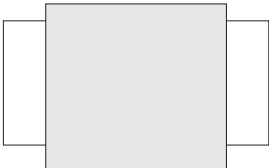
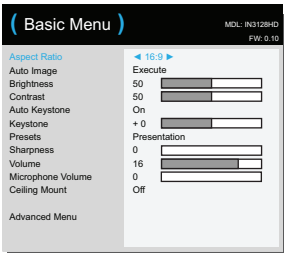
 
Change the Multiple Display setting to "Duplicate these displays" (Windows 7: Control Panel > Display > Screen Resolution). Varies per operating system.


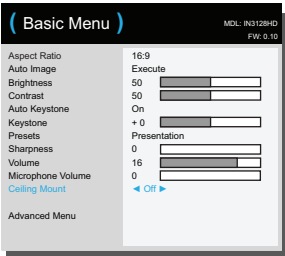


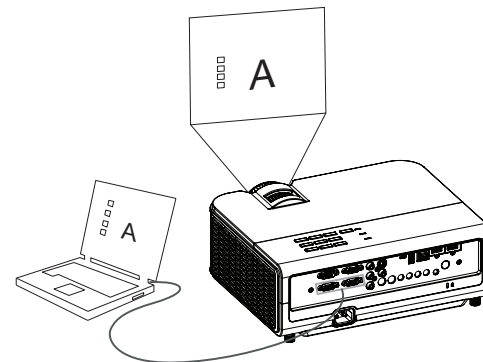


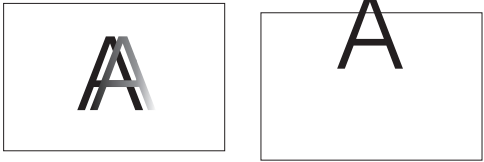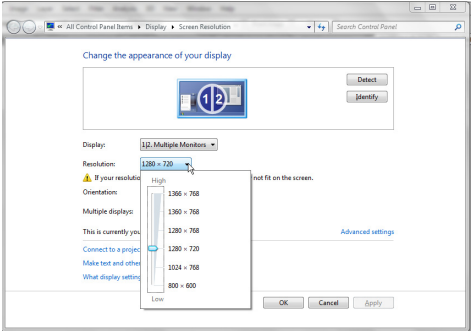



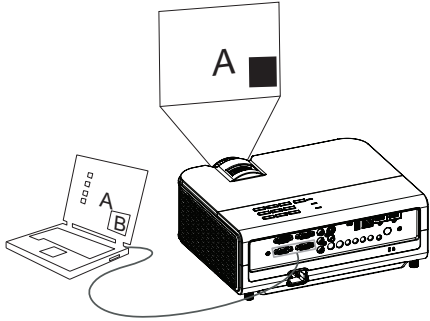
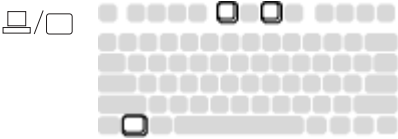
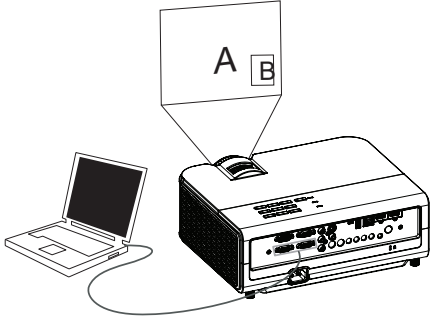
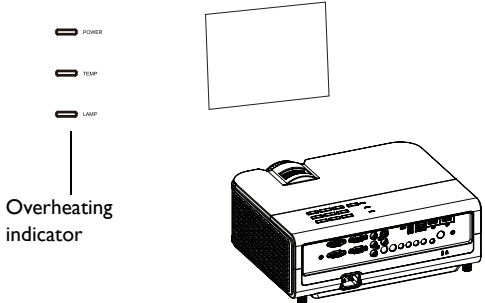
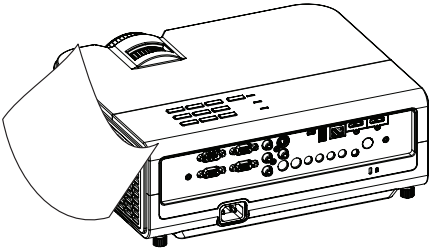
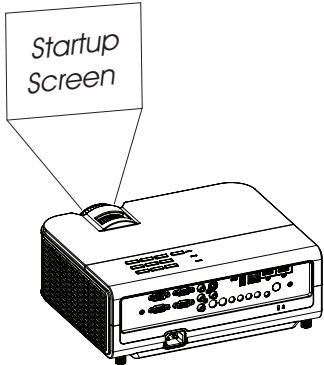
Background and Desktop projected



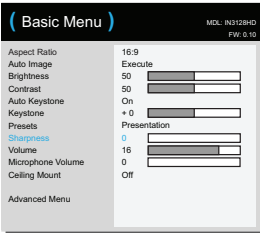


Problem	Solution	Result
<p data-bbox="43 112 286 143">Image fuzzy or cropped</p> <div data-bbox="72 246 557 406">  </div>	<p data-bbox="591 95 1154 210">Change the computer's "Resolution" setting to match the projector's resolution (Windows 7: Control Panel > Display > Screen Resolution). Varies per operating system.</p> <div data-bbox="644 221 1116 551">  </div>	<p data-bbox="1168 112 1466 143">Image clear and not cropped</p> <div data-bbox="1308 282 1551 443">  </div>
<p data-bbox="43 583 347 614">Image not centered on screen</p> <div data-bbox="149 676 466 1037">  </div>	<p data-bbox="591 577 897 608">Move projector, adjust height</p> <div data-bbox="687 630 1121 802">  </div> <p data-bbox="647 881 838 990">Adjust horizontal or vertical position in Advanced Menu > Image > PC menu</p> <div data-bbox="897 831 1147 1055">  </div>	<p data-bbox="1168 577 1328 608">Correct image</p> <div data-bbox="1277 687 1621 1037">  </div>

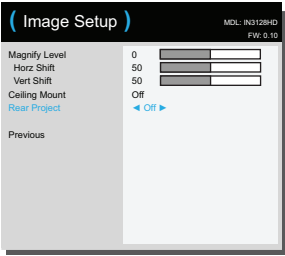Problem	Solution	Result
Image not square 	Adjust Keystone on keypad 	Square image 
Image not sharp 	Adjust Sharpness in the Basic Menu 	Correct image 
Image does not fit 4:3 or 16:9 screen 	Change aspect ratio to 4:3 or 16:9 in Basic Menu > Aspect Ratio menu 	Correct image 

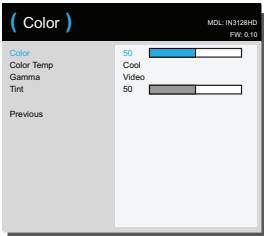Problem	Solution	Result
<p>Image upside down</p> 	<p>Turn off Ceiling Mount in Basic menu</p> 	<p>Correct image</p> 
<p>Image reversed left to right</p> 	<p>Turn off Rear Project in Advanced Menu > Setup > Image Setup menu</p> 	<p>Correct image</p> 
<p>Projected colors don't match source</p> 	<p>Adjust the items in the Advanced Menu > Image > Color menu</p> 	<p>Correct image</p> 

Problem	Solution	Result
<p>The video embedded in my PowerPoint presentation does not play on the screen</p> 	<p>Turn off the internal LCD display on your laptop</p> 	<p>Embedded video plays correctly</p> 
<p>Lamp won't turn on, the projector is overheating</p> 	<p>Make sure vents aren't blocked, turn off the projector and allow it to cool for one minute</p> 	<p>Lamp turns on</p> 

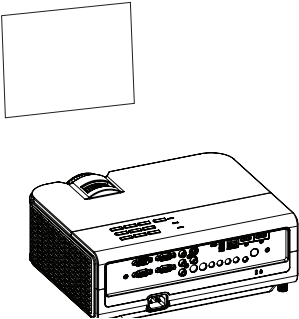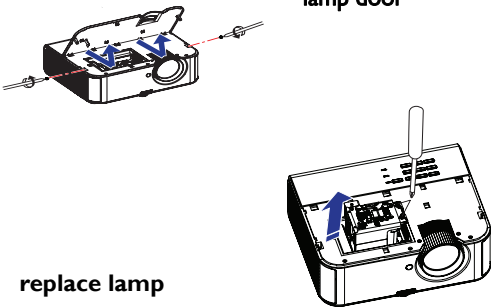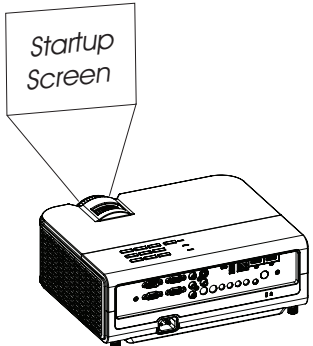Problem	Solution	Result
<p data-bbox="48 101 531 153">“Replace lamp” message appears at startup, lamp won’t turn on</p> 	<p data-bbox="604 105 968 133">Lamp must be replaced (see page 40)</p>  <p data-bbox="951 153 1055 181">lamp door</p> <p data-bbox="666 438 812 466">replace lamp</p>	<p data-bbox="1182 96 1326 123">Lamp turns on</p>  <p data-bbox="1326 165 1420 234">Startup Screen</p>

Still need assistance?

If you need assistance, visit our website at www.infocus.com/support or call us. See the Warranty/Safety booklet for support contact information.

This product is backed by a limited warranty. An extended warranty plan may be purchased from your dealer. When sending the projector in for repair, we recommend shipping the unit in its original packing material, or having a professional packaging company pack the unit. Please insure your shipment for its full value.

Using the remote control

The remote uses two (2) AAA batteries (not provided). They are easily installed by removing the cover from the remote's back, aligning the + and - ends of the batteries, sliding them into place, and then replacing the cover.

Caution:

- When replacing the remote batteries, be aware that using batteries other than AAA batteries may risk severe damage to the remote. When disposing of the batteries, be sure to do so in an environmentally proper manner.
- If the remote control gets wet, wipe it dry immediately.
- Avoid excessive heat and humidity.
- Ensure the batteries' polarity (+/-) is aligned correctly.
- Do not mix new and old batteries together, or mix different types of batteries together.
- Replace the batteries as soon as they run out.
- Remove batteries from the remote control when storing or not in use for a prolonged period.

To operate, point the remote at the front of the projector (not at the computer). The range of optimum operation is about 15 feet (4.5m).

Press the remote's **Power** button to turn the projector on and off (see page 11 for shutdown info).

Press the remote's **Menu** button to open the projector's menu system. Use the arrow buttons to navigate, and the **Select** button to select features and adjust values in the menus. See page 24 for more info on the menus.


The remote also has:

- **Volume** buttons adjust the sound.
- **Custom** button that can be assigned to a special function, like Blank Screen or Freeze (see page 26).
- **Source** button brings up a menu of all possible sources allowing the user to switch the active source.
- **Blank** button to blank the screen.
- **Presets** button to select stored settings (see page 25).
- **Mute** button to silence the audio.

- **Auto Image** button to resynch the projector to the source.
- **Resize** button to switch among aspect ratios (see page 25).
- **Help** button to get help with connecting sources and improving the picture.
- **ESC** button to go back to previous OSD menu.
- **PC** button to cycle through the Computer sources.
- **Video** button to cycle through Composite/S-Video/HDMI input sources.
- **Keystone** buttons adjust the squareness of the image
- **Magnify** buttons magnify and reduce the projected picture size.
- **Freeze** button to pause the projected image.
- **Overscan** button remove noise around the video image.
- **AV Mute** button blanks the projected image and mutes audio.

Troubleshooting the remote

- Make sure the batteries are installed in the proper orientation and are not dead.
- Make sure you're pointing the remote at the projector or the screen, not the computer, and are within the remote range of 15 feet (4.5m). For best results, point the remote at the projector.

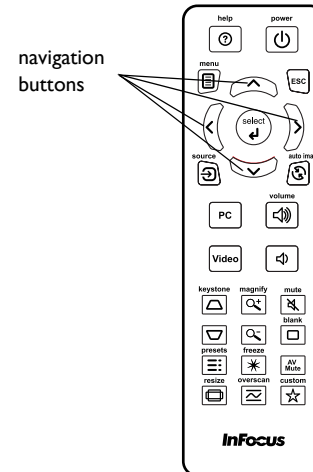

Using the audio

Using the projector's speakers

Connect the audio source to the Audio 1, Audio 2 or Audio L/R connectors to hear audio through the projector speakers. You may use the projector's speakers by connecting a microphone to the Microphone input connector.

Amplified speakers may also be connected to the projector using the Audio Out connector.


To adjust the volume, press the **Volume** buttons on the remote.

Troubleshooting Audio


If you aren't hearing the audio, check the following:

- Make sure the audio cable is connected to the Audio In or Audio L/R connectors on the projector, and that the other end of the cable is connected to an Audio Out connector on the source (not a "line-in" or "microphone" connector).
- Make sure the volume is turned up enough. Press the **Volume** button on the remote.
- Make sure the correct source is active.
- Adjust the audio source.
- If playing a video, make sure the playback has not been paused.


connect PC audio cable

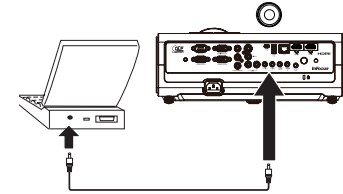

connect video source audio cable

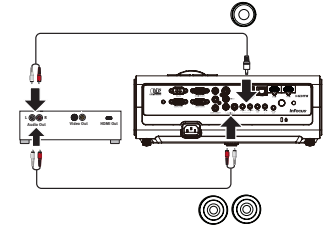

connect microphone

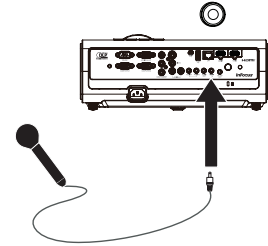

Using the keypad buttons

Most buttons are described in detail in other sections, but here is an overview of their functions:

Power—turns the projector on and off (page 8).

Auto—resynchronize the projector to the source.

Menu—opens the onscreen menus (page 24).


Enter—acts as a Select button in the OSD menu and is used for USB storage device operation (page 37).

Up/Down/Left/Right arrows—When the menu is displayed, the up and down buttons navigate through the menu; the left and right buttons are used for adjustment. The left button also allows you to go back to the previous menu.

Keystone—adjusts the squareness of the image (page 9).

Source—brings up a menu of all possible sources allowing the user to switch the active source (page 8).

Blank—blanks the screen.

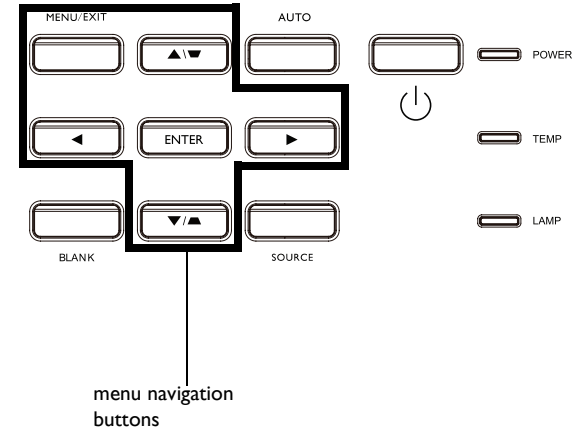

Optimizing computer images

After the projector is running and the image is on the screen, you can optimize the image using the onscreen menus. For general information on using the menus, see page 24.

- Select default image settings using a preset appropriate to your environment.
- Adjust the Keystone, Contrast, or Brightness (page 25).
- Change the Aspect Ratio. Choose the option that best fits your input source (page 25).
- Adjust the Color Temperature (page 26).
- Adjust the Phase, Tracking, or Horizontal or Vertical position (page 26).
- Once you have optimized the image for a particular source, you can save the settings using User Presets. This allows you to quickly recall these settings later (page 25).

Presentation features

Several features are provided to make giving presentations easier. Here is an overview, details are found in the menu section.

- The Custom key allows you to assign various features to the button. The default effect is Source Info, which displays information about the projector and current source. See page 26 for details.
- The Search Screen option lets you change the appearance of the blank screen and start up screen (page 27).
- Auto Off Time is provided to automatically shut down the projector after several minutes. This helps preserve lamp life (page 27).

Optimizing video images

After your video device is connected properly and the image is on the screen, you can optimize the image using the onscreen menus. For general information on using the menus, see page 24.

- Adjust the Keystone, Contrast, Brightness, Color, or Tint (page 25).
- Change the Aspect Ratio. Choose the option that best fits your input source (page 25).
- Select a Sharpness setting (page 25).
- Adjust the Color Temperature. Select a listed warmth value (page 26).
- Turn on Overscan to remove noise on the edges of the image (page 26).

Customizing the projector

You can customize the projector for your specific setup and needs. See page 26 for details on these features.



- For rear projection, turn Rear Project on in the Advanced Menu > Setup > Image Setup menu.
- For ceiling mounted projection, turn Ceiling Mount on in the Basic menu.
- Specify which source the projector checks first for active video during power-up in the Advanced Menu > Setup > Sources menu.
- Specify the function of the Custom key on the remote.
- Turn the projector's display messages on and off.
- Turn on power saving features.
- Specify appearance of blank screen and startup screen.
- Specify the language viewed on the menus.
- Save settings for the active source as a User Preset.

Using the menus


- 1 To open the menus, press the **Menu** button on the keypad or remote. (The menus automatically close after 60 seconds if no buttons are pressed.) Use the arrow buttons to move up and down to review the menu options.
- 2 To enter a submenu, highlight the desired submenu and press **Enter** on the keypad or remote.
- 3 To adjust a menu setting, highlight the desired menu option and press < or > to scroll through the available adjustments.
- 4 Press the **Menu** button to exit the menu system.

The menus are grouped by usage:

- The Basic Menu provides common adjustments.
- The Advanced Menu provides more complex adjustments.

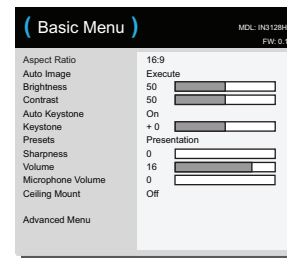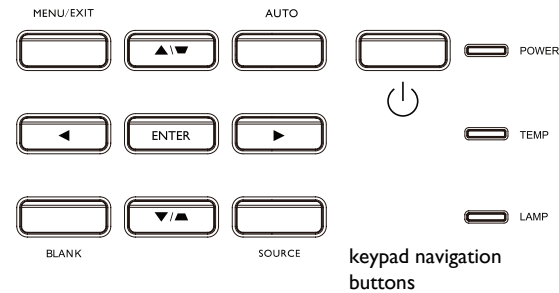

Basic Menu

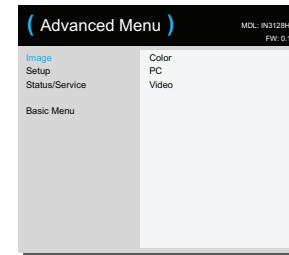

Advanced Menu

Basic Menu

To adjust the following settings, highlight the setting, use the right and left arrows to adjust the values.

Aspect Ratio: Aspect ratio is the ratio of the image width to image height. TV screens are usually 4:3. HDTV and most DVDs are 16:9.

Select Auto to have the projector choose the ratio. Choose Native to see the unmodified input with no resizing by the projector. Select 16:9 to watch enhanced widescreen DVDs.

Auto Image: resets the projector to the source.

Brightness: changes the intensity of the image.

Contrast: controls the degree of difference between the lightest and darkest parts of the picture and changes the amount of black and white in the image.

Auto Keystone: enables and disables the projector's automatic vertical keystone adjustment.

Keystone: adjusts the image vertically and makes a squarer image. You can also adjust keystone from the keypad.

Presets: Presets are provided that optimize the projector for displaying computer presentations and video images under certain conditions. Note: Choosing User allows users to save their settings current settings as a User Preset. User Presets can be retrieved by pressing the Presets button on the remote and toggling to User.



Sharpness: Changes the clarity of the edges of a video image. Select a sharpness setting.

Volume: increases or decreases the audio volume.

Microphone Volume: adjusts the microphone sound level.

Ceiling Mount: turns the image upside down for ceiling-mounted projection.

Basic Menu

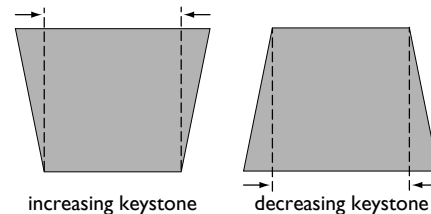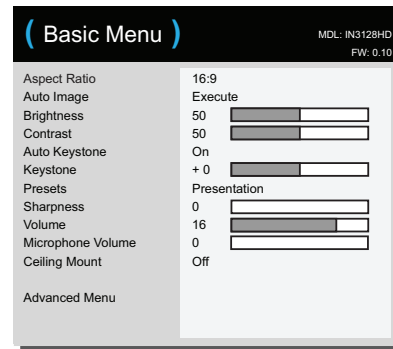

Advanced Menu

Advanced Menu

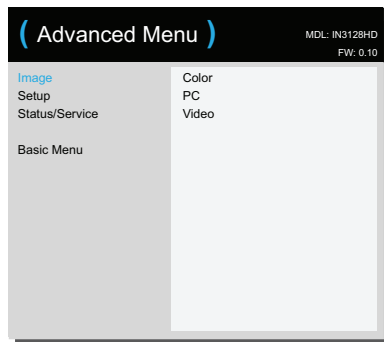


Image:

Color...

Color: adjusts a video image from black and white to fully saturated color. The color setting applies to video sources only.

Color Temp: changes the intensity of the colors. Select a listed relative warmth value.

Gamma: select the appropriate gamma from among Video, Film, Bright, and CRT.

Tint: adjusts the red-green color balance in the image of NTSC video images. The tint setting applies to NTSC video sources only.

PC:

Phase: adjusts the horizontal phase of a computer source.

Tracking: adjusts the vertical scan of a computer source.

Horz/Vert Position: adjusts the position of a computer source.

Video:

Overscan: removes noise around the video image.

Setup:

Audio Setup...

Computer 1: selects the audio input for Computer in 1 signal.

Computer 2: selects the audio input for Computer in 2 signal.

Video Source: selects the audio input for video source.

HDMI 1: select the audio input for HDMI 1 signal.

HDMI 2: select the audio input for HDMI 2 signal.

Closed Captioning...

Closed Captions: controls closed captioning. If the source is NTSC and contains captions on the selected channel, then the projector will display caption text overlaid on the image. When Closed Captions is off and volume is muted, closed captioning will appear. Options are: Off, CC1 and CC2.

Image Setup...

Magnify Level: magnifies the image. If the image has been magnified by this setting, it can be moved by changing the **Horz Shift** and **Vert Shift** settings.

Ceiling Mount: turns the image upside down for ceiling-mounted projection.

Rear Project: reverses the image so you can project from behind a translucent screen.

Keypad/Remote Settings...

Blank Key: select either a solid blue, black or white screen to display when the blank key on the keypad or remote is pressed.

Custom Key: allows you to assign a different function to the Custom button, allowing you to quickly and easily use the effect. Press < or > on the keypad or remote to choose a different one.

- **Blank Screen:** displays a solid color screen.
- **Mute:** turns off all sound.
- **Source:** brings up a menu of available sources.
- **Auto Image:** resets the projector to the source.
- **Freeze Screen:** pauses the projected image.

- **Source Info:** the default action. Shows the Source Info menu.
- **Projector Info:** shows the Projector Info menu.
- **Overscan:** removes noise around the image.
- **AV Mute:** enables or disables AV Mute function.
- **Closed Captions:** enables or disables Closed Captions.

Keypad: enables or locks the projector keypad.

Lamp...

Lamp Low Power: toggles between on and off. Turn it on to lower the light output of the lamp. This also lowers the fan speed, making the projector quieter.

OSD Setup...

Language: allows you to select a language for the onscreen display.

Menu Position: allows you to change the position of the On Screen Display items.

Menu Transparency: allows you to change how much of the projected image behind the menu you can see. As the value increases, more of the image behind the menu is visible.

Show Messages: displays status messages (such as “Searching”) in the lower-left corner of the screen.

PIN Settings

PIN Protect: The PIN (personal identification number) feature allows you to password protect your projector. Once you enable the PIN feature, you must enter the PIN before you can project an image. Use the **Up/Down/Left/Right** arrows buttons on the remote or keypad to set a 4-button press sequence. If you enter an incorrect PIN 3 times in succession, the projector will automatically shut down. If you lose or forget your custom PIN, contact InFocus Technical Support.

To enter the PIN at projector startup:

Power up the projector. The “**Enter PIN**” dialog box displays after the startup screen. Enter the PIN. Use the **Up/Down/Left/Right** arrows buttons on

the remote or keypad to enter the correct 4-button press sequence. The default code is **Left/Right/Up/Down**.

To change the PIN:

Select “**Change PIN...**” in the Advanced Menu > Setup > PIN settings menu. Enter the existing PIN. Enter the new PIN.

Power

Power Saving Mode: When the Power Saving Mode is On and the projector is in standby (powered off but connected to AC power), the monitor out function will not work. When the Power Saving Mode is On and the projector is Off, the LAN control will not work. **NOTE:** The Power LED does not blink when Power Saving Mode is enabled.

Source

Auto Source: When this feature is On, the projector automatically finds the active source, checking the selected Power-up Source first. When this feature is Off, the projector defaults to the source selected in Power-up Source. To display another source, you must manually select one by pressing the **Source** button on the remote or keypad and selecting one from the displayed Source menu.

Power-up Source: determines which source the projector checks first for active video during power-up.


Search Screen: allows you to display a solid color screen (blue, black or white), or the factory logo screen at startup, and when no source is detected.

Timer

Auto Off Time: automatically turns the projector off after no signals are detected for a preset number of minutes. If an active signal is received before the projector powers down, the image will be displayed.

High Altitude Setting

High Altitude Setting: We recommend you turn on the High Altitude Mode when your environment is between 5000' (1500m) and 10,000' (3000m) above sea level.

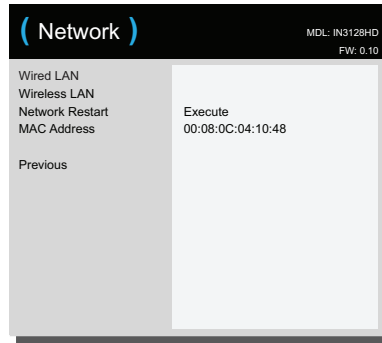

Network

Allow you to configure the network settings.

Wired LAN

Status: Display the projector's status.

DHCP: Abbreviation for Dynamic Host Configuration Protocol. This protocol automatically assigns IP Addresses to networked devices.

- When the "DHCP" is set to "On", the DHCP server will assign an IP address to the projector automatically. This may take up to a minute.
- When the "DHCP" is set to "Off", the user will need to set the IP address manually.

IP Address: The numerical address used to identify devices on the network. This is only accessible when **DHCP** is set to **Off**.

- The IP Address is the number that identifies this projector on the network. You cannot have two devices with the same IP Address on the same network.
- The IP Address "0.0.0.0" is prohibited.

Subnet Mask: A numeric value defining the number of bits used in an IP Address when the network is divided into subnets. This function can only be used when DHCP is set to Off.

- The Subnet Mask "0.0.0.0" is prohibited.

Default Gateway: A server (or router) to communicate across networks (subnets) that are divided by a Subnet Mask. This function can only be used when DHCP is set to Off.

DNS: Setup DNS server address when DHCP is disabled.

Apply: Save and execute the wired network settings.

Wireless LAN

Status: Display the projector's status.

SSID: Display the projector's SSID information.

Connection Mode: Methods for connecting to wireless networks with Wi-Fi enabled devices.

IP Address: a read-only display of IP Address.

Network Restart: Restart network settings.

MAC address: Abbreviation for Media Access Control Address. Mac Address is a unique ID number assigned to each network adapter.

DC 12V Trigger

DC 12V Trigger: If this feature is enabled and you connect your projection screen to this output using the cable that came with your screen, the screen will move down when the lamp is turned on and the screen will return to its storage position, when the lamp is turned off.

Status/Service:

Source Info: a read-only display of current source settings.

Projector Info: a read-only display of current projector settings.

Reset Lamp Hours....: resets the lamp hours used counter in the Projector Info menu to zero. Do this only after changing the lamp.


Factory Reset....: restores all settings to their factory default settings.

Service Code....: only used by authorized service personnel.

Controlling the projector through a LAN environment

The projector supports Crestron[®] software. With correct settings for the **Network** menu, you can manage the projector from a computer using a web browser when the computer and the projector are properly connected to the same local area network.

Wired connection

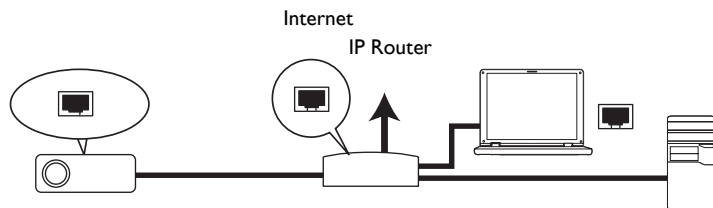

Configuring the LAN control setting

If you are in a DHCP environment:

- 1 Take a RJ45 cable and connect one end to the RJ45 LAN input jack of the projector and the other end to the RJ45 port.
- 2 Press **Menu** on the keypad or remote and then go to **Advanced Menu > Setup > Network > Wired LAN** menu.
- 3 Press v to highlight **DHCP** and press < or > to select **On**.
- 4 Press v to highlight **Apply** and press >.
- 5 Please wait for around 15 - 20 seconds, and then re-enter the **Wired LAN** page. The **IP address, Subnet Mask, Default Gateway** and **DNS** settings will be displayed. Write down the IP address displayed in the **IP address** row.
 - If the Projector IP Address still does not display, contact your network administrator.
 - If the RJ45 cables are not properly connected, the IP Address, Subnet Mask, Default Gateway and DNS settings will display 0.0.0.0. Make sure the cables are properly connected and perform the procedures above again.


- If you need to connect to the projector in its standby mode, set the **Power Saving Mode** feature to **Off**.

If you are in a non-DHCP environment:

- 1 Repeat steps 1-2 above.
- 2 Press v to highlight **DHCP** and press < or > to select **Off**.
- 3 Contact your network administrator for information on the **IP address, Subnet Mask, Default Gateway** and **DNS** settings.
- 4 Press ^ or v to select the item you want to modify.
- 5 Press < or > to move the cursor and then press ^ or v to select the value.
- 6 Press v to highlight **Apply** and press > to save the settings.
 - If the RJ45 cables are not properly connected, the IP Address, Subnet Mask, Default Gateway and DNS settings will display 0.0.0.0. Make sure the cables are properly connected and perform the procedures above again.
 - If you wish to connect to the projector in its standby mode, be sure to select RJ45 and obtain the IP Address, Subnet Mask, Default Gateway and DNS information when the projector is on.

Wireless connection

InFocus wireless dongle
(p/n SP-WIFIUSB)

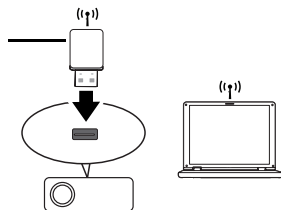

To connect to the projector wirelessly, you have to plug an InFocus wireless dongle (optional) to the USB Type A connector on the projector, and then only a few OSD configuration steps are required.

 
- 1 Make sure the projector is turned on.
- 2 Press **Menu** on the keypad or remote and then go to **Advanced Menu > Setup > Network > Wireless LAN** menu.
- 3 Make sure the **Status** is **Connect**.
- 4 Make sure the **SSID** information is displayed.
- 5 In **AP** mode, you need to use your computer's wireless connection utility to search the projector's SSID and connect to it. Then you can search the projector with ifPresenter. To use **Infrastructure** mode, you should connect both your computer and projector to the same AP router and make connections with the IP address.

Controlling the projector remotely through a web browser


Once you have the correct IP address for the projector and the projector is on or in standby mode, you can use any computer that is on the same local area network to control the projector.

- If you are using Microsoft Internet Explorer, make sure it is version 7.0 or higher.
- The screenshots in this manual are for reference only, and may differ depending on your browser.

- 1 Enter the address of the projector in the address bar of your browser and press **Enter**.




- 2 The main page of the Network Control displays.

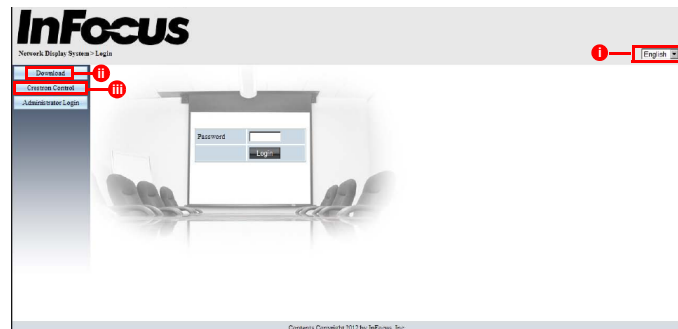

- i. To change the language for the web pages, click the down arrow to reveal a drop down list and select a desired language.
- ii. To download ifPresenter, click Download. See page 34 for details.

iii. The Crestron (eControl) page displays the Crestron eControl user interface. See page 31 for details.

- 3 To access the Admin page, enter the password. The default password is “admin”. If you forget the password, please go to Advanced Menu > Setup > Network > Network Restart to restore the password to the default code.

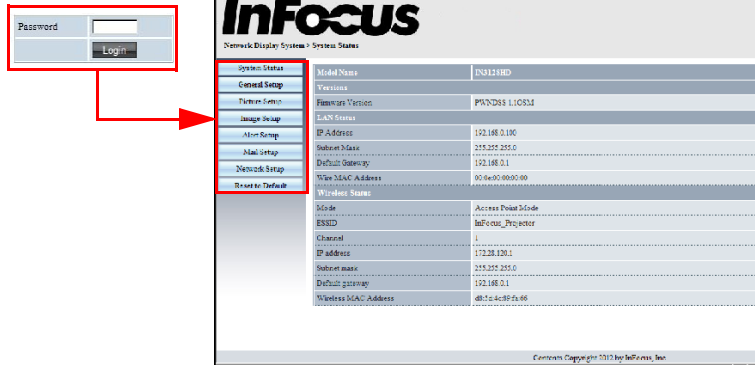

About Crestron e-Control®

- i The **Crestron e-Control®** page provides a variety of virtual keys to control the projector or adjust the projector's image.



You can press </> to reveal more buttons.

- **System Status:** Displays the system information.
- **General Setup:** Allows you to turn on/off the projector, switch the input signal for the projector, and change the password for the Administrator page.
- **Picture Setup/Image Setup:** Provides some OSD menu items for adjusting the projected pictures. See page 24 for details.
- **Alert Setup/Mail Setup:** Allows you to setup the mail server and send system error messages to your network administrator.
- **Network Setup:** Provides wired and wireless network settings.
- **Reset to Default:** Allows you to restore the device to the factory default settings.

- i. These buttons function the same as the OSD menus and remote control functions.
- **Source List:** To switch the source, click on the desired source.
- **Menu:** Use to go back to the previous OSD menu, exit and save menu settings.
- When you use the projector control panel or remote control to change the OSD menu settings, it may take a while for the web browser to synchronize these changes with the projector.

- 2 The **Tools** page allows you to manage the projector, configure the LAN control settings and remotely access the network operations of this projector.


- i. This area is only used with a Crestron Control System. Please contact Crestron or refer to the Crestron user manual for setup information.
 - ii. This area is used for naming the projector, associating it with a particular location, assigning a responsible party to it, and adjusting network settings.
 - iii. This area is used to set User and Admin passwords. When password protection is enabled, unauthorized changes to the projector configuration will be avoided.
- To prevent errors, only enter alphanumeric characters on the **Tools** page.
 - After configuring the settings, press the **Send** button and the data will be saved in the projector.
 - Press **exit** to go back to the Crestron remote network operation page.

Please pay attention to the input length and character limitations (including character and punctuation restrictions) listed below:

	Input-Length	Maximum Number of Characters
Crestron Control	IP Address	15
	IP ID	2
	Port	5
Projector	Projector Name	10
	Location	9
	Assigned To	9
Network Configuration	DHCP (Enabled)	(N/A)
	IP Address	15
	Subnet Mask	15
	Default Gateway	15
	DNS Server	15
User Password	Enabled	(N/A)
	New Password	20
	Confirm	2
Admin Password	Enabled	(N/A)
	New Password	20
	Confirm	20

- / > < \$ % + \ ' " are prohibited.

3 The **Info** page displays the information and status of this projector.

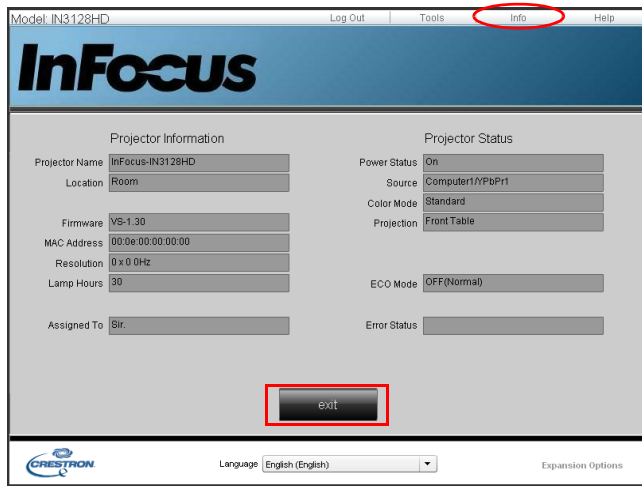


Press **exit** to go back to the Crestron remote network operation page.

4 After pressing the **Help** button, the **Help Desk** window will display in the upper right corner of the screen. You will be able to send messages to RoomView™ software administrators/users who are connected to the same local area network.

- For more information, visit <http://www.crestron.com> and www.crestron.com/getroomview.

Crestron RoomView

From the Crestron RoomView software in the **Edit Room** page, enter the IP Address (or hostname) as shown on the projector's on-screen display (OSD) menu, "05" for IPID, and "41794" for the reserved Crestron control port.

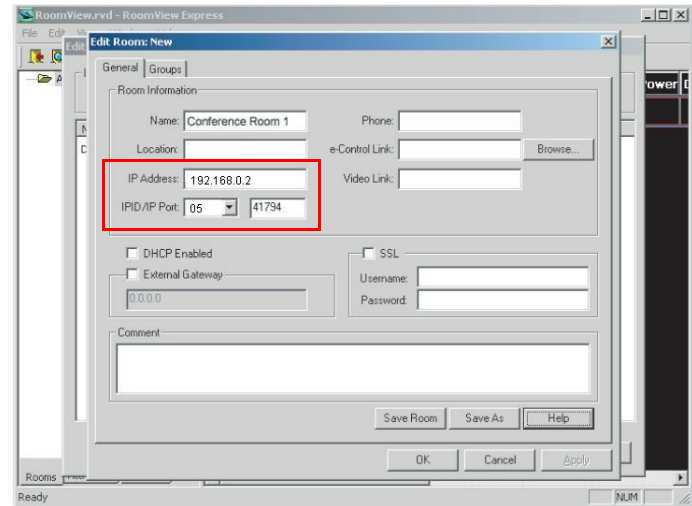

For the Crestron RoomView user guide and information about RoomView settings and commands, go to: http://www.crestron.com/products/roomview_connected_embedded_projectors_devices/resources.asp


Displaying images through ifPresenter

Downloading and installing ifPresenter


The ifPresenter is an application which can run on the host PC. It helps connect your computer to an available network projector and transfer the desktop content to the network projector via local network connection.

- 1 Enter the main page of Network Control. See steps 1-2 on page 30 for details.
- 2 Download ifPresenter.
- 3 When the download is complete, install the software to your computer by clicking the exe file. Follow the on-screen instructions to complete the installation.
- 4 Launch ifPresenter.

Using ifPresenter

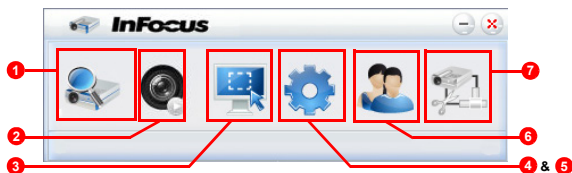


- 1 The Search page allows you to search and connect to a projector.

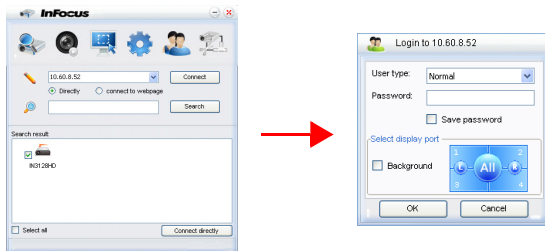

- i. To connect to a projector, select **Connect Directly** then type the projector's IP Address and click **Connect**.


- ii. To search for projectors, simply click **Search** to list all the projectors on the same local area network. Click the desired projector in the Search result list, and click **Connect directly**. You can also type a desired projector name and click **Search**.
 - iii. You can link to the InFocus webpage control system on page 30.
 - If you are a first time user, choose your identity as a **Normal user** or **Administrator**. Neither requires a password. However if you choose to be an Administrator, you have the authority to set a password for connecting to the projector. That password should be written down and used to connect to the same projector.
 - If there are multiple computers connected to the projector, you can decide a display zone by clicking **I**, **2**, **3**, **4**, **L**, **R**, **All**, or **Background**.
- 2 If you want to freeze the projected image on the screen, press . Any further movements will be not been seen on the screen until is pressed.

- 3 You can choose a capture mode from here.

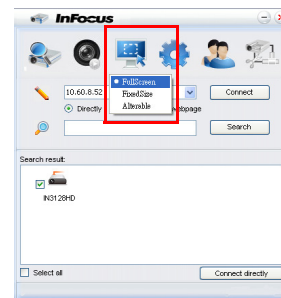


- i. To display a full screen, click **FullScreen**.
- ii. To display a partial screen, click **FixedSize**. A square appears on your screen. You can place it where you want to project.
- iii. If you wish to change the square, click **Alterable**.

4 The Basic Setting page allows you to configure ifPresenter.

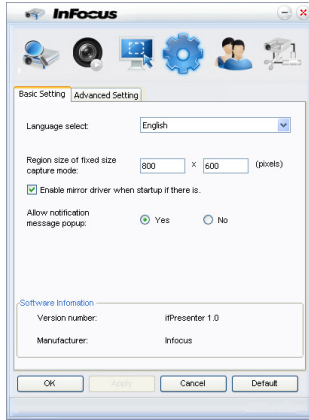


- i. To change the ifPresenter interface language, click the down arrow to reveal a drop-down list and select a desired language. Click **Apply**.
- ii. Users can change the size parameters of the frame in **FixedSize** capture mode by modifying width and height on this page and click **Apply** to make changes take effect.
- iii. User can use the mirror driver for presenter capture image, if the system has installed the mirror driver.
- iv. To allow notification messages to appear, click **Yes**. Click **Apply**.
- v. The Software Information is available on this page.

5 The Advanced Setting page allows you to configure ifPresenter.

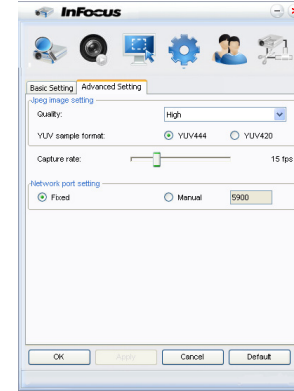

- i. To adjust the image quality, click the down arrow to reveal a drop-down list and select a desired quality level. The higher image quality you select, the higher network transfer speed is required. Select a YUV sample format between YUV444 and YUV420. Compared to format YUV420, format YUV 444 provides better image quality but may slow the loading and playing speed. Click **Apply** after your selections.
- ii. To adjust the capture rate, move the slide bar. The network bandwidth may also affect the performance.
- iii. Network port setting for fixed or manual type.

6 You can manage the connected projectors listed under Device Management.

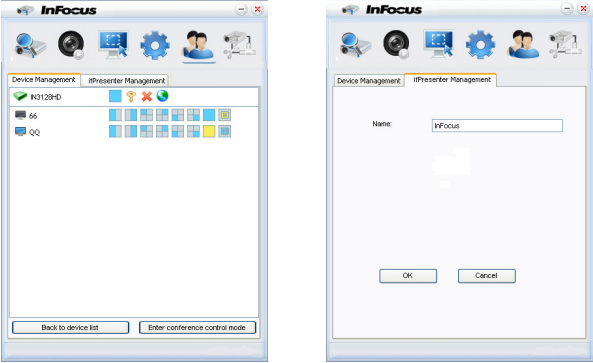

- Under a conference mode:
 - 1 Only the administrator can take control.
 - 2 A projector can display up to 4 computer screens.
- You can set the name of your computer under ifPresenter Management.

- For details about the icons, please see the following:

Icon	Description	Icon	Description
	You are a standard user and cannot change the password.		Disconnects from the projector.
	You are an administrator and can change the password.		Opens the web page of the Network Control.
	You are in control of the projector.		Someone else is controlling the projector.
	You are an administrator.		You are a standard user.

Change display port to:

OK Cancel

Sets a display zone for the projector.

7 Disconnect

To disconnect from the projector(s), click the **Disconnect** icon.

- Be sure to turn off other virtual network control programs before using ifPresenter.

Displaying pictures with a USB storage device

The projector has a built-in application which can display images from a USB storage device. It can eliminate the need for a computer source.


The projector supports the following image formats:

File format	Maximum pixel size
JPEG	8000 x 8000
GIF/TIFF/PNG/BMP	1280 x 800

- Progressive JPEG files are not supported.
- Some JPEG files may not display clearly.

To display images from a USB storage device:

- 1 Plug the USB storage device into the USB Type A connector.
- 2 Press the Source button and choose the USB A (Type-A) input. Note: If no other sources are connected and Auto Source is on, the projector will automatically select the USB A source.
- 3 Folders and supported files are displayed in thumbnail view.

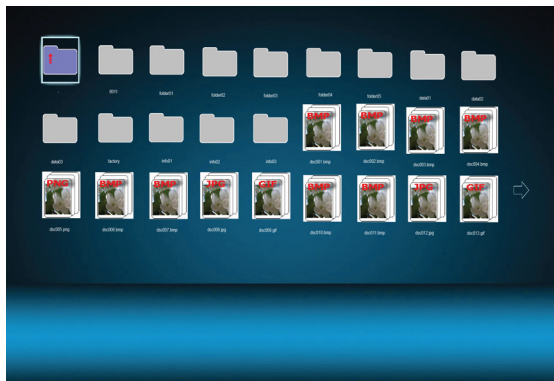

- To scroll through the thumbnails, use the arrow keys on your remote or the projector keypad.

- To open a file, highlight the file and press **Enter**. Press **Enter** again to close the file.
- To go back to the previous screen, select the thumbnail with an up arrow in the top left corner of the screen, and press **Enter**. To exit when you are displaying an image, press **Enter** or **Menu > Thumbnail**.
- To access additional USB display options, press the **Menu** button. To close the USB Display menu, press the **Menu** button again.
- To choose or cancel a menu option, use the left and right arrow buttons to highlight the option. Use the up and down arrow buttons to make a selection and press the **Enter** button.

When viewing thumbnails



- **Next:** Selects the next folder/image.
- **Previous:** Selects the previous folder/image.
- **Thumbnail/Display/SlideShow:** Displays the selected image(s) in Thumbnail, Full Screen or SlideShow mode.
- **NameOrder/ExtendOrder/SizeOrder/TimeOrder:** Sets the images to be displayed in the order of filenames, filename extension, file sizes, or time the photos were taken.
- **EXIF OFF/EXIF ON:** When On, displays the EXIF image information.
- **FileName ON/FileName OFF:** When On, displays the file's path and file name.

When viewing slide shows

 


- **Stop:** Stops the slide show.
- **NEXT:** Selects the next image.
- **Previous:** Selects the previous image.
- **Delay 3/Delay 4/Delay 5:** Sets the amount of time each image displays. Delay 3 displays each image for 3 seconds. Delay 4 displays each image for

approximately 8 seconds. Delay 5 displays each image for approximately 13 seconds. NOTE: The actual display time varies based on the file size.


- **Slide Right/Slide Up/Right Down/XLines/YLines/Blocks:** Sets the way the slide show is displayed.
- **Repeat On/Off:** Sets whether to repeat the slide shows.

When viewing full screen images



- **Thumbnail/Display/SlideShow:** Displays the selected image(s) in Thumbnail, Full Screen or SlideShow mode.
- **Best Fit/Actual Size:** Sets the display size of the image.
- **EXIFDisp OFF/EXIFDisp ON:** When On, displays the EXIF image information.
- **+ 90deg:** Rotates the image 90 degrees clockwise.
- **- 90deg:** Rotates the image 90 degrees counterclockwise.
- USB 2.0 compliant USB storage media (Mass Storage Class) is supported.
- We strongly recommend using an AC power adaptor with any USB hard drives.
- The following formats are recommended for any USB hard drives. FAT12/FAT16/FAT32 (NTFS format is not supported).

- Some USB flash drives may not work correctly with the projector.
- A security-enabled USB flash drive is not supported.
- Do not connect any apparatus other than USB storage devices. Do not charge other equipment through the USB connector. It may cause a malfunction.
- The projector plays up to 200 files in a folder.
- The filenames are displayed in the following order: symbols, digits, letters.
- The projector can display the filenames up to 16 characters including the file extension.
- The application displays English filenames the best. If the files are named in other languages, the filenames may not show properly, however the content will still display properly.
- Folders in the USB storage device can be recognized up to 3 layers. The priority of thumbnail display for image files is as follows:

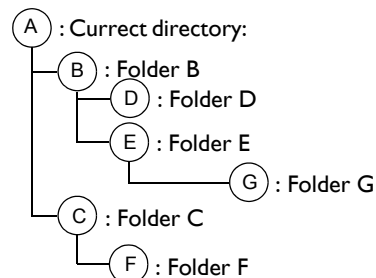


File display priority in folder: A > B > C > D > E > F.
Folder G: Cannot be displayed

- Response times may vary depending on the image contents when switching pages, loading and playing files.

Maintenance

Cleaning the lens

- 1 Apply a non-abrasive camera lens cleaner to a soft, dry cloth.
 - Projector must be off and the lens must be at room temperature.
 - Avoid using an excessive amount of cleaner, and don't apply the cleaner directly to the lens. Abrasive cleaners, solvents or other harsh chemicals might scratch the lens.
- 2 Lightly wipe the cleaning cloth over the lens in a circular motion.

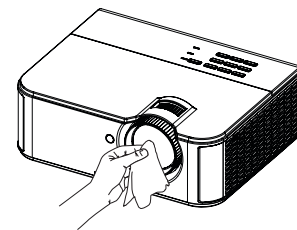


WARNINGS:

- Turn the projector off and unplug power cord before cleaning any part of the projector.
- Do not touch or block the projector lens with any objects as this can damage the projector lens. Scratches, gouges and other lens damage are not covered by the product warranty.
- Do not open any cover on the projector, except the lamp cover.
- Do not attempt to service this product yourself as opening and removing covers may expose you to dangerous voltage and other hazards. Refer all servicing to qualified service personnel.

Using the security lock

The projector has a security lock for use with a Cable Lock System. Refer to the information that came with the lock for instructions on how to use it.

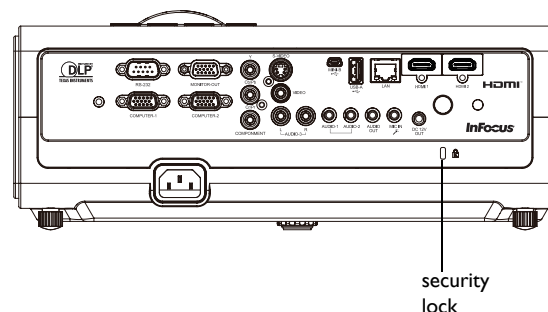

Replacing the projection lamp

The Lamp Hours timer in the Projector Info menu counts the number of hours the lamp has been in use. Twenty hours before the lamp life expires, the message “Replace lamp” displays on the screen at startup.



- **NOTE:** Be sure to use the InFocus lamp module designed for this projector. You can order new lamps from www.infocus.com (in select areas), your retailer or your dealer. **Only genuine InFocus lamps are tested for use in this projector.** Use of non InFocus lamps may cause electrical shock and fire, and may void the projector warranty. InFocus is not liable for the performance, safety or certification of any other lamps.

WARNINGS:

- The projector uses a high-pressure mercury glass lamp. The lamp may fail prematurely, or it may rupture with a popping sound if jolted, scratched, or handled while hot. The risk of lamp failure or rupture also increases as the lamp age increases; please replace the lamp when you see the “Replace Lamp” message.
- To avoid burns, allow the projector to cool for at least 60 minutes before you replace the lamp.
- Do not touch or block the projector lens with any objects as this can damage the projector lens. Scratches, gouges and other lens damage are not covered by the product warranty.
- Unplug the power cord before replacing the lamp.
- Do not drop the lamp module. The glass may shatter and cause injury.
- Do not touch the glass surface of the lamp module. Fingerprints can obscure projection sharpness and may cause the glass to shatter.
- Be extremely careful when removing the lamp housing. In the unlikely event that the lamp ruptures, small glass fragments may be generated. The lamp module is designed to contain most of these fragments, but use caution when removing it.
- Before replacing a ruptured lamp, clean the lamp compartment and dispose of cleaning materials. Wash hands after lamp replacement.
- When replacing the lamp while the projector is ceiling-mounted, wear protective eyewear to prevent eye injury.

Hg – Lamp contains mercury. Manage in accordance with local disposal laws. See www.lamprecycle.org.

- 1 Turn off the projector and unplug the power cord.
- 2 Wait 60 minutes to allow the projector to cool thoroughly.
- 3 Remove the lamp door, located on top of the projector, by removing the screws on either side of the lamp door, sliding the door forward, and lifting the lamp door off.
- 4 Loosen the captive screws that attach the lamp housing to the projector.
NOTE: If the projector is installed on a ceiling mount, be careful not to drop the lamp module once the captive screws are loosened.
- 5 Carefully lift the lamp straight up, off of the alignment pins; being careful not to pinch the lamp connector. Dispose of the lamp in an environmentally proper manner.
- 6 Install the new lamp module, aligning the pins properly. Be careful not to pinch the lamp connector.
- 7 Tighten the screws. (**NOTE:** If the pins have not been aligned properly, the screws will not tighten securely.)
- 8 Replace the lamp door by (a) aligning the door (b) sliding it towards the back and (c) locking it back into place.
- 9 Replace the lamp door screws and tighten securely.
- 10 Plug in the power cord and press the Power button to turn the projector back on.
- 11 To reset the lamp hour timer, navigate to the **Advanced Menu > Status/Service** menu and select **Reset Lamp Hours....**

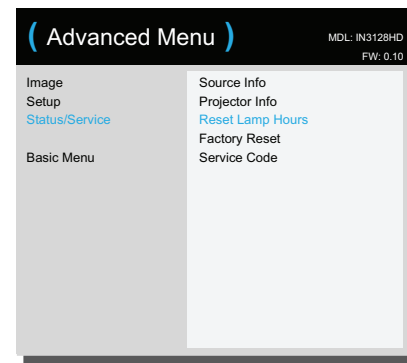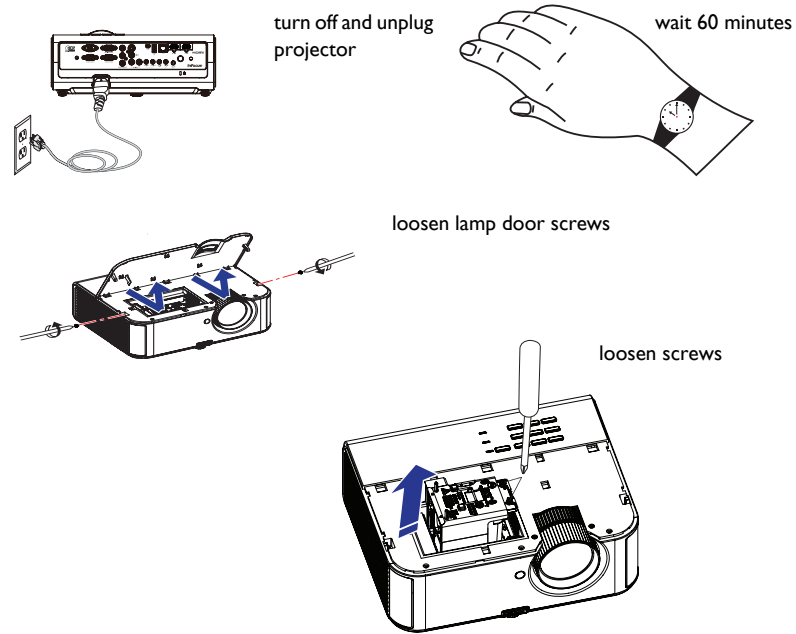

INDEX

A

Apply 28
Aspect Ratio 25
Audio In Computer connector 7
Auto Image 25
Auto Keystone 25
Auto Off Time 27
Auto Source 27
AV Mute 27

B

Blank Key 26
Blank Screen 26
Brightness 25

C

Cable box 10
Ceiling Mount 26
Closed Captions 26, 27
Computer In connector 7
Connecting
Video device 10
Connection Mode 28
Contrast 25
Crestron e-Control® 31
Crestron RoomView 33

D

DC 12V Trigger 28
Default Gateway 28
Detect Film 26
DHCP 28
Digital Zoom 26
DNS 28

F

Factory Reset 28
Focus 9

Freeze Screen 26

G

Gamma 26

H

HDTV 25
High Altitude Setting 27
Horz/Vert Position 26

I

ifPresenter 30
IP Address 28

K

Keypad 27
Keypad buttons 21
Keystone 25

L

Lamp Low Power 27
LAN 29

M

Magnify Level 26
Menu Transparency 27
Menu usage 24
Microphone Volume 25
Mute 26

N

Network 28

O

Overscan 26, 27

P

Phase 26
PIN Protect 27
Power connector 7
Power cord 7
Power Saving Mode 27
Projector
Keypad buttons 21
Menus 24

Positioning 6
Setting up 6
Troubleshooting problems | |
Projector Info 27, 28

R

Rear Project 26
Remote control | 9
Resetting the projector 28

S

Screen Aspect | 0
Search Screen 27
Service 28
Set Black Level... 26
Sharpness 25
Show Messages 27
Source 26
Source Info 27, 28
SSID 28
Status 28
Subnet Mask 28

T

Tint 26
Tracking 26
Troubleshooting | |

U

USB 5

V

Volume 25
Volume button 20

W

Warranty | 8
Web browser 30
Wired LAN 28
Wireless connection 30
Wireless LAN 28

Z

Zoom 9