



Table of Contents

| | |
|--|----|
| Table of Contents | 1 |
| Usage Notice..... | 2 |
| Safety Information | 2 |
| Precautions..... | 3 |
| Eye Safety Warnings | 5 |
| Introduction..... | 6 |
| Product Features | 6 |
| Package Overview..... | 7 |
| Product Overview | 8 |
| Main Unit..... | 8 |
| Control Panel | 9 |
| Connection Ports | 10 |
| Remote Control..... | 11 |
| Installation | 12 |
| Connecting the Projector | 12 |
| Connect to Computer/Notebook | 12 |
| Connect to Video Sources | 13 |
| Powering On/Off the Projector..... | 14 |
| Powering On the Projector..... | 14 |
| Powering Off the projector | 15 |
| Warning Indicator..... | 15 |
| Adjusting the Projected Image..... | 16 |
| Adjusting the Projector's Height..... | 16 |
| Adjusting the Projector's Zoom / Focus | 17 |
| Adjusting Projected Image Size | 17 |
| User Controls | 18 |
| Control Panel & Remote Control | 18 |
| On-screen Display Menus | 21 |
| How to operate | 21 |
| Menu Tree..... | 22 |
| Image | 23 |
| Display | 29 |
| Setup..... | 33 |
| Options..... | 39 |
| Appendices..... | 43 |
| Troubleshooting..... | 43 |
| Image Problems | 43 |
| Intermission Problems | 46 |
| Projector Status Indication | 46 |
| Remote Control Problems | 48 |
| Replacing the Lamp..... | 49 |
| Compatibility Modes | 51 |
| RS232 Commands | 52 |
| Ceiling Mount Installation | 55 |
| Optoma Global Offices | 56 |
| Regulation & Safety notices | 58 |

Safety Informations

| | |
|---|---|
|  | The lightning flash with arrow head within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. |
|  | The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. |

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE PROJECTOR TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

Class B emissions limits

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Important Safety Instruction

1. Read these instructions -before using this projector.
2. Keep these instructions -for future reference.
3. Follow all instructions.
4. Install in accordance with the manufacturer's instructions :
 - A. Do not block any ventilation openings.** To ensure reliable operation of the projector and to protect it from overheating, put the projector in a position and location that will not interfere with its proper ventilation. For example, do not place the projector on a bed, sofa, carpet, or similar surface that may block the ventilation openings. Do not put it in an enclosure, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
 - B. Do not use this projector near water or moisture.** To reduce the risk of fire or electric shock, do not expose the projector to rain or moisture.
 - C. Do not install near any heat sources,** such as radiators, heaters, stoves or other apparatus (including amplifiers) that produce heat.
5. Clean only with a dry cloth.
6. Only use attachments/accessories specified by the manufacturer.
7. Refer all servicing to qualified service personnel. Servicing is required when the projector has been damaged in any way, such as:
 - Power supply cord or plug is damaged.
 - Liquids have spilled or objects have fallen into the apparatus.
 - The projector has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not attempt to service this projector yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Optoma to be referred to an authorized service center near you.
8. Do not let objects or liquids enter the projector as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
9. See projector enclosure for safety related markings.
10. The projector should not be adjusted or repaired by anyone except properly qualified service personnel.

Precautions



Please follow all warnings, precautions and maintenance as recommended in this user's guide.

- Warning- Do not look into the projector's lens when the lamp is on. The bright light may damage your eyes.
- Warning- To reduce the risk of fire or electric shock, do not expose this projector to rain or moisture.
- Warning- Please do not open or disassemble the projector as this may cause electric shock.
- Warning- When replacing the lamp, please allow unit to cool down, and follow all replacement instructions. See pages 49-50.
- Warning- This projector will detect the life of the lamp itself. Please be sure to change the lamp when it shows warning messages.
- Warning- Use the "Lamp Reset" function from the on-screen display "Options | Lamp Settings" menu after replacing the lamp module (refer to page 42).
- Warning- When switching the projector off, please ensure the cooling cycle has been completed before disconnecting the power. Allow 90 seconds for the projector to cool down.
- Warning- Do not use the lens cap when projector is in operation.
- Warning- When the lamp is approaching to the end of its life, the message "Lamp Warning: Lamp life exceeded." will show on the screen. Please contact your local reseller or service center to change the lamp as soon as possible.
- Warning- To reduce the risk of injury to the eyes, do not look directly into the laser beam on the remote control and do not point the laser beam into anyone's eyes. This remote control is equipped with a Class II laser that emits radiation.



- ❖ When the lamp reaches the end of its life, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, follow the procedures listed under "Replacing the Lamp" section on pages 49-50.

Usage Notice

Do:

- ❖ Turn off the product before cleaning.
- ❖ Use a soft cloth moistened with a mild detergent to clean the display housing.
- ❖ Disconnect the power plug from the AC outlet if the product is not being used for a long period of time.

Don't:

- ❖ Do not block the ventilation slots and openings on the unit.
- ❖ Do not use abrasive cleaners, waxes or solvents to clean the unit.
- ❖ Do not use under the following conditions:
 - In extremely hot, cold or humid environments.
 - In areas susceptible to excessive dust and dirt.
 - Near any appliance that generates a strong magnetic field.
 - In direct sunlight.

Eye Safety Warnings



- ■ Avoid staring directly into the projector's beam of light at all times.
- ■ Minimize standing facing into the beam. Keep your back to the beam as much as possible.
- ■ Using a stick or laser pointer is recommended to avoid the need for the presenter to enter the beam.
- ■ Ensure that projectors are located out of the line of sight from the screen to the audience; this ensures that, when presenters look at the audience, they do not also have to stare at the projector lamp. The best way to achieve this is by ceiling-mounting the projector rather than placing it on floor or table top.
- ■ When projector is used in a classroom, adequately supervise students when they are asked to point out something on the screen.
- ■ In order to minimize the lamp power needed, use room blinds to reduce ambient light levels.

Product Features

This product is a single chip 0.65" WXGA 1280 x 800 DLP® projector.

Outstanding features include:

- ◆ Texas Instruments Single chip DLP® Technology
- ◆ Computer Compatibility:
Apple Macintosh, iMac, and VESA Standards:
UXGA, SXGA+, SXGA, WXGA, XGA, SVGA, VGA
- ◆ Video Compatibility:
 - NTSC, NTSC4.43
 - PAL/PAL-M/PAL-N/SECAM
 - SDTV compatible (480i/p, 576i/p)
 - HDTV compatible (720p, 1080i/p)
- ◆ Auto source detection with user definable settings
- ◆ Full function IR remote control with laser pointer and mouse control
- ◆ User friendly multilingual On Screen Menu
- ◆ Advanced digital keystone correction and high quality full screen image re-scaling
- ◆ User friendly control panel
- ◆ One built-in speaker with 1 watt amplifier
- ◆ Macintosh and PC compatible
- ◆ DVI-I support (HDCP compliant)

Introduction

Package Overview

This projector comes with all the items shown below. Check to make sure your unit is complete. Contact your dealer immediately if anything is missing.



Projector with lens cap



Power Cord 1.8m



VGA Cable 1.8m



Y-type Cable 100mm
(Available in EMEA and ASIA version only)



USB Cable 1.8m
(Available in EMEA only)



IR Remote Control



❖ Due to the difference in applications for each country, some regions may have different accessories.



Carrying Case



2 x AAA Batteries

Documentation :

- User's Manual
- Warranty Card
- Quick Start Card
- WEEE Card

Introduction


Product Overview

Main Unit



- | | |
|--------------------|--------------------------|
| 1. Control Panel | 6. Elevator foot |
| 2. Zoom | 7. IR Receivers |
| 3. Focus | 8. Connection Ports |
| 4. Zoom Lens | 9. Power Socket |
| 5. Elevator Button | 10. Tilt-Adjustment Foot |


Control Panel

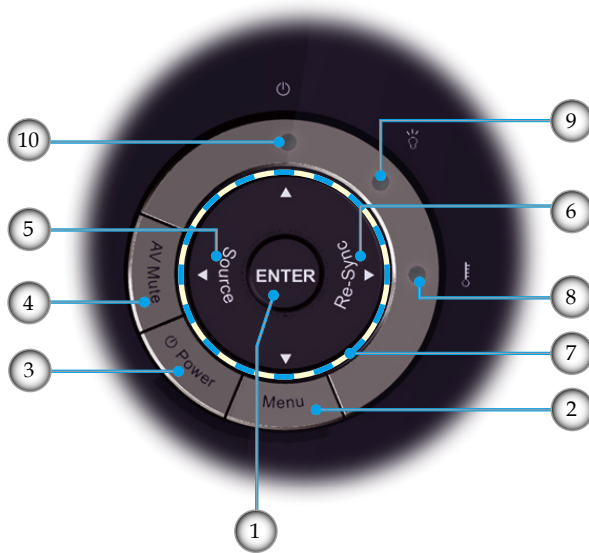

1. Enter
2. Menu
3. Power
4. AV Mute
5. Source
6. Re-Sync
7. Four Directional Select Keys
8. Temp LED
9. Lamp LED
10. Power LED

Introduction

Connection Ports

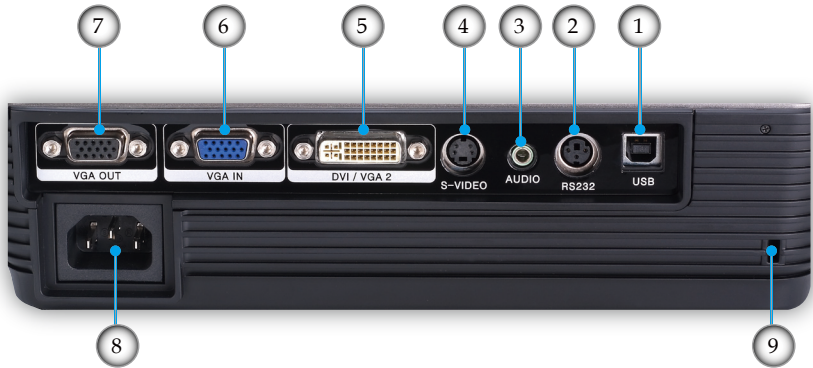

1. USB Connector (Connect to PC for Remote Mouse function)
2. RS-232 Connector
3. Audio Input Connector
4. S-Video Input Connector
5. DVI-I Input Connector
(PC Digital (HDCP)/PC Analog/Component Video Input)
6. VGA In/SCART Connector (PC Analog Signal/Component Video Input, HDTV/SCART Input)
7. VGA Output Connector (Monitor Loop-through Output)
8. Power Socket
9. Kensington™ Lock Port

Introduction

Remote Control

1. Button LED
2. Power On/Off
3. Laser Button
4. Page Up
5. Mouse Right Click
6. Four Directional Select Keys
7. Re-Sync
8. Page Down
9. Volume +/-
10. Zoom
11. AV mute
12. Video Source
13. VGA Source
14. Freeze
15. S-Video Source
16. DVI Source
17. Brightness
18. Menu
19. Keystone +/-
20. Source
21. Enter
22. Mouse Left Click
23. PC/Mouse control
24. Number Buttons
(for password input)



Installation

Connecting the Projector

Connect to Computer/Notebook




❖ Due to the difference in applications for each country, some regions may have different accessories.

- | | |
|--------|---|
| 1..... | Power Cord |
| 2..... | VGA Cable |
| 3..... | DVI-I to VGA Cable (Optional accessories) |
| 4..... | Audio Input Cable (Optional accessories) |
| 5..... | RS232 Cable (Optional accessories) |
| 6..... | USB Cable (Optional accessories) |

Installation

Connect to Video Sources

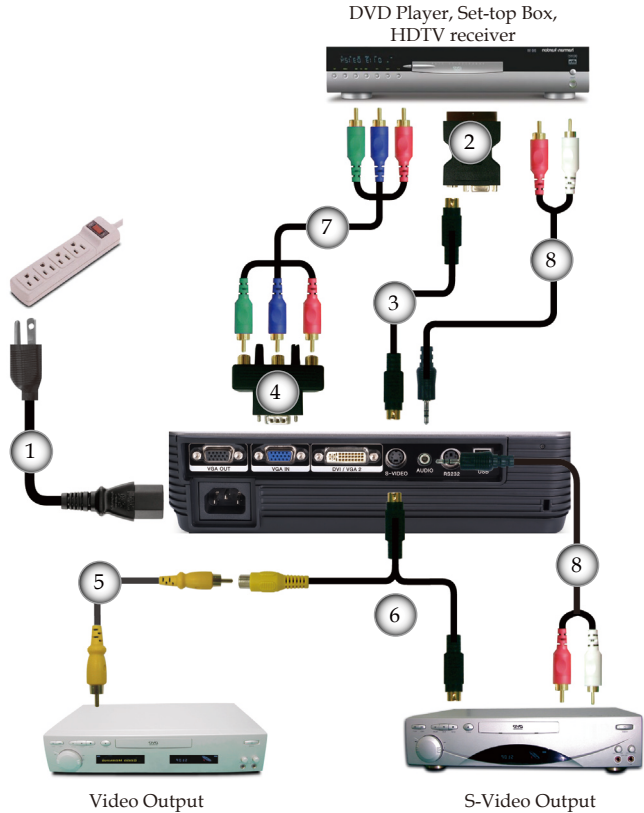

❖ Due to the difference in applications for each country, some regions may have different accessories.

- 1.....Power Cord
- 2.....SCART RGB/S-Video Adaptor (Optional accessories)
- 3.....S-Video Cable (Optional accessories)
- 4.....15-Pin to 3 RCA Component/HDTV Adaptor (Optional accessories)
- 5.....Composite Video Cable (Optional accessories)
- 6.....Y-Type of Composite to S-Video Adaptor
- 7.....3 RCA Component Cable (Optional accessories)
- 8.....Audio Cable Jack/RCA (Optional accessories)

Installation

Powering On/Off the Projector

Powering On the Projector

1. Remove the lens cap. ❶
2. Ensure that the power cord and signal cable are securely connected. ❷ The Power LED will be Amber.
3. Turn on the lamp by pressing “Power” button either on the top of the projector or on the remote. The Power LED will flash green.

The startup screen will display in approximately 10 seconds. The first time you use the projector, you can select your preferred language from quick menu after the startup screen display.

 
4. Turn on your source (computer, notebook, video player, etc.). The projector will detect your source automatically.
- ❖ If you connect multiple sources at the same time, press the “Source” button on the control panel or direct source key on the remote control to switch between inputs.



- ❖ Turn on the projector first and then select the signal sources.

Powering Off the Projector

1. Press the “Power” button to turn off the projector lamp, you will see a message displayed on the projector’s screen.



2. Press the “Power” button again to confirm, otherwise the message will disappear after 15 seconds. When you press “Power” button second, the system will show the timing countdown on the screen.
3. The cooling fans continue to operate for about 10 seconds for cooling cycle. When the Power LED turn Amber, the projector has entered standby mode.
If you wish to turn the projector back on, you must wait until the projector has completed the cooling cycle and has entered standby mode. Once in standby mode, simply press “Power” button to restart the projector.
4. Disconnect the power cord from the electrical outlet and the projector.
5. Do not turn on the projector immediately following a power off procedure.

Warning Indicator

- ❖ When the “LAMP” indicator lights red, the projector will automatically shut itself down. Please contact your local reseller or service center. See pages 56-57.
- ❖ When the “TEMP” indicator lights red, it indicates the projector has overheated. The projector will automatically shut itself down.
Under normal conditions, the projector can be switched on again after it has cooled down. If the problem persists, you should contact your local dealer or our service center. See pages 56-57.
- ❖ When the “TEMP” indicator flashes red, it indicates the fan has failed. Please contact your local dealer or our service center. See pages 56-57.

Adjusting the Projected Image

Adjusting the Projector's Height


The projector is equipped with elevator foot for adjusting the image height.

To raise the image:

1. Press the elevator button **1**.
2. Raise the image to the desired height angle **2**, then release the button to lock the elevator foot into position.
3. Use screw in foot **3** to fine-tune the display angle.

To lower the image:

1. Press the elevator button.
2. Lower the image, then release the button to lock the elevator feet into position.
3. Use screw in foot **3** to fine-tune the display angle.

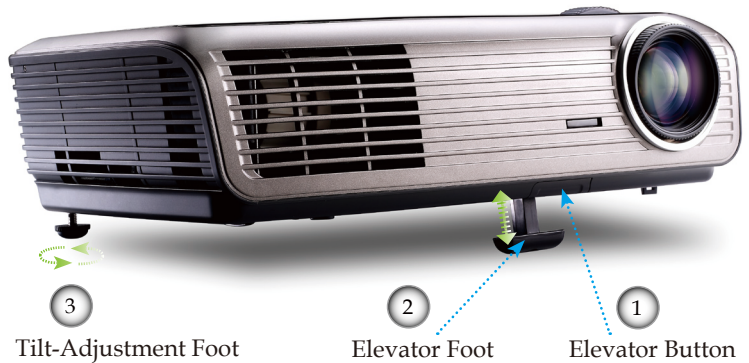


Installation

Adjusting the Projector's Zoom / Focus

You may turn the zoom lever to zoom in or out. To focus the image, rotate the focus ring until the image is clear. The projector will focus at distances from 3.9 to 39.4 feet (1.2 to 12.0 meters).



Adjusting Projection Image Size

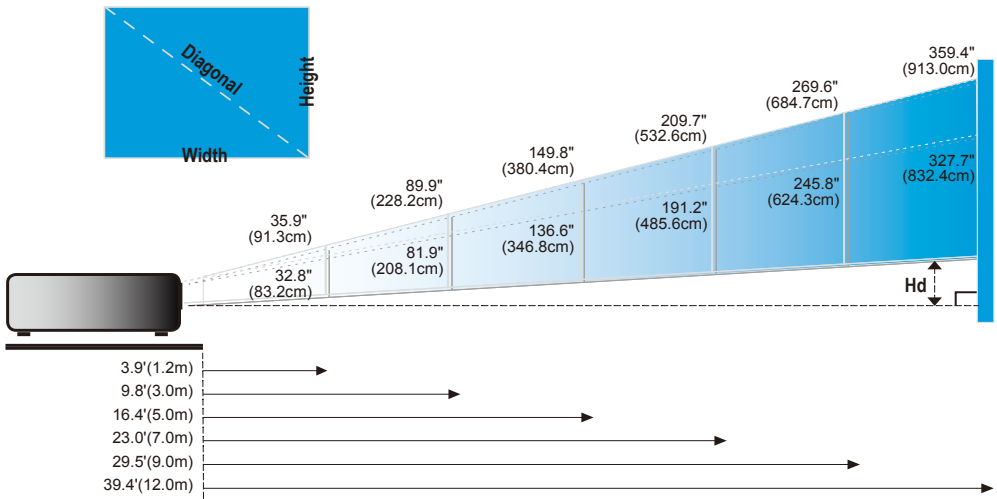

| | | | | | | | |
|-------------------|------------|-------------------------------|---------------------------------|----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|
| Screen (Diagonal) | Max. | 35.9" (91.3cm) | 89.9" (228.2cm) | 149.8" (380.4cm) | 209.7" (532.6cm) | 269.6" (684.7cm) | 359.4" (913.0cm) |
| | Min. | 32.8" (83.2cm) | 81.9" (208.1cm) | 136.6" (346.8cm) | 191.2" (485.6cm) | 245.8" (624.3cm) | 327.7" (832.4cm) |
| Screen Size | Max. (WxH) | 30.5" x 19.1" (77.4 x 48.4cm) | 76.2" x 47.6" (193.5 x 121.0cm) | 127.0" x 79.4" (322.6 x 201.6cm) | 177.8" x 111.1" (451.6 x 282.3cm) | 228.6" x 142.6" (580.6 x 362.9cm) | 304.8" x 190.5" (774.2 x 483.9cm) |
| | Min. (WxH) | 27.8" x 17.4" (70.6 x 44.1cm) | 69.5" x 43.4" (176.5 x 110.3cm) | 115.8" x 72.4" (294.1 x 183.8cm) | 162.1" x 101.3" (411.8 x 257.4cm) | 208.4" x 130.3" (529.4 x 330.9cm) | 277.9" x 173.7" (705.9 x 441.2cm) |
| Hd | Max. | 2.4" (6.0cm) | 5.9" (15.0cm) | 9.8" (25.0cm) | 13.8" (35.0cm) | 17.7" (45.0cm) | 23.6" (60.0cm) |
| | Min. | 2.2" (5.5cm) | 5.4" (13.7cm) | 9.0" (22.8cm) | 12.6" (31.9cm) | 16.2" (41.0cm) | 21.5" (54.7cm) |
| Distance | | 3.9' (1.2m) | 9.8' (3.0m) | 16.4' (5.0m) | 23.0' (7.0m) | 29.5' (9.0m) | 39.4' (12.0m) |

❖ This graph is for user's reference only.

Control Panel & Remote Control

There are two ways for you to control the functions: Control Panel and Remote Control.

Control Panel



Using the Control Panel


| | |
|------------------------------|---|
| Power | Refer to the “Power On/Off the Projector” section on pages 14-15. |
| Menu | Press “Menu” to launch the on-screen display (OSD) menu. To exit OSD, Press “Menu” again. |
| Enter | Confirm your item selection. |
| AV Mute | Momentarily turns off/on the audio and video. |
| Source | Press “Source” to select an input signal. |
| Re-Sync | Automatically synchronizes the projector to the input source. |
| Four Directional Select Keys | Use ▲▼◀▶ to select items or make adjustments to your selection. |
| 🔌 Power LED | Indicate the projector’s status. |
| 💡 Lamp LED | Indicate the projector’s lamp status. |
| 🌡️ Temp LED | Indicate the projector’s temperature status. |


User Controls

Remote Control



Using the Remote Control

Power  Refer to the “Power On/Off the Projector” section on pages 14-15.

Laser  Aim the remote at the viewing screen, press and hold this button to activate the laser pointer.


PC/Mouse control The PC/Mouse control can be used to control mouse movement. The mouse function is enabled using the USB cable to connect your computer and the projector.

L Button Mouse left click.

R Button Mouse right click.

Page + Use this button to page up.

Page - Use this button to page down.

Enter  Confirm your item selection.

Source Press “Source” to select an input signal.

Re-Sync Automatically synchronizes the projector to the input source.

Four Directional Select Keys Use  to select items or make adjustments to your selection.

Keystone +/- Adjust image distortion caused by tilting the projector. (± 18 degrees)

Volume +/- Adjust to increase/decrease the volume.

Brightness Adjust the brightness of the image.


User Controls

Remote Control



Using the Remote Control

| | |
|---------|--|
| Menu | Press "Menu" to launch the on-screen display (OSD) menu. To exit OSD, Press "Menu" again. |
| Zoom | Press "+/-" button to zoom in of an image. |
| DVI | Press "DVI" to choose DVI source. |
| VGA | Press "VGA" to choose source from VGA-IN connector. |
| AV Mute | Momentarily turns off/on the audio and video. |
| S-Video | Press "S-Video" to choose S-Video source. |
| Freeze | Press "Freeze" to pause the screen image. |
| Video | Press "Video" to choose Composite video source. This function is only available when the projector is connected to a video via a Y-type cable. |

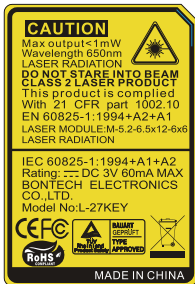


On-screen Display Menu


The Projector has multilingual On-screen Display menus that allow you to make image adjustments and change a variety of settings. The projector will automatically detect the source.

How to operate


1. To open the OSD menu, press “Menu” on the Remote Control or Projector Keypad.
2. When OSD is displayed, use ◀▶ keys to select any item in the main menu. While making a selection on a particular page, press ▼ or “Enter” key to enter sub menu.
3. Use ▲▼ keys to select the desired item and adjust the settings by ◀▶ key.
4. Select the next item to be adjusted in the sub menu and adjust as described above.
5. Press “Enter” to confirm, and the screen will return to the main menu.
6. To exit, press “Menu” again. The OSD menu will close and the projector will automatically save the new settings.

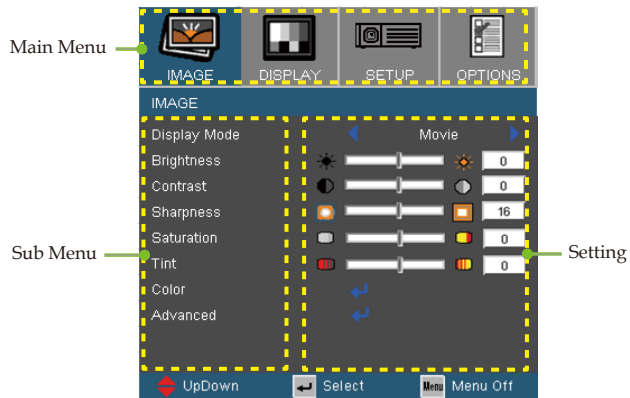

Menu Tree

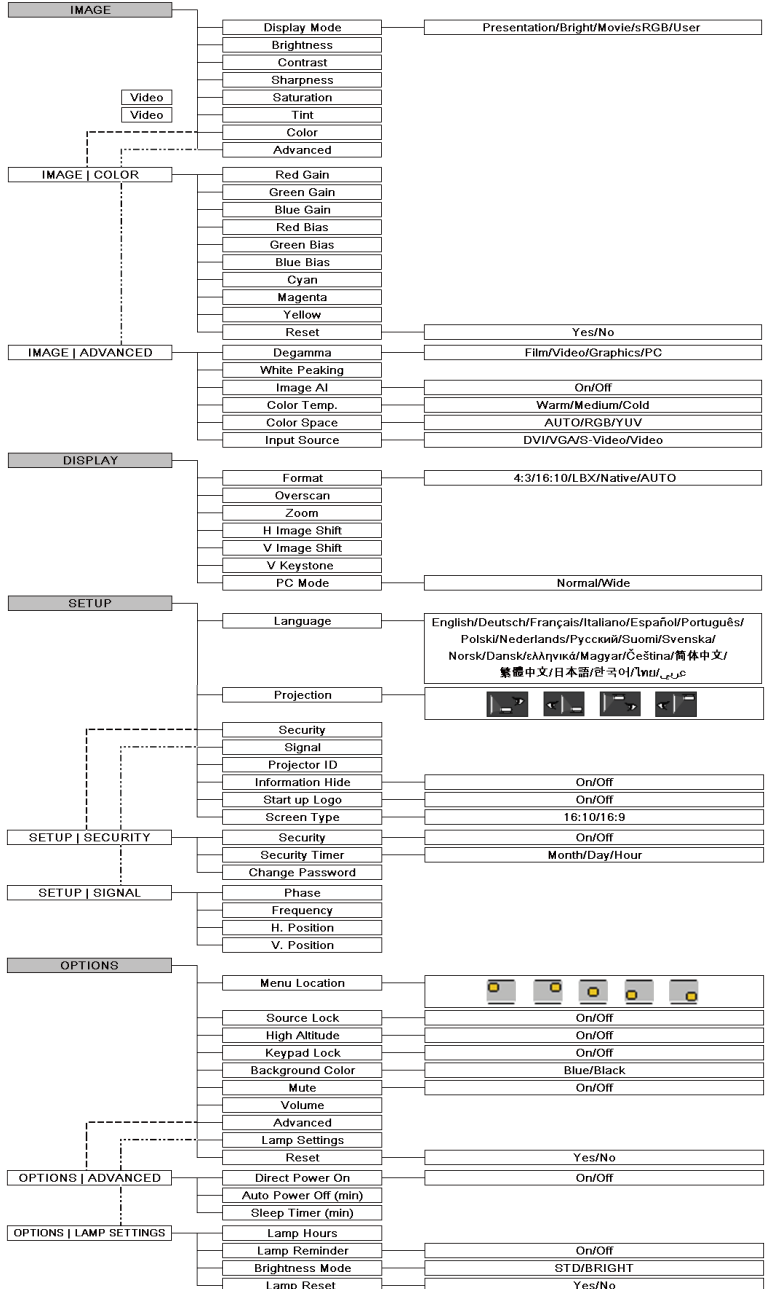

Image

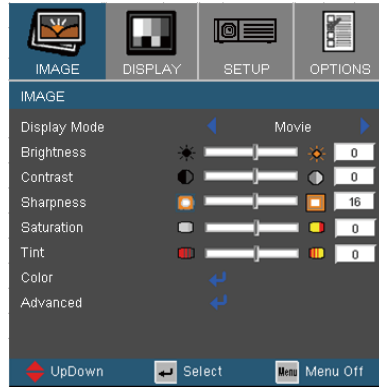

Display Mode

There are many factory preset optimized for various types of images.

- ▶ Presentation: Good color and brightness from PC input.
- ▶ Bright: Maximum brightness from PC input.
- ▶ Movie: For home theater.
- ▶ sRGB: Standardised accurate color.
- ▶ User: User's own settings.

Brightness

Adjust the brightness of the image.

- ▶ Press the ◀ to darken image.
- ▶ Press the ▶ to lighten the image.

Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image.


- ▶ Press the ◀ to decrease the contrast.
- ▶ Press the ▶ to increase the contrast.

Sharpness

Adjust the sharpness of the image.

- ▶ Press the ◀ to decrease the sharpness.
- ▶ Press the ▶ to increase the sharpness.

Image

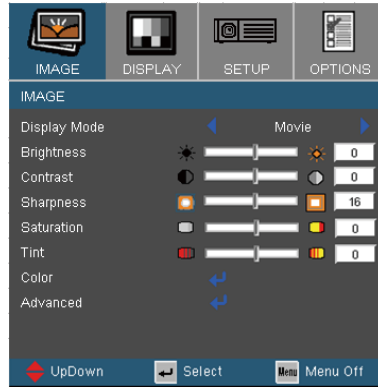

- ❖ “Saturation” and “Tint” functions are only supported under video source.

Saturation

Adjust a video image from black and white to fully saturated color.


- ▶ Press the ◀ to decrease the amount of saturation in the image.
- ▶ Press the ▶ to increase the amount of saturation in the image.

Tint

Adjust the color balance of red and green.

- ▶ Press the ◀ to increase the amount of green in the image.
- ▶ Press the ▶ to increase the amount of red in the image.

Image | Color

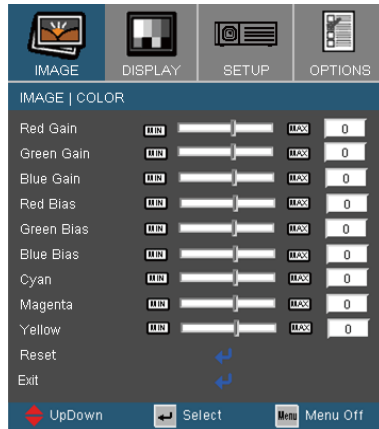

Color

Select the Red/Green/Blue Gain for brightness adjustments and Bias for contrast adjustments for the whole picture. Individual color adjustments for Cyan, Magenta, Yellow can also be adjusted.

Reset

Choose "Yes" to return the factory default settings for color adjustments.

Image | Advanced



Degamma

Allow you to choose a degamma table that has been fine-tuned to bring out the best image quality for the input.

- ▶ Film: for home theater.
- ▶ Video: for video or TV source.
- ▶ Graphics: for image source.
- ▶ PC: for PC or computer source.

White Peaking

This adjustable item utilizes a new color-processing algorithm and system level enhancements to enable higher brightness while providing true, more vibrant colors in picture. The range is from "0" to "10". If you prefer a stronger enhanced image, adjust toward the maximum setting. For a smoother, more natural image, adjust toward the minimum setting.

Color Temp.

Adjust the color temperature. Cold temperature, the screen looks colder; with Warm temperature, the screen looks warmer.

Color Space

Select an appropriate color matrix type from AUTO, RGB, YUV.

Image | Advanced

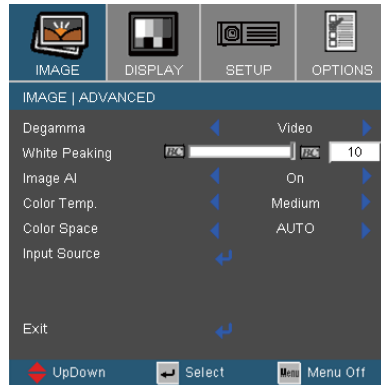


Image AI


Image AI improves the contrast of the picture by optimizing the brightness of the lamp according to the picture content.

- ▶ On: The dynamic image performance manager is active in making sure your greatest pleasure from seeing a movie dynamically with the most dark details revealed, vivid and bright image performed all the way.




- ▶ Off: The dynamic image performance manager is on standby.

Image | Advanced

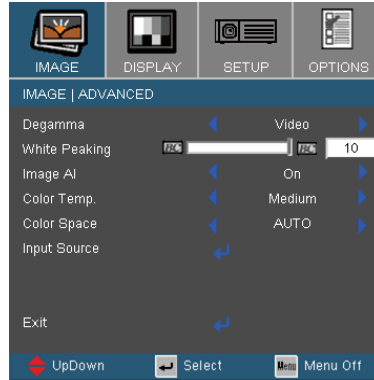


Input Source

Enable input sources. Press “↵” into the next menu as below and then use ▲ or ▼ to select. Press “Enter” to finalize the selection. The projector will not search inputs that are de-selected.

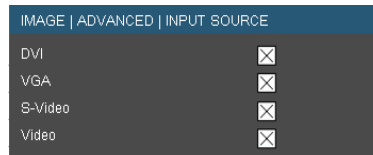

Display

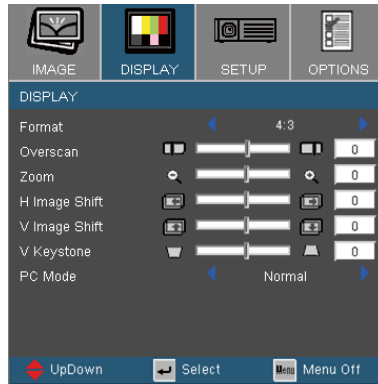

Format

Use this function to choose your desired aspect ratio.




- ❖ Tow screen type 16:10 and 16:9.
When choose 16:9, then the format is 4:3, 16:9, LBX, Native, AUTO.
When screen type mode is 16:10 then the format should be 4:3, 16:10, LBX, Native, AUTO.
(See page 35)

- ▶ 4:3: This format is for 4x3 input sources not enhanced for Wide screen TV.
- ▶ 16:10: This format is for 16x10 input sources, like HDTV and DVD enhanced for Wide screen TV.
- ▶ 16:9: This format is for 16x9 input sources, like HDTV and DVD enhanced for Wide screen TV.
- ▶ LBX: This format is for non-16x9, letterbox source and for users who use external 16x9 lens to display 2.35:1 aspect ratio using full resolution.
- ▶ Native: This format displays the original image without any scaling.
- ▶ AUTO: If Auto format is select, screen type will automatically become 16:10.

| Aspect ratio (source detected) | Resize image |
|-----------------------------------|--------------|
| 4:3 | 1066 x 800 |
| 16:9 | 1280 x 720 |
| 15:9 | 1280 x 768 |
| 16:10 | 1280 x 800 |


User Controls

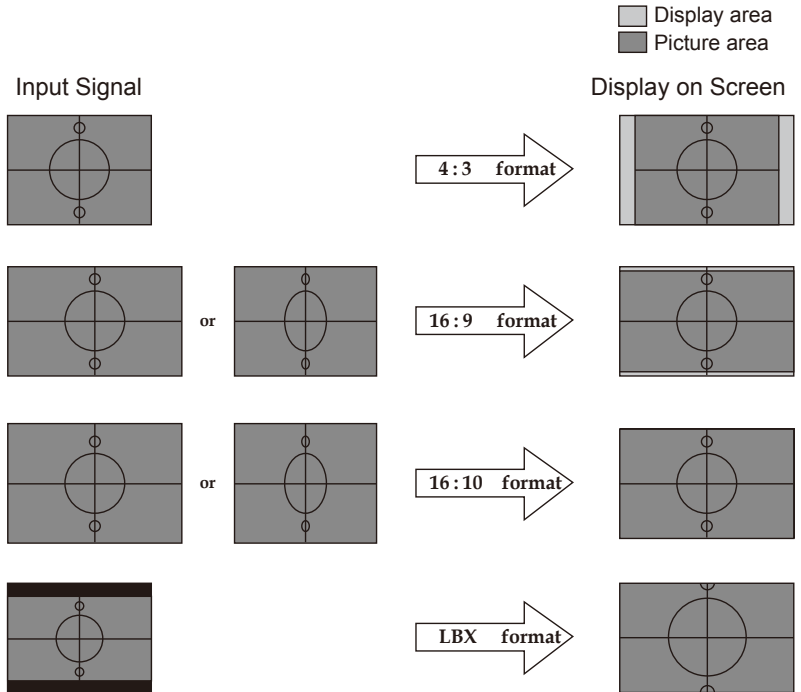

Detail information about LBX mode :

- 1) Some Letter-Box DVD contents are not enhanced for 16x9 TV, then image will not look right in 16:9 display.
One can use 4:3 mode to view the correct info.
But if the content itself is not 4:3, it will have black bars around the image in a 16:9 display. For this kind of content, you can use LBX mode to fill the image in the 16x9 display as much as possible.
- 2) If you use an external 16x9 lens, this LBX mode also allows you to watch a 2.35:1 content (include Anamorphic DVD and HDTV film source) that support anamorphic wide is enhanced for 16x9 Display in a wide 2.35:1 image.
In this case, there are no black bars, the full lamp power and vertical resolution is fully utilized for maximum viewing effects.
Other than these two occasions, one should stay with 16:9 and 4:3 modes for most viewing experiences.

Display

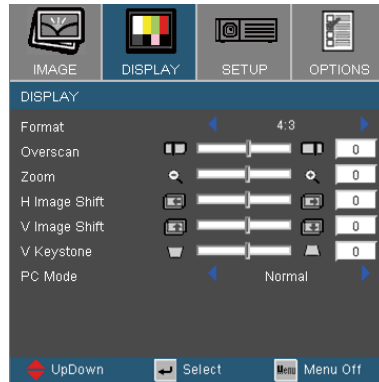

Overscan

Overscan function removes the noise in a video image. Overscan the image to remove video encoding noise on the edge of video source.

Zoom

- ▶ Press the ◀ to reduce the size of an image.
- ▶ Press the ▶ to magnify an image on the projection screen.

H Image Shift

Shift the projected image position horizontally.


V Image Shift

Shift the projected image position vertically.

V Keystone

Press the ◀ or ▶ to adjust image distortion vertically and makes a squarer image.

Display

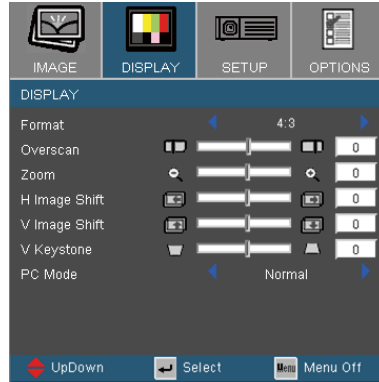

PC Mode

This mode is only functional when the projector unit is used with a PC signal, either via an Analog or Digital connector.

- ▶ **Wide:** If your PC output is a wide screen format resolution you must select this setting.

Examples of Wide screen resolutions are: 720 x 400 / 854 x 480 / 1280 x 720 / 1280 x 768.

- ▶ **Normal:** If your PC output is a Normal (4:3) resolution you must select this setting.


Examples of Normal resolutions are: 640 x 480 / 800 x 600 / 1024 x 768 / 1152 x 870 (* for MAC) / 1280 x 1024 / 1400 x 1050.

*All supported resolutions are listed on page 51.



- ❖ “PC Mode” function is only supported under RGB source.


Setup | Language

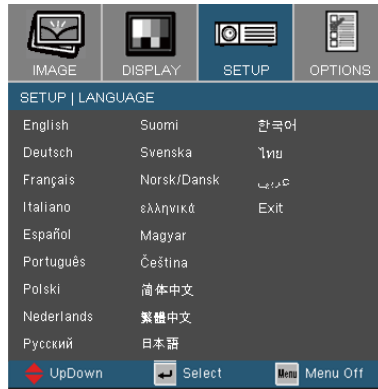





Language

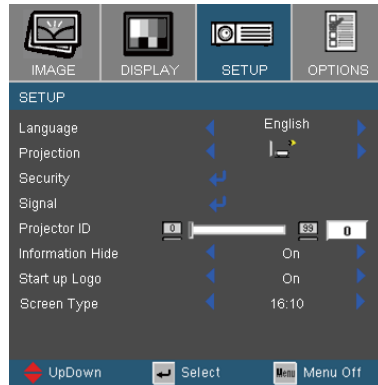Choose the multilingual OSD menu. Press ◀ or ▶ into the sub menu and then use the ▲ or ▼ key to select your preferred language. Press “Enter” to finalize the selection.

Setup



Projection

- ▶  **Front-Desktop**
The factory default setting.
- ▶  **Rear-Desktop**
When you select this function, the projector reverses the image so you can project behind a translucent screen.
- ▶  **Front-Ceiling**
When you select this function, the projector turns the image upside down for ceiling-mounted projection.
- ▶  **Rear-Ceiling**
When you select this function, the projector reverses and turns the image upside down at same time. You can project from behind a translucent screen with ceiling mounted projection.


Projector ID

Allow RS232 control of an individual projector. Range 01-99.

Information Hide

- ▶ On: Choose "On" to hide the searching message.
- ▶ Off: Choose "Off" to show the searching message.

Setup

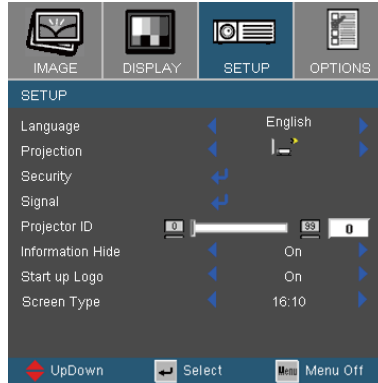

Start Up Logo

Use this function to select your desired start-up screen.

- ▶ On: Choose "On" to show the Optoma logo.
- ▶ Off: Choose "Off" to show a blank image.



- ❖ When "Screen Type" set as 16:9 the default format will become "4:3, 16:9, LBX, Native, AUTO" replace original format "4:3, 16:10, LBX, Native, AUTO".
(See page 29)

Screen Type

Choose the screen type as 16:10 (1280 x 800) or 16:9 (1280 x 720).


- ▶ 16:10 screen

| Source | 480i/p | 576i/p | 720p | 1080i/p | PC |
|--------|---|--------|-----------------------|--|---------------------------|
| 4:3 | Scale to 1066 x 800 | | | | |
| 16:10 | Scale to 1280 x 800 | | | | |
| LBX | Scale to 1280 x 960 | | | | |
| Native | 1:1 mapping centred | | centred 1280 x 720 | 1:1 mapping centred display 1280 x 800 | 1:1 mapping centred |
| Auto | If this format is select, screen type will auto become 16:10 (1280 x 800) | | | | |

- ▶ 16:9 screen

| Source | 480i/p | 576i/p | 720p | 1080i/p | PC |
|--------|---|--------|-----------------------|--|---------------------------|
| 4:3 | Scale to 960 x 720 | | | | |
| 16:9 | Scale to 1280 x 720 | | | | |
| LBX | Scale to 1280 x 960 | | | | |
| Native | 1:1 mapping centred | | centred 1280 x 720 | 1:1 mapping centred display 1280 x 720 | 1:1 mapping centred |
| Auto | If this format is select, screen type will auto become 16:10 (1280 x 800) | | | | |

Setup | Security

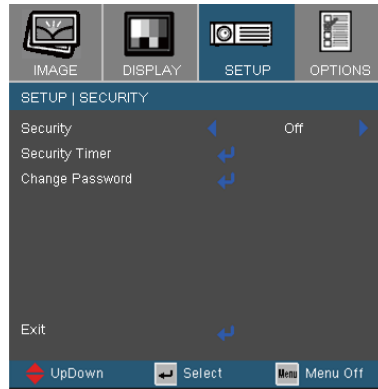


Security


- ▶ On: Choose "On" to use security verification when the turning on the projector.
- ▶ Off: Choose "Off" to be able to switch on the projector without password verification.

Security Timer

Can be select the time (Month/Day/Hour) function to set the number of hours the projector can be used. Once this time has elapsed you will be requested to enter your password again.

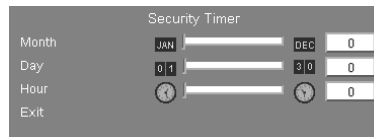

Setup | Security

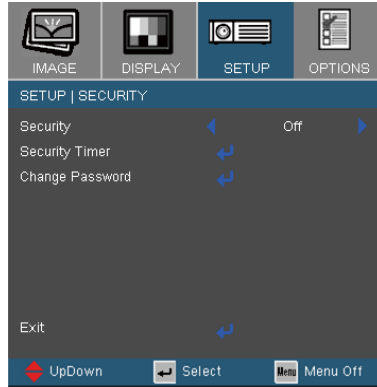

■ First Time:


1. The Password is 4 digits, DEFAULT VALUE is "1234". (first time)
2. Use number buttons on the remote to select your password, and then press "**↵**" key to confirm your selection.



Change Password

1. Press "**↵**" to input old password.
2. Use number button to enter current password, and then press "**↵**" key again to reveal next OSD menu.
3. Scroll down to highlight Password, and then press "**↵**" to activate.
4. Enter new password (4 digits in length) using the number buttons on the remote, then press "**↵**" to confirm.
5. Enter new password again and press "**↵**" to confirm.

Setup | Signal

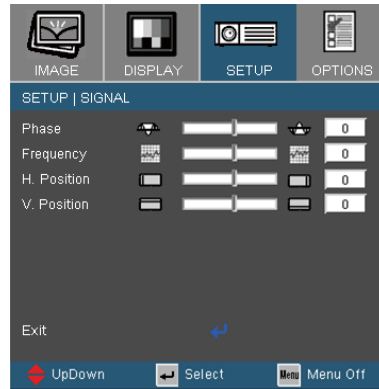

Phase

Synchronize the signal timing of the display with the graphic card. If you experience an unstable or flickering image, use this function to correct it.

Frequency

Change the display data frequency to match the frequency of your computer's graphic card. If you experience a vertical flickering bar, use this function to make an adjustment.


H. Position

- ▶ Press the ◀ to move the image left.
- ▶ Press the ▶ to move the image right.

V. Position

- ▶ Press the ◀ to move the image down.
- ▶ Press the ▶ to move the image up.

Options

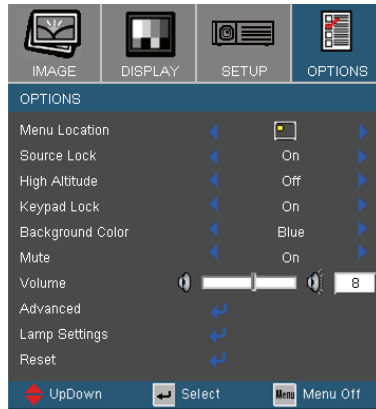

Menu Location

Choose the menu location on the display screen.

Source Lock

- ▶ On: The projector will search specified connection port.
- ▶ Off: The projector will search for other signals if the current input signal is lost.

High Altitude

Choose "On" to turn on High Altitude mode. Operates the fans at full speed continuously to allow for proper high altitude cooling of the projector.

Keypad Lock

When the keypad lock function is on, the control panel will be locked, but the projector can still be operated by the remote control. If canceling this function, use the remote control or press the "Enter" key on the control panel for 7 seconds to turn it off.


Background Color

Use this feature to display a "Blue" or "Black" screen when no signal is available.

Mute

- ▶ Choose the "On" to turn mute on.
- ▶ Choose the "Off" to turn mute off.

Options

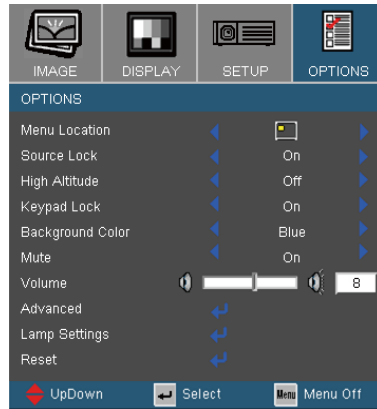


Volume

- ▶ Press the ◀ to decrease the volume.
- ▶ Press the ▶ to increase the volume.

Reset

Choose "Yes" to return the display parameters on all menus to the factory default settings.

Options | Advanced

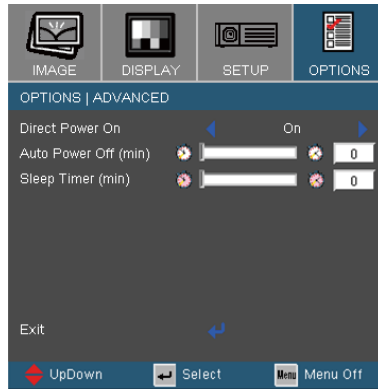

Direct Power On

Choose "On" to turn on Direct Power On mode. The projector will automatically power on when AC power is supplied, without pressing the "Power" key on the projector control panel or "Power" key on the remote control.


Auto Power Off (min)

Set the countdown timer interval. The countdown timer will start, when there is no signal being sent to the projector. Then projector will automatically power off when the countdown has finished (in minutes).

Sleep Timer (min)

Set the countdown timer interval. The timer will begin, with or without a signal input. Then the projector will automatically power off then the sleep timer countdown has finished.

Options | Lamp Settings

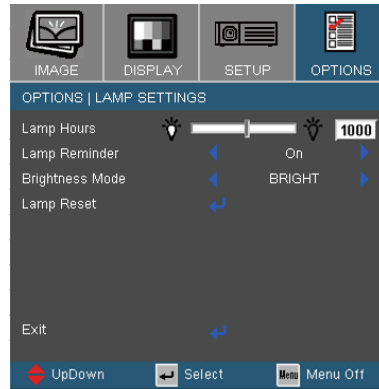

Lamp Hours

Display the projection time.

Lamp Reminder

Choose this function to show or to hide the warning message when the changing lamp message is displayed. The message will appear 30 hours before suggested replacement of lamp.

Brightness Mode

- ▶ STD: Choose "STD" to dim the projector lamp which will lower power consumption and extend the lamp life by up to 130%.
- ▶ BRIGHT: Choose "BRIGHT" to increase the brightness.

Lamp Reset

Reset the lamp life hour after replacing the lamp.

Troubleshooting

*If you experience a problem with your projector, please refer to the following information. If a problem persists, please contact your local reseller or service center.
(See pages 56-57 for details)*

Image Problems

[?] No image appears on-screen

- ▶ Ensure all the cables and power connections are correctly and securely connected as described in the “Installation” section.
- ▶ Ensure all the pins of connectors are not bent or broken.
- ▶ Check if the projection lamp has been securely installed. Please refer to the “Replacing the lamp” section.
- ▶ Make sure you have removed the lens cap and the projector is switched on.
- ▶ Ensure that the “AV mute” feature is not turned on.

[?] Partial, scrolling or incorrectly displayed image

- ▶ Press “Re-Sync” on the remote.
- ▶ If you are using a PC:

For Windows 95, 98, 2000, XP:

1. Open the “My Computer” icon, the “Control Panel” folder, and then double click on the “Display” icon.
2. Select the “Settings” tab.
3. Verify that your display resolution setting is lower than or equal to UXGA (1600 x 1200).
4. Click on the “Advanced Properties” button.

If the projector is still not projecting the whole image, you will also need to change the monitor display you are using. Refer to the following steps.

5. Verify the resolution setting is lower than or equal to UXGA (1600 x 1200).

Appendices

6. Select the “Change” button under the “Monitor” tab.
 7. Click on “Show all devices”. Next, select “Standard monitor types” under the SP box; choose the resolution mode you need under the “Models” box.
 8. Verify that the resolution setting of the monitor display is lower than or equal to UXGA (1600 x 1200).
- ▶ If you are using a Notebook:
1. First, follow the steps above to adjust resolution of the computer.
 2. Press the toggle output settings. Example: [Fn]+[F4]

| | | | |
|-----------|-----------|--------------|-----------|
| Acer ⇨ | [Fn]+[F5] | IBM/Lenovo ⇨ | [Fn]+[F7] |
| Asus ⇨ | [Fn]+[F8] | HP/Compaq ⇨ | [Fn]+[F4] |
| Dell ⇨ | [Fn]+[F8] | NEC ⇨ | [Fn]+[F3] |
| Gateway ⇨ | [Fn]+[F4] | Toshiba ⇨ | [Fn]+[F5] |

Mac Apple:
System Preference ⇨ Display ⇨ Arrangement ⇨ Mirror display

- ▶ If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector.

[?] The screen of the Notebook or PowerBook computer is not displaying your presentation

- ▶ If you are using a Notebook PC
Some Notebook PCs may deactivate their own screens when a second display device is in use. Each has a different way to be reactivated. Refer to your computer’s manual for detailed information.

[?] Image is unstable or flickering

- ▶ Use “Phase” to correct it. See page 38 for more information.
▶ Change the monitor color setting on your computer.

[?] Image has vertical flickering bar

- ▶ Use “Frequency” to make an adjustment. See page 38 for more information.
▶ Check and reconfigure the display mode of your graphic card to make it compatible with the projector.

[?] Image is out of focus

- ▶ Make sure the lens cap is removed.
- ▶ Adjust the Focus Ring on the projector lens.
- ▶ Make sure the projection screen is between the required distance 3.9 to 39.4 feet (1.2 to 12.0 meters) from the projector.
See page 17.

[?] The image is stretched when displaying 16:9 DVD title

When you play anamorphic DVD or 16:9 DVD, the projector will show the best image in 16:9 format on projector side.

If you play 4:3 format DVD title, please change the format as 4:3 in projector OSD.

If you play the LBX format DVD title, please change the format as LBX in projector OSD.

If the image is still stretched, you will also need to adjust the aspect ratio by referring to the following:

- ▶ Please setup the display format as 16:9 (wide) aspect ratio type on your DVD player.

[?] Image is too small or too large

- ▶ Adjust the Zoom Ring on the top of the projector.
- ▶ Move the projector closer to or further from the screen.
- ▶ Press [Menu] button on the remote control or projector panel, go to "Display → Format" and try the different settings.

[?] Image has slanted sides

- ▶ If possible, reposition the projector so that it is centered on the screen and below the bottom of the screen.
- ▶ Press [Keystone +/-] button on the remote control until the sides are vertical on the remote control.

[?] Image is reversed

- ▶ Select "Setup → Projection" from the OSD and adjust the projection direction.



❖ Use of Keystone is not recommended.

Intermission Problems

- [?]** The projector stops responding to all controls
 - ▶ If possible, turn off the projector, then unplug the power cord and wait at least 60 seconds before reconnecting power.
- [?]** Lamp burns out or makes a popping sound
 - ▶ When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the “Replacing the Lamp” section on pages 49-50.

Projector Status Indication

- [?]** LED lighting message

| Message | Power LED | Temp-LED | Lamp-LED |
|-------------------------------------|-------------------|-----------------------------------|----------|
| | (Green/Amber) | (Red) | (Red) |
| Standby State (Input power cord) | Flashing Amber | ○ | ○ |
| Power on (Warming) | Flashing Green | ○ | ○ |
| Lamp lighting | Green | ○ | ○ |
| Error (Over Temp.) | ○ | ☀ | ○ |
| Error (Fan fail) | ○ | Flashing (0.25s on, 0.25s off) | ○ |
| Error (Lamp fail) | ○ | ○ | ☀ |



Steady light ⇔ ☀

No light ⇔ ○

Message Reminders

▶ Fan failed:

Warning! FAN LOCKED

The projector will switch off automatically.

Please contact a service centre for repair.

▶ Temperature warning:

Warning! TEMPERATURE TOO HIGH

Please:

1. Make sure air in and outlets are not blocked.

2. Make sure the environment temperature is under 40 degree C.

If the problem persists in spite of the above.

Please contact a service centre for repair.

▶ Replacing the lamp:



Lamp Warning

Lamp life exceeded.

▶ Out of range: (refer to page 51)



Found

Out of display range.

Remote Control Problems

- ?** If the remote control does not work
- ▶ Check the operating angle for the remote control is approximately $\pm 22.5^\circ$.
 - ▶ Make sure there are no obstructions between the remote control and the projector. Move to within 6 m (20 ft) of the projector.
 - ▶ Make sure the batteries are inserted correctly.
 - ▶ Replace weak batteries in the remote control.

Replacing the lamp

The projector automatically detects the lamp life. When the lamp life is nearing the end of use, you will receive a warning message.




Lamp Warning


Lamp life exceeded.


When you see this message, please contact your local reseller or service center to change the lamp as soon as possible. Make sure the projector has been cooled down for at least 30 minutes before changing the lamp.

! Caution !


If ceiling mounted, use caution when opening lamp panel - Please see user manual for details

-  Warning: If ceiling mounted, please use caution when opening the lamp access panel. It is recommended to wear safety glasses if changing the bulb when ceiling mounted. "Caution must be used to prevent any loose parts from falling out of projector."

-  Warning: Lamp compartment may be hot! Allow it to cool down before changing the lamp!

-  Warning: To reduce the risk of personal injury, do not drop the lamp module or touch the lamp bulb. The bulb may shatter and cause injury if it is dropped.

Appendices

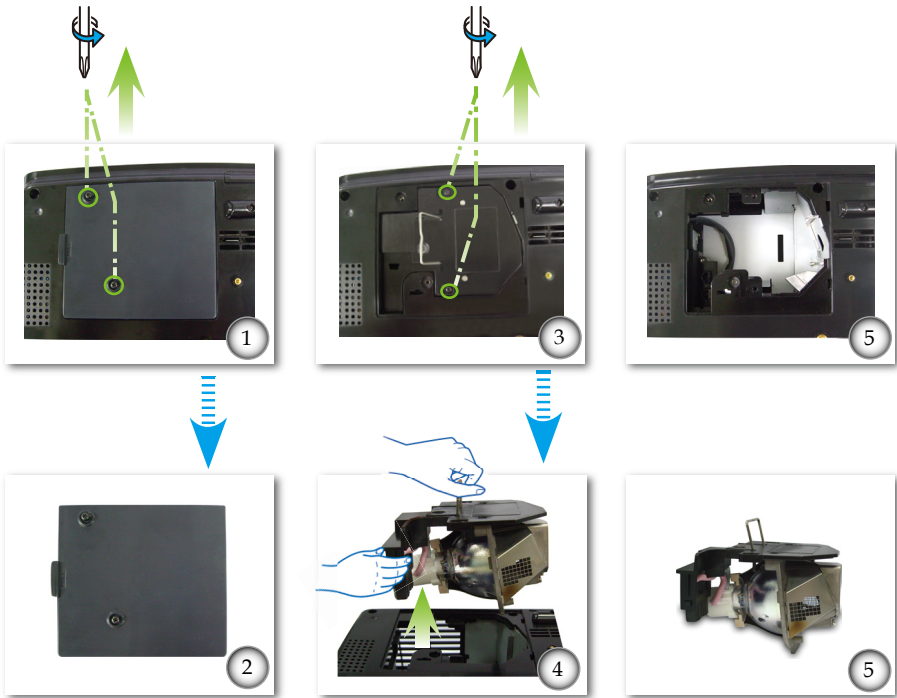

○ Lamp Replacement Procedure: ○

1. Switch off the power to the projector by pressing the “Power” button.
2. Allow the projector to cool down for at least 30 minutes.
3. Disconnect the power cord.
4. Use a screwdriver to unscrew the 2 screws from the cover. ❶
5. Push up and remove the cover. ❷
6. Use a screwdriver to unscrew the 2 screws from the lamp module. ❸
7. Pull up the lamp handle carefully. ❹
8. Remove the lamp module. ❺

To replace the lamp module, follow previous steps in reverse order.

9. Turn on the projector and use “Lamp Reset” after the lamp module is replaced.

Lamp Reset: (i) Press “Menu” → (ii) Select “Options” → (iii) Select “Lamp settings” → (iv) Select “Lamp reset” → (v) Select “Yes”.

Compatibility Modes

► Computer Compatibility


| Mode | Resolution | V-Sync (Hz) | |
|-----------|-------------|--------------------|--------------------------------------|
| | | Analog | Digital |
| VGA | 640 x 480 | 60, 72, 75, 85 | 60, 72, 75, 85 |
| VGA | 720 x 400 | 70, 85 | 70, 85 |
| SVGA | 800 x 600 | 56, 60, 72, 75, 85 | 56, 60, 72, 75, 85 |
| SVGA | 832 x 624 | 72 | 72 |
| XGA | 1024 x 768 | 60, 70, 75, 85 | 60, 70, 75, 85 |
| XGA | 1152 x 864 | 60, 70, 75, 85 | 60, 70, 75, 85 |
| WXGA | 1280 x 720 | 50, 60 | *** |
| WXGA | 1280 x 768 | 60 | 60 |
| WXGA | 1280 x 800 | 60 | 60 |
| SXGA | 1280 x 1024 | 60, 75, 85 | 60, 75, 85 (85Hz, Sub-sampling mode) |
| SXGA+ | 1400 x 1050 | 60 | 60 (Sub-sampling mode) |
| UXGA | 1600 x 1200 | 60 | 60 (Sub-sampling mode) |
| MAC LC 13 | 640 x 480 | 66.66 | *** |
| MAC II 13 | 640 x 480 | 66.68 | *** |
| MAC 19 | 1024 x 768 | 75 | *** |
| MAC | 1152 x 870 | 75.06 | *** |
| MAC G4 | 640 x 480 | 60 | 60, 70 |
| i MAC DV | 1024 x 768 | 75 | *** |
| i MAC DV | 1152 x 870 | 75 | *** |
| i MAC DV | 1280 x 960 | 75 | *** |

► Video Compatibility


| | |
|-------|--------------------------------------|
| NTSC | M (3.58MHz), 4.43 MHz, 480i/p @60Hz |
| PAL | B, D, G, H, I, M, N, 576i/p @50Hz |
| SECAM | B, D, G, K, K1, L |
| HDTV | 480p, 576p, 720p, 1080i/p (50/60 Hz) |

RS232 Commands

RS232 Connector

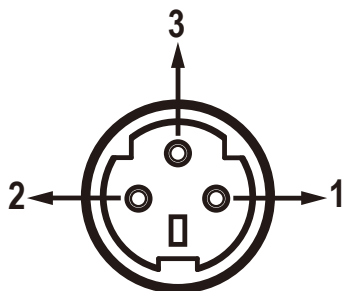

| Pin no. | Name | I/O (From Projector Side) |
|---------|------|---------------------------|
| 1 | TXD | OUT |
| 2 | RXD | IN |
| 3 | GND | — |

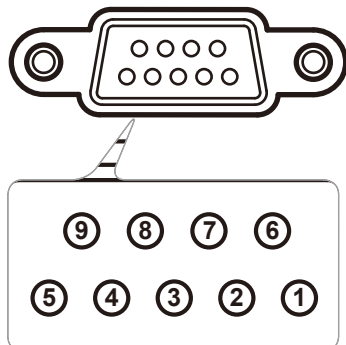

| Pin no. | Spec. |
|---------|-------|
| 1 | N/A |
| 2 | RXD |
| 3 | TXD |
| 4 | DRT |
| 5 | GND |
| 6 | DSR |
| 7 | RTS |
| 8 | CIS |
| 9 | N/A |

RS232 Protocol Function List

RS232 Commands

Baud Rate: 9600

Data Bits: 8

Parity: None

Stop Bits: 1

Flow Control: None

UART16550 FIFO: Disable

Projector Return (Pass): P

Projector Return (Fail): F

XX=01-99, projector's ID,

XX=00 is for all projectors

SEND to projector

| 232 ASCII Code | HEX Code | Function | Description |
|----------------|----------------------------|------------------------|--------------------------|
| ~XX00 1 | 7E 30 30 30 20 31 0D | Power ON | |
| ~XX00 2 | 7E 30 30 30 20 32 0D | Power OFF | |
| ~XX01 1 | 7E 30 30 30 31 20 31 0D | Resync | |
| ~XX02 1 | 7E 30 30 30 32 20 31 0D | AV Mute | On |
| ~XX02 2 | 7E 30 30 30 32 20 32 0D | | Off |
| ~XX03 1 | 7E 30 30 30 33 20 31 0D | Mute | On |
| ~XX03 2 | 7E 30 30 30 33 20 32 0D | | Off |
| ~XX04 1 | 7E 30 30 30 34 20 31 0D | Freeze | |
| ~XX04 2 | 7E 30 30 30 34 20 32 0D | Unfreeze | |
| ~XX05 1 | 7E 30 30 30 35 20 31 0D | Zoom Plus | |
| ~XX06 1 | 7E 30 30 30 36 20 31 0D | Zoom Minus | |
| ~XX07 1 | 7E 30 30 30 37 20 31 0D | Up (Pan under zoom) | |
| ~XX08 1 | 7E 30 30 30 38 20 31 0D | Down (Pan under zoom) | |
| ~XX09 1 | 7E 30 30 30 39 20 31 0D | Left (Pan under zoom) | |
| ~XX10 1 | 7E 30 30 31 30 20 31 0D | Right (Pan under zoom) | |
| ~XX20 1 | 7E 30 30 32 30 20 31 0D | Display Mode | Presentation |
| ~XX20 2 | 7E 30 30 32 30 20 32 0D | | Bright |
| ~XX20 3 | 7E 30 30 32 30 20 33 0D | | More |
| ~XX20 4 | 7E 30 30 32 30 20 34 0D | | sRGB |
| ~XX20 5 | 7E 30 30 32 30 20 35 0D | | User 1 |
| ~XX21 n | 7E 30 30 32 31 20 a 0D | Brightness | n = -50 - +50 |
| ~XX22 n | 7E 30 30 32 32 20 a 0D | Contrast | n = -50 - +50 |
| ~XX23 n | 7E 30 30 32 33 20 a 0D | Sharpness | n = -50 - +50 |
| ~XX24 n | 7E 30 30 32 34 20 a 0D | Color | Red Gain n = -50 - +50 |
| ~XX25 n | 7E 30 30 32 35 20 a 0D | | Green Gain n = -50 - +50 |
| ~XX26 n | 7E 30 30 32 36 20 a 0D | | Blue Gain n = -50 - +50 |
| ~XX27 n | 7E 30 30 32 37 20 a 0D | | Red Bias n = -50 - +50 |
| ~XX28 n | 7E 30 30 32 38 20 a 0D | | Green Bias n = -50 - +50 |
| ~XX29 n | 7E 30 30 32 39 20 a 0D | | Blue Bias n = -50 - +50 |
| ~XX30 n | 7E 30 30 33 30 20 a 0D | | Cyan n = -50 - +50 |
| ~XX31 n | 7E 30 30 33 31 20 a 0D | | Yellow n = -50 - +50 |
| ~XX32 n | 7E 30 30 33 32 20 a 0D | | Magenta n = -50 - +50 |
| ~XX33 1 | 7E 30 30 33 33 20 31 0D | Reset | |
| ~XX34 n | 7E 30 30 33 34 20 a 0D | WhitePeaking | n = 0 - 10 |
| ~XX35 1 | 7E 30 30 33 35 20 31 0D | Degamma | Film |
| ~XX35 2 | 7E 30 30 33 35 20 32 0D | | Video |
| ~XX35 3 | 7E 30 30 33 35 20 33 0D | | Graphics |
| ~XX35 4 | 7E 30 30 33 35 20 34 0D | | PC |
| ~XX36 1 | 7E 30 30 36 30 20 37 0D | Image AI | On |
| ~XX36 2 | 7E 30 30 36 30 20 37 0D | | Off |
| ~XX36 1 | 7E 30 30 33 36 20 31 0D | Color Temp. | Warm |
| ~XX36 2 | 7E 30 30 33 36 20 32 0D | | Medium |
| ~XX36 3 | 7E 30 30 33 36 20 33 0D | | Cold |
| ~XX37 1 | 7E 30 30 33 37 20 31 0D | Color Space | Auto |
| ~XX37 2 | 7E 30 30 33 37 20 32 0D | | RGB |
| ~XX37 3 | 7E 30 30 33 37 20 33 0D | | YUV |
| ~XX39 2 | 7E 30 30 33 39 20 32 0D | Input Source | DVI |
| ~XX39 5 | 7E 30 30 33 39 20 35 0D | | VGA |
| ~XX39 9 | 7E 30 30 33 39 20 39 0D | | S-Video |
| ~XX39 10 | 7E 30 30 33 39 20 31 30 0D | | Video |
| ~XX60 1 | 7E 30 30 36 30 20 31 0D | Format | 4:3 |
| ~XX60 2 | 7E 30 30 36 30 20 32 0D | | 16:10 / 16:9 |
| ~XX60 5 | 7E 30 30 36 30 20 35 0D | | LBX |
| ~XX60 6 | 7E 30 30 36 30 20 36 0D | | Native |
| ~XX60 7 | 7E 30 30 36 30 20 37 0D | | Auto |
| ~XX61 1 | 7E 30 30 36 30 20 37 0D | PCMode | On |
| ~XX61 2 | 7E 30 30 36 30 20 37 0D | | Off |
| ~XX61 n | 7E 30 30 36 31 20 a 0D | Overscan | n = 0 - 12 |
| ~XX62 n | 7E 30 30 36 32 20 a 0D | Zoom | n = 0 - 100 |
| ~XX63 n | 7E 30 30 36 33 20 a 0D | H Image Shift | n = -50 - +50 |
| ~XX64 n | 7E 30 30 36 34 20 a 0D | V Image Shift | n = -50 - +50 |
| ~XX66 n | 7E 30 30 36 36 20 a 0D | V Keystone | n = -20 - +20 |
| ~XX70 1 | 7E 30 30 37 30 20 31 0D | Language | English |
| ~XX70 2 | 7E 30 30 37 30 20 32 0D | | German |
| ~XX70 3 | 7E 30 30 37 30 20 33 0D | | French |
| ~XX70 4 | 7E 30 30 37 30 20 34 0D | | Italian |
| ~XX70 5 | 7E 30 30 37 30 20 35 0D | | Spanish |
| ~XX70 6 | 7E 30 30 37 30 20 36 0D | | Portuguese |
| ~XX70 7 | 7E 30 30 37 30 20 37 0D | | Polish |
| ~XX70 8 | 7E 30 30 37 30 20 38 0D | | Dutch |
| ~XX70 9 | 7E 30 30 37 30 20 39 0D | | Swedish |
| ~XX70 10 | 7E 30 30 37 30 20 31 30 0D | | Norwegian/Danish |
| ~XX70 11 | 7E 30 30 37 30 20 31 31 0D | | Finnish |
| ~XX70 12 | 7E 30 30 37 30 20 31 32 0D | | Greek |
| ~XX70 13 | 7E 30 30 37 30 20 31 33 0D | | Traditional Chinese |
| ~XX70 14 | 7E 30 30 37 30 20 31 34 0D | | Simplified Chinese |
| ~XX70 15 | 7E 30 30 37 30 20 31 35 0D | | Japanese |
| ~XX70 16 | 7E 30 30 37 30 20 31 36 0D | | Korean |
| ~XX70 17 | 7E 30 30 37 30 20 31 37 0D | | Russian |
| ~XX70 18 | 7E 30 30 37 30 20 31 38 0D | | Hungarian |
| ~XX70 19 | 7E 30 30 37 30 20 31 39 0D | | Czech |
| ~XX70 20 | 7E 30 30 37 30 20 32 30 0D | | Arabic |
| ~XX70 21 | 7E 30 30 37 30 20 32 31 0D | | Thai |
| ~XX71 1 | 7E 30 30 37 31 20 31 0D | Projection | Front-Desktop |
| ~XX71 2 | 7E 30 30 37 31 20 32 0D | | Rear-Desktop |
| ~XX71 3 | 7E 30 30 37 31 20 33 0D | | Front-Ceiling |
| ~XX71 4 | 7E 30 30 37 31 20 34 0D | | Rear-Ceiling |



1. There is a <CR> after all ASCII commands.

2. 0D is the HEX code for <CR> in ASCII code.

Appendices

SEND to projector

| 232 ASCII Code | HEX Code | Function | Description |
|----------------|----------------------------|----------------------|----------------------|
| ~XX72 1 | 7E 30 30 37 32 20 31 0D | Menu Location | Top Left |
| ~XX72 2 | 7E 30 30 37 32 20 32 0D | | Top Right |
| ~XX72 3 | 7E 30 30 37 32 20 33 0D | | Centre |
| ~XX72 4 | 7E 30 30 37 32 20 34 0D | | Bottom Left |
| ~XX72 5 | 7E 30 30 37 32 20 35 0D | | Bottom Right |
| ~XX73 n | 7E 30 30 37 33 20 a 0D | Signal | Frequency n=-5--+5 |
| ~XX74 n | 7E 30 30 37 34 20 a 0D | | Phase n=0-31 |
| ~XX75 n | 7E 30 30 37 35 20 a 0D | | H. Position n=-5--+5 |
| ~XX76 n | 7E 30 30 37 36 20 a 0D | | V. Position n=-5--+5 |
| ~XX77 n | | Security | Security Timer |
| ~XX78 1 | 7E 30 30 37 38 20 31 0D | | Month/Day/Hour |
| ~XX78 2 | 7E 30 30 37 38 20 32 0D | Security Settings | On/Off |
| ~XX79 n | 7E 30 30 37 39 20 a 0D | Projector ID | n=00-99 |
| ~XX80 1 | 7E 30 30 38 30 20 31 0D | Mute | On |
| ~XX80 2 | 7E 30 30 38 30 20 32 0D | | Off |
| ~XX81 n | 7E 30 30 38 31 20 a 0D | Volume | n=0-15 |
| ~XX82 1 | 7E 30 30 38 32 20 31 0D | Start Up Logo | On |
| ~XX82 2 | 7E 30 30 38 32 20 31 0D | | Off |
| ~XX83 1 | 7E 30 30 38 32 20 31 0D | Screen Type | 16:10 |
| ~XX83 2 | 7E 30 30 38 32 20 31 0D | | 16:9 |
| ~XX100 1 | 7E 30 30 31 30 30 20 31 0D | Source Lock | On |
| ~XX100 2 | 7E 30 30 31 30 30 20 32 0D | | Off |
| ~XX101 1 | 7E 30 30 31 30 31 20 31 0D | High Altitude | On |
| ~XX101 2 | 7E 30 30 31 30 31 20 32 0D | | Off |
| ~XX102 1 | 7E 30 30 31 30 32 20 31 0D | Information Hide | On |
| ~XX102 2 | 7E 30 30 31 30 32 20 32 0D | | Off |
| ~XX103 1 | 7E 30 30 31 30 33 20 31 0D | Keypad Lock | On |
| ~XX103 2 | 7E 30 30 31 30 33 20 32 0D | | Off |
| ~XX104 1 | 7E 30 30 31 30 34 20 31 0D | Background Color | Blue |
| ~XX104 2 | 7E 30 30 31 30 34 20 32 0D | | Black |
| ~XX105 1 | 7E 30 30 31 30 35 20 31 0D | Advanced | Direct Power On |
| ~XX105 2 | 7E 30 30 31 30 35 20 32 0D | | On/Off |
| ~XX106 n | 7E 30 30 31 30 36 20 a 0D | Auto Power Off (min) | n=0-180 |
| ~XX107 n | 7E 30 30 31 30 37 20 a 0D | Sleep Timer (min) | n=0-999 |
| ~XX108 1 | 7E 30 30 31 30 38 20 31 0D | Lamp Setting | Lamp Hour |
| ~XX109 | 7E 30 30 31 30 39 20 31 0D | | Lamp Reminder |
| ~XX109 2 | 7E 30 30 31 30 39 20 32 0D | | On/Off |
| ~XX110 1 | 7E 30 30 31 31 30 20 31 0D | Brightness Mode | BRIGHT |
| ~XX110 2 | 7E 30 30 31 31 30 20 32 0D | | |
| ~XX111 1 | 7E 30 30 31 31 31 20 31 0D | Lamp Reset | Yes |
| ~XX111 2 | 7E 30 30 31 31 31 20 32 0D | | |
| ~XX112 1 | 7E 30 30 31 31 32 20 31 0D | Reset | Yes |
| ~XX112 2 | 7E 30 30 31 31 32 20 32 0D | | |

READ from projector

| | | | |
|----------|----------------------------|--------------|-------------------|
| ~XX121 1 | 7E 30 30 31 32 31 20 31 0D | Input Source | Software Version |
| ~XX122 1 | 7E 30 30 31 32 32 20 31 0D | | Display Mode |
| ~XX123 | 7E 30 30 31 32 33 20 31 0D | | Power State |
| ~XX124 | 7E 30 30 31 32 34 20 31 0D | | Brightness |
| ~XX125 1 | 7E 30 30 31 32 35 20 31 0D | | Contrast |
| ~XX126 | 7E 30 30 31 32 36 20 31 0D | | Aspect Ratio |
| ~XX127 1 | 7E 30 30 31 32 37 20 31 0D | | Color temperature |
| ~XX128 1 | 7E 30 30 31 32 38 20 31 0D | | Projection Mode |
| ~XX129 1 | 7E 30 30 31 32 39 20 31 0D | | |

SEND to emulate Remote

| | | |
|-----------|-------------------------------|-----------------------------|
| ~XX140 1 | 7E 30 30 31 34 30 20 31 0D | Power |
| ~XX140 3 | 7E 30 30 31 34 30 20 33 0D | Remote Mouse Up |
| ~XX140 4 | 7E 30 30 31 34 30 20 34 0D | Remote Mouse Left |
| ~XX140 5 | 7E 30 30 31 34 30 20 35 0D | Remote Mouse Enter |
| ~XX140 6 | 7E 30 30 31 34 30 20 36 0D | Remote Mouse Right |
| ~XX140 7 | 7E 30 30 31 34 30 20 37 0D | Remote Mouse Down |
| ~XX140 8 | 7E 30 30 31 34 30 20 38 0D | Mouse Left Click |
| ~XX140 9 | 7E 30 30 31 34 30 20 39 0D | Mouse Right Click |
| ~XX140 10 | 7E 30 30 31 34 30 20 31 30 0D | Up/Page + |
| ~XX140 11 | 7E 30 30 31 34 30 20 31 31 0D | Left/Source |
| ~XX140 12 | 7E 30 30 31 34 30 20 31 32 0D | Enter (for projection MENU) |
| ~XX140 13 | 7E 30 30 31 34 30 20 31 33 0D | Right/Ke-SYNC |
| ~XX140 14 | 7E 30 30 31 34 30 20 31 34 0D | Down/Page - |
| ~XX140 15 | 7E 30 30 31 34 30 20 31 35 0D | Keystone + |
| ~XX140 16 | 7E 30 30 31 34 30 20 31 36 0D | Keystone - |
| ~XX140 17 | 7E 30 30 31 34 30 20 31 37 0D | Volume + |
| ~XX140 18 | 7E 30 30 31 34 30 20 31 38 0D | Volume + |
| ~XX140 19 | 7E 30 30 31 34 30 20 31 39 0D | Brightness |
| ~XX140 20 | 7E 30 30 31 34 30 20 31 40 0D | Menu |
| ~XX140 21 | 7E 30 30 31 34 30 20 32 31 0D | Zoom |
| ~XX140 22 | 7E 30 30 31 34 30 20 32 32 0D | DVI |
| ~XX140 23 | 7E 30 30 31 34 30 20 32 33 0D | Freeze |
| ~XX140 24 | 7E 30 30 31 34 30 20 32 34 0D | AV Mute |
| ~XX140 25 | 7E 30 30 31 34 30 20 32 35 0D | S-Video |
| ~XX140 26 | 7E 30 30 31 34 30 20 32 36 0D | VGA |
| ~XX140 27 | 7E 30 30 31 34 30 20 32 37 0D | Video |

SEND from projector automatically

| 232 ASCII Code | HEX Code | Function | Projector Return | Description |
|---|----------|----------|------------------|-----------------|
| when Standby/Warming/Cooling/Out of Range/Lamp Fail | | | INFOn | n : 0/1/2/3/4 = |
| Standby/Warming/Cooling/Out of Range/Lamp Fail | | | | |

READ from projector

| 232 ASCII Code | HEX Code | Function | Projector Return | Description |
|----------------|----------------------------|-------------|------------------|---|
| ~XX150 1 | 7E 30 30 31 35 30 20 31 0D | Information | OKabbbbcddddd | a : 1/0=On/Off bbbb: LampHour cc: source 00/01/02/03/04/05= None DV1-D/VGA1/VGA2/S-Video/Video ddd: FW version e : Display mode n : 0/1/2/3/4 EP721 / EP723 / EP727/EP728/EW1610 |
| ~XX151 1 | 7E 30 30 31 35 31 20 31 0D | Model name | OKn | |

Ceiling Mount Installation

1. To prevent damaging your projector, please use the ceiling mount package for installation.
2. If you wish to use a third party ceiling mount kit, please ensure the screws used to attached a mount to the projector met the following specifications:

- ▶ Screw type: M3
- ▶ Maximum screw length: 10mm
- ▶ Minimum screw length: 7.5mm





❖ Please note that damage resulting from incorrect installation will invalidate the warranty.



⚠ Warning:

1. If you buy the ceiling mount from other company, please ensure that there is at least 10cm distance between the bottom cover of the projector and the ceiling.
2. Avoid placing the projector near sources of heat such as air-conditioning units and heaters, otherwise, it may overheat and shut down automatically.

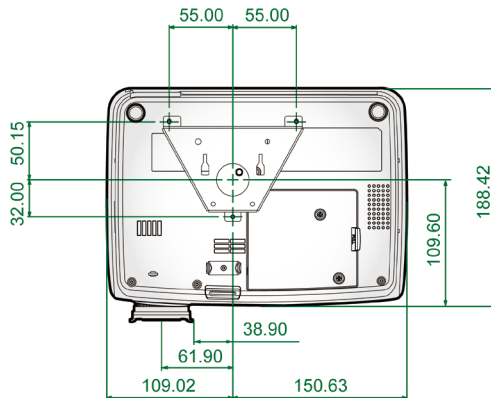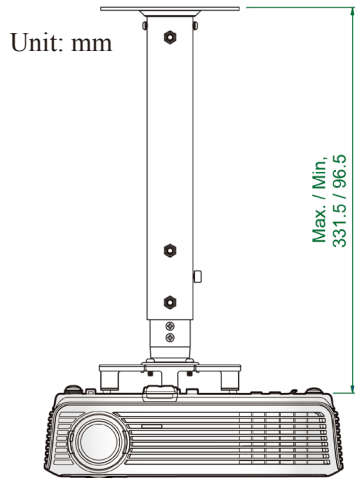

Optoma Global Offices

For service or support please contact your local office.

USA

715 Sycamore Drive
Milpitas, CA 95035, USA
www.optomausa.com

Tel : 408-383-3700
Fax : 408-383-3702
Service : services@optoma.com

Canada

5630 Kennedy Road, Mississauga,
ON, L4Z 2A9, Canada
www.optoma.ca

Tel : 905-361-2582
Fax : 905-361-2581

Europe

42 Caxton Way, The Watford Business Park
Watford, Hertfordshire,
WD18 8QZ, UK
www.optoma.eu
Service Tel : +44 (0)1923 691865

Tel : +44 (0) 1923 691 800
Fax : +44 (0) 1923 691 888
Service : service@tsc-europe.com

France

Bâtiment E
81-83 avenue Edouard Vaillant
92100 Boulogne Billancourt, France

Tel.: +33 1 41 46 12 20
Fax : +33 1 41 46 94 35
Service : savoptoma@optoma.fr

Spain

C/ José Hierro,36 Of. 1C
28529 Rivas VaciaMadrid,
Spain

Tel.: +34 91 499 06 06
Fax : +34 91 670 08 32

Deutschland

Werftstrasse 25
D40549 Düsseldorf,
Germany

Tel : +49 (0) 211 506 6670
Fax : +49 (0) 211 506 66799
Service : info@optoma.de

Scandinavia

Grev Wedels Plass 2
3015 Drammen
Norway

Tel : +47 32 26 89 90
Fax : +47 32 83 78 98
Service : info@optoma.no

Latin America

715 Sycamore Drive
Milpitas, CA 95035, USA
www.optoma.com.br

Tel : 408-383-3700
Fax : 408-383-3702
www.optoma.com.mx

Korean

WOOMI TECH.CO.,LTD.

4F,Minu Bldg.33-14, Kangnam-Ku, Seoul,135-815, KOREA

Tel : +82+2+34430004

Fax : +82+2+34430005

Japanese

東京都足立区綾瀬3-25-18

株式会社オーエスエム

サポートセンター:0120-46-5040

E-mail : info@osscreen.com

www.os-worldwide.com

Taiwan

5F., No. 108, Minchiuan Rd.

Shindian City,

Taipei Taiwan 231, R.O.C.

www.optoma.com.tw

Tel : +886-2-2218-2360

Fax : +886-2-2218-2313

Service : services@optoma.com.tw

asia.optoma.com

Hong Kong

Unit A, 27/F Dragon Centre,

79 Wing Hong Street,

Cheung Sha Wan,

Kowloon, Hong Kong

Tel : +852-2396-8968

Fax : +852-2370-1222

www.optoma.com.hk

China

5F, No. 1205, Kaixuan Rd.,

Changning District

Shanghai, 200052, China

Tel : +86-21-62947376

Fax : +86-21-62947375

www.optoma.com.cn

Regulation & Safety notices

This appendix lists the general notices of your projector.

FCC notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

Caution

Change or modification not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this projector.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

This Class B digital apparatus complies with Canadian ICES-003.

Remarque à l'intention des utilisateurs canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for EU countries

- EMC Directive 2004/108/EC (including amendments)
- Low Voltage Directive 2006/95/EC
- R & TTE Directive 1999/5/EC (if product has RF function)

Disposal instructions



Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle it.