# Dell™ 4310WX Projector User's Guide

### Notes, Notices, and Cautions



**NOTE:** A NOTE indicates important information that helps you make better use of your projector.



**NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice. © 2009 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell and the DELL logo are trademarks of Dell Inc.; DLP and DLP logo are trademarks of TEXAS INSTRUMENTS INCORPORATED; Microsoft and Windows are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model 4310WX

February 2009 Rev. A00

# Contents

1	Your Dell Projector	6
	About Your Projector	7
2	Connecting Your Projector	9
	Connecting to a Computer	10
	Connecting a Computer Using a VGA Cable	10
	Monitor Loop-Through Connection Using VGA Cables	11
	Connecting a Computer Using an RS232 cable	12
	Connecting a Computer Using a DisplayPort cable	13
	Connecting a DVD Player	14
	Connecting a DVD Player Using an S-video Cable	14
	Connecting a DVD Player Using a Composite Video Cable	15
	Connecting a DVD Player Using a Component Video	16
	Connecting a DVD Player Using an HDMI Cable	17
	Connecting to Local Area Network	18
	To control the projector that is connected to a network through an RJ45 cable.	18
	Professional Installation Options: Installation for Driving Automatic Screen	19

	Connection With Commercial RS232 Control Box	20
3	Using Your Projector	21
	Turning Your Projector On	21
	Turning Your Projector Off	21
	Adjusting the Projected Image	22
	Raising the Projector Height	22
	Lowering the Projector Height	22
	Adjusting the Projector Zoom and Focus	23
	Adjusting Projection Image Size	24
	Using the Control Panel	25
	Using the Remote Control	28
	Installing the Remote Control Batteries	31
	Operating Range With Remote Control	32
	Using the On-Screen Display	33
	Main Menu	33
	AUTO-ADJUST	33
	INPUT SELECT	34
	PICTURE (in PC Mode)	35
	PICTURE (in Video Mode)	36
	DISPLAY (in PC Mode)	37
	DISPLAY (in Video Mode)	39
	LAMP	40
	SET UP	40
	INFORMATION	43

	OTHERS
	Managing the Projector From Web Management $\ldots$ 50
	Configuring the Network Setting 50
	Accessing Web Management 50
	Managing Properties
4	Troubleshooting Your Projector 63
	Guiding Signals
	Changing the Lamp
5	Specifications71
6	Contacting Dell
7	Appendix: Glossary

# 1

# Your Dell Projector

Your projector comes with all the items shown below. Ensure that you have all the items, and contact  $Dell^{TM}$  if anything is missing.




#### **About Your Projector**

Top View



**Bottom View** 

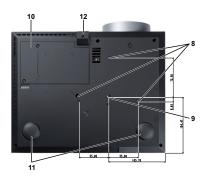

1	Control panel
2	Zoom tab
3	Focus ring
4	Lens
5	Elevator button for height adjustments
6	IR receivers
7	Lens cap
8	Mounting holes for ceiling mount: Screw hole M3 x 6.5mm depth. Recommended torque <8kgf-cm
9	Mounting hole for tripod: Insert nut 1/4"*20 UNC
10	Lamp cover
11	Tilt adjustment wheel
12	Elevator foot

### AUTION: Safety Instructions

**1** Do not use the projector near appliances that generate a lot of heat.

- **2** Do not use the projector in areas where there is an excessive amount of dust. The dust may cause the system to fail and the projector will automatically shutdown.
- **3** Ensure that the projector is mounted in a well-ventilated area.
- 4 Do not block the ventilation slots and openings on the projector.
- **5** Ensure the projector operates between ambient temperatures (5°C to 35°C).

- **6** Do not try to touch the ventilation outlet as it can become very hot after the projector has been turned on or immediately after it is turned off.
- **7** Do not look into the lens while the projector is on as it may cause injury to your eyes.
- **8** Do not place any objects near or in front of the projector or cover its lens while the projector is on as the heat may cause the object to melt or burn.
- MOTE:
  - Do not attempt to ceiling mount the projector yourself. It should be installed by a qualified technician.
  - Recommended Projector Ceiling Mount Kit (P/N: C3505). For more information, see the Dell Support website at support.dell.com.
  - For more information, see the *Safety Information* that shipped with your projector.

# 2

# **Connecting Your Projector**



1	Composite video connector	10	Security cable slot
2	S-video connector	11	Audio output connector
3	VGA-A output (monitor loop-through)	12	Audio-B input connector
4	VGA-A input (D-sub) connector	13	Audio-A input connector
5	VGA-B input (D-sub) connector	14	Audio-C right-channel input connector
6	HDMI connector	15	Power cord connector
7	DisplayPort connector	16	Audio-C left-channel input connector
8	USB remote connector	17	RS232 connector
9	RJ45 connector	18	+12V DC out connector



**CAUTION:** Before you begin any of the procedures in this section, follow the Safety Instructions as described on page 7.

# **Connecting to a Computer**

### **Connecting a Computer Using a VGA Cable**



1	Power cord
2	VGA to VGA cable
3	USB-A to USB-B cable



**NOTE:** The USB cable is not provided with your projector.

**NOTE:** The USB cable must be connected if you want to use the Page Up and Page Down features on the remote control.

#### **Monitor Loop-Through Connection Using VGA Cables**



1	Power cord
2	VGA to VGA cable

**NOTE:** Only one VGA cable is shipped with your projector. An additional VGA cable can be purchased on the Dell website at **dell.com**.

### **Connecting a Computer Using an RS232 cable**



1	Power cord
2	RS232 cable

**NOTE:** The RS232 cable is not shipped with your projector. Consult a professional installer for the cable and RS232 remote control software.

### Connecting a Computer Using a DisplayPort cable






1	Power cord
2	DisplayPort cable

# **Connecting a DVD Player**

### Connecting a DVD Player Using an S-video Cable

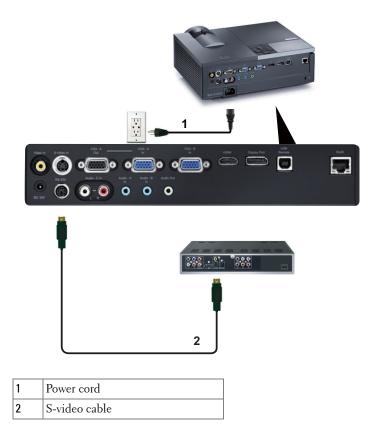

**NOTE:** The S-video cable is not shipped with your projector. You can purchase the S-Video extension (50 ft/100 ft) cable on the Dell website at **dell.com**.

#### **Connecting a DVD Player Using a Composite Video Cable**



1	Power cord
2	Composite video cable

**NOTE:** The Composite Video cable is not shipped with your projector. You can purchase the Composite Video Extension (50 ft/100 ft) cable on the Dell website at **dell.com**.

### **Connecting a DVD Player Using a Component Video Cable**



1	Power cord
2	VGA to Component Video cable

**NOTE:** The VGA to Component Video cable is not shipped with your projector. You can purchase the VGA to Component Video Extension (50 ft/100 ft) cable on the Dell website at **dell.com**.

### **Connecting a DVD Player Using an HDMI Cable**



1	Power cord
2	HDMI cable



**NOTE:** The HDMI cable is not shipped with your projector.

### **Connecting to Local Area Network**

To control the projector that is connected to a network through an RJ45 cable.



Local Area Network (LAN)

1	Power cord
2	RJ45 cable



**NOTE:** The RJ45 cable is not shipped with your projector.

**Professional Installation Options: Installation for Driving Automatic** Screen



1	Power cord
2	12V DC Plug
3	Automatic Screen

**NOTE:** Use the dimension of 12V DC plug in 1.7 mm (ID) x 4.00 mm (OD) x 9.5 mm (shaft) to connect the automatic screen with the projector.

12V DC Plug



### **Connection With Commercial RS232 Control Box**



1	Power cord	
2	RS232 cable	
3	Commercial RS232 control box	

**NOTE:** The RS232 cable is not shipped with your projector. Consult a professional technician to obtain the cable.

# Using Your Projector

# **Turning Your Projector On**



**NOTE:** Turn on the projector before you turn on the source (computer, DVD) player, etc.). The **Power** button light blinks blue until pressed.

- **1** Remove the lens cap.
- 2 Connect the power cord and appropriate signal cables. For information about connecting the projector, see "Connecting Your Projector" on page 9.
- 3 Press the Power button (see "Using the Control Panel" on page 25 to locate the Power button).
- **4** Turn on your source (computer, DVD player, etc.)
- **5** Connect your source to the projector using the appropriate cable. See "Connecting Your Projector" on page 9 for instructions to connect your source to the projector.
- **6** By default, the input source of projector is set to VGA-A. Change the input source of projector if necessary.
- 7 If you have multiple sources connected to the projector, press the Source button on the remote control or control panel to select the desired source. See "Using the Control Panel" on page 25 and "Using the Remote Control" on page 28 to locate the Source button.

# **Turning Your Projector Off**



**NOTICE:** Unplug the projector after properly shutting down as explained in the following procedure.

1 Press the **Power** button.



**NOTE:** The "Press Power Button to Turn off Projector" message will appear on the screen. The message disappears after 5 seconds or you can press the Menu button to clear it.

2 Press the Power button again. The cooling fans continue to operate for 120 seconds.

3 To power off the projector quickly, press the Power button and hold for 1 second while the projectors cooling fans are still running.



**NOTE:** Before you turn on the projector again, wait for 60 seconds to allow the internal temperature to stabilized.

4 Disconnect the power cord from the electrical outlet and the projector.

## Adjusting the Projected Image

### **Raising the Projector Height**

- 1 Press the Elevator button.
- 2 Raise the projector to the desired display angle, and then release the button to lock the elevator foot into position.
- **3** Use the tilt adjustment wheel to fine-tune the display angle.

### Lowering the Projector Height

- 1 Press the Elevator button.
- 2 Lower the projector, and then release the button to lock the elevator foot into position.



1	Elevator button		
2	Elevator foot (Angle of tilt: 0 to 9.5 degree)		
3	Tilt adjustment wheel		


# **Adjusting the Projector Zoom and Focus**

- CAUTION: To avoid damaging the projector, ensure that the zoom lens and elevator foot are fully retracted before moving the projector or placing the projector in its carrying case.
  - **1** Rotate the zoom tab to zoom in and out.
- **2** Rotate the focus ring until the image is clear. The projector focuses at distances ranging between 3.94 ft to 32.81 ft (1.2 m to 10 m).




1	Zoom tab
2	Focus ring

# **Adjusting Projection Image Size**

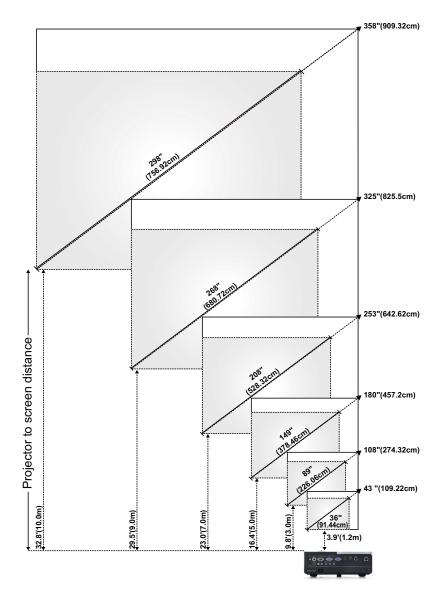

Screen	Max.	43" (109.22cm)	108" (274.32cm)	180" (457.2cm)	253" (642.62cm)	325" (825.50cm)	358" (909.32cm)
(Diagonal)	Min.	36" (91.44cm)	89" (226.06cm)	149" (378.46cm)	208" (528.32cm)	268" (680.72cm)	298" (756.92cm)
	Max. (WxH)	36.61" X 22.83"	91.73" X 57.48"	153.15" X 95.67"	214.17" X 133.86"	275.20" X 172.05"	303.54" X 189.76"
Screen		(93cm X 58cm)	(233cm X 146cm)	(389cm X 243cm)	(544cm X 340cm)	(699cm X 437cm)	(771cm X 482cm)
Size	Min. (WxH)	30.31" X 18.90"	75.59" X 47.24"	126.38" X 78.74"	176.77" X 110.24"	227.17" X 142.13"	252.36" X 157.87"
		(77cm X 48cm)	(192cm X 120cm)	(321cm X 200cm)	(449cm X 280cm)	(577cm X 361cm)	(641cmX 401cm)
Hd	Max.	25.98" (66cm)	64.57" (164cm)	107.48" (273cm)	150.39" (382cm)	193.31" (491cm)	213.39" (542cm)
па	Min.	21.26" (54cm)	53.15" (135cm)	88.58" (225cm)	124.02" (315cm)	159.45" (405cm)	177.17" (450cm)
Distance		3.94' (1.2m)	9.8' (3.0m)	16.4' (5.0m)	23.0' (7.0m)	29.5' (9.0m)	32.81' (10.0m)
* This graph is for user reference only.							


# **Using the Control Panel**

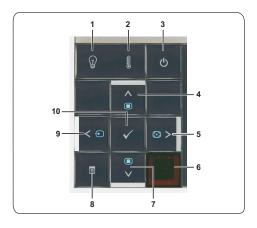

1       LAMP warning light       If the LAMP amber indicator is on or blinking, one of the following problems could be occurring: <ul> <li>Lamp is reaching its end of usable life</li> <li>Lamp module is not properly installed</li> <li>Lamp driver failure</li> <li>Color wheel failure</li> </ul> <li>For more information, see "Troubleshooting Your Projector" on page 63 and "Guiding Signals" on page 67.</li> <li>TEMP warning light</li> <li>If the TEMP amber indicator is on or blinking, one of the following problems could be occurring:         <ul> <li>Internal temperature of the projector is too high</li> <li>Color wheel failure</li> <li>For more information, see "Troubleshooting Your Projector" on page 63 and "Guiding Signals" on page 67.</li> </ul> </li> <li>Power</li> <li>Turns the projector on or off. For more information, see "Turning Your Projector On" on page 21 and "Turning Your Projector On" on page 21 and "Turning Your Projector Off" on page 21.</li> <li>Up  / Keystone adjustment</li> <li>Press to navigate through the On-Screen Display (OSD) Menu items.</li> <li>Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).</li> <li>Right / Auto Adjust</li> <li>Press to avigate through the On-Screen Display (OSD) Menu items.</li> <li>Press to synchronize the projector to the input source.</li> <li>MOTE: Auto Adjust does not operate if the on-screen display (OSD) is displayed.</li> <li>IR Receiver</li> <li>Point the remote control towards the IR receiver and press a button.</li>			
Projector" on page 63 and "Guiding Signals" on page 67.2TEMP warning lightIf the TEMP amber indicator is on or blinking, one of the following problems could be occurring: • Internal temperature of the projector is too high • Color wheel failure For more information, see "Troubleshooting Your Projector" on page 63 and "Guiding Signals" on page 67.3PowerTurns the projector on or off. For more information, see "Turning Your Projector On" on page 21 and "Turning Your Projector Off" on page 21.4Up ▲ / Keystone adjustmentPress to navigate through the On-Screen Display (OSD) Menu items.5Right ▶ / Auto AdjustPress to navigate through the On-Screen Display (OSD) Menu items.5Right ▶ / Auto AdjustPress to navigate through the On-Screen Display (OSD) Menu items.6IR ReceiverPoint the remote control towards the IR receiver	1	LAMP warning light	<ul><li>one of the following problems could be occurring:</li><li>Lamp is reaching its end of usable life</li><li>Lamp module is not properly installed</li><li>Lamp driver failure</li></ul>
<ul> <li>one of the following problems could be occurring:         <ul> <li>Internal temperature of the projector is too high</li> <li>Color wheel failure</li> <li>For more information, see "Troubleshooting Your Projector" on page 63 and "Guiding Signals" on page 67.</li> </ul> </li> <li>Power         <ul> <li>Turns the projector on or off. For more information, see "Turning Your Projector On" on page 21 and "Turning Your Projector Off" on page 21.</li> </ul> </li> <li>Up        <ul> <li>/ Keystone adjustment</li> <li>Press to navigate through the On-Screen Display (OSD) Menu items.</li> <li>Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).</li> </ul> </li> <li>Right        <ul> <li>/ Auto Adjust</li> <li>Press to navigate through the On-Screen Display (OSD) Menu items.</li> <li>Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).</li> </ul> </li> <li>Right        <ul> <li>/ Auto Adjust</li> <li>Press to synchronize the projector to the input source.</li> <li>MOTE: Auto Adjust does not operate if the on-screen display (OSD) is displayed.</li> <li>IR Receiver</li> <li>Point the remote control towards the IR receiver</li> </ul> </li> </ul>			Projector" on page 63 and "Guiding Signals" on
Projector" on page 63 and "Guiding Signals" on page 67.3PowerTurns the projector on or off. For more information, see "Turning Your Projector On" on page 21 and "Turning Your Projector Off" on page 21.4Up ∧ / Keystone adjustmentPress to navigate through the On-Screen Display (OSD) Menu items.5Right ▷ / Auto AdjustPress to navigate through the On-Screen Display (OSD) Menu items.5Right ▷ / Auto AdjustPress to navigate through the On-Screen Display (OSD) Menu items.6IR ReceiverPoint the remote control towards the IR receiver	2	TEMP warning light	<ul><li>one of the following problems could be occurring:</li><li>Internal temperature of the projector is too high</li></ul>
Image: Second			Projector" on page 63 and "Guiding Signals" on
adjustment       (OSD) Menu items.         Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).         5       Right ≥ / Auto Adjust         Press to navigate through the On-Screen Display (OSD) Menu items.         Press to synchronize the projector to the input source.         Image: NOTE: Auto Adjust does not operate if the on-screen display (0SD) is displayed.         6       IR Receiver	3	Power	information, see "Turning Your Projector On" on page 21 and "Turning Your Projector Off" on
the projector (+40/-35 degrees).         Right ≥ / Auto Adjust       Press to navigate through the On-Screen Display (OSD) Menu items.         Press to synchronize the projector to the input source.       Press to synchronize the projector to the input source.         MOTE: Auto Adjust does not operate if the on-screen display (OSD) is displayed.       Point the remote control towards the IR receiver	4	·	· ·
(OSD) Menu items.         Press to synchronize the projector to the input source.         Image: Construction of the image of the image.         6       IR Receiver       Point the remote control towards the IR receiver			
source.         NOTE: Auto Adjust does not operate if the on-screen display (0SD) is displayed.         6       IR Receiver       Point the remote control towards the IR receiver	5	Right > / Auto Adjust	
on-screen display (OSD) is displayed.           6 IR Receiver         Point the remote control towards the IR receiver			
	6	IR Receiver	

7	Down 🔽 / Keystone adjustment	Press to navigate through the On-Screen Display (OSD) Menu items.
		Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).
8	Menu 📃	Press to activate the OSD. Use the directional keys and the <b>Menu</b> button to navigate through the OSD.
9	Left < / Source	Press to navigate through the On-Screen Display (OSD) Menu items.
		Press to toggle through Analog RGB, Composite, Component (YPbPr via VGA), HDMI, DisplayPort and S-video sources when multiple sources are connected to the projector.
10	Enter 📈	Press to confirm the selection item.

## **Using the Remote Control**

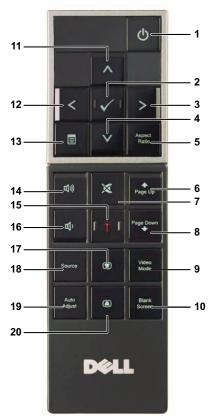

1	Power 🖒	Turns the projector on or off. For more information, see "Turning Your Projector On" on page 21 and "Turning Your Projector Off" on page 21.
2	Enter 🔽	Press to confirm the selection.
3	Right >	Press to navigate through the On-Screen Display (OSD) Menu items.
4	Down 🔽	Press to navigate through the On-Screen Display (OSD) Menu items.

A . D . '	
Aspect Ratio	Press to change aspect ratio of a displayed image.
Page up 🔶	Press to move to previous page.
	<b>NOTE:</b> The USB cable must be connected if you want to use the Page Up feature.
Mute 🐹	Press to mute or un-mute the projector speaker.
Page down 🔶	Press to move to next page.
	<b>NOTE:</b> The USB cable must be connected if you want to use the Page Down feature.
Video mode	The projector has preset configurations that are optimized for displaying data (presentation slides) or video (movies, games, etc.).
	Press the Video Mode button to toggle between Presentation mode, Bright mode, Movie mode, sRGB, or Custom mode.
	Pressing the Video Mode button once will show the current display mode. Pressing the Video Mode button again will switch between modes.
Blank screen	Press to hide/unhide the image.
Up 📐	Press to navigate through the On-Screen Display (OSD) Menu items.
Left <	Press to navigate through the On-Screen Display (OSD) Menu items.
Menu	Press to activate the OSD.
Volume up 🕂	Press to increase the volume.
Laser 🏥	Point the remote control at the screen, press and hold the laser button to activate the laser light.
	Caution: Do not look into the laser point when it is on. Avoid shining the laser light into eyes.
Volume down 📃	Press to decrease the volume.
Keystone adjustment	Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).
Source	Press to switch between Analog RGB, Composite, Component (YPbPr, via VGA), HDMI, DisplayPort and S-video sources.
	Page up ▲ Mute ☑ Page down ↓ Video mode Video mode Up ▲ Blank screen Up ▲ Left ☑ Menu ☑ Volume up ▲ Laser ➡ Volume down ➡ Keystone adjustment ☑

19	Auto adjust	Press to synchronize the projector with the input source. Auto adjust does not operate if the OSD is displayed.
20	Keystone adjustment	Press to adjust image distortion caused by tilting the projector (+40/-35 degrees).

### **Installing the Remote Control Batteries**

**NOTE:** Remove the batteries from the remote control when not in use. **1** Press the tab to lift the battery compartment cover. 1

2 Check the polarity (+/-) marking on the batteries.

**3** Insert the batteries and align their polarity correctly according to the marking in the battery compartment.




**NOTE:** Avoid mixing different types of batteries or using new and old batteries together.

4 Slip the battery cover back.



### **Operating Range With Remote Control**

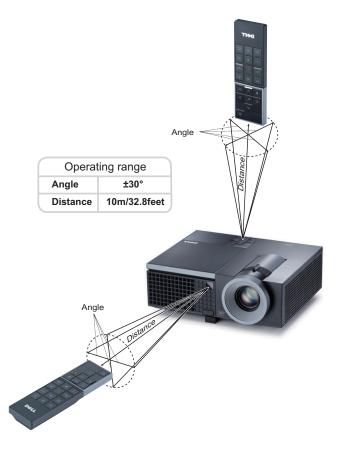

**NOTE:** Actual operating range may slightly differ from the diagram. Weak batteries will also prevent the remote control from properly operating the projector.

# Using the On-Screen Display

- The projector has a multi-language On-Screen Display (OSD) Menu that can be displayed with or without an input source.
- To navigate through the tabs in the Main Menu, press the  $\leq$  or  $\geq$  buttons on your projectors control panel or remote control.
- To select a submenu, press the 📈 button on your projector's control panel or remote control.
- To select an option, press the 🔊 or 💟 buttons on your projector's control panel or remote control. The color changes to dark blue. When an item is selected, the color changes to dark blue.
- Use the is or is buttons on the control panel or remote control to adjust the settings.
- To go back to Main Menu, go to Back tab and press the 🔽 button on the control panel or the remote control.
- To exit the OSD, go to EXIT tab and press the <u>w</u> button or press the <u>Menu</u> button directly on the control panel or the remote control.

#### Main Menu




### AUTO-ADJUST

Auto Adjust automatically adjusts the projector's **Frequency** and **Tracking** in PC mode. While Auto Adjustment is in progress, the following message appears on the screen:.



### **INPUT SELECT**

The Input Select menu allows you to select your projector's input source.

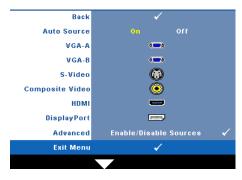

Auto Source—Select Off (the default) to lock the current input signal. If you press the Source button when the Auto Source mode is set to Off, you can manually select the input signal. Select On to auto detect the available input signals. If you press the Source button when the projector is on, it automatically finds the next available input signal.

VGA-A—Press 📈 to detect VGA-A signal.

VGA-B—Press 📈 to detect VGA-B signal.

S-VIDEO—Press 📈 to detect S-Video signal.

COMPOSITE VIDEO—Press 📈 to detect Composite Video signal.

HDMI—Press 🔽 to detect HDMI signal.

**DISPLAYPORT**—Press **I** to detect DisplayPort signal.

Advanced—Press 📈 to activate Input Select Advanced menu.

#### **INPUT SELECT ADVANCED**

The Input Select Advanced menu allows you to enable or disable input sources.



**VGA-A**—Use  $\triangleleft$  and  $\triangleright$  to enable or disable VGA-A input.

**VGA-B**—Use  $\triangleleft$  and  $\triangleright$  to enable or disable VGA-B input.

**S-VIDEO**—Use  $\triangleleft$  and  $\geqslant$  to enable or disable S-Video input.

**COMPOSITE VIDEO**—Use  $\triangleleft$  and  $\supseteq$  to enable or disable Composite Video input.

**HDMI**—Use  $\triangleleft$  and  $\triangleright$  to enable or disable HDMI input.

**DISPLAYPORT**—Use  $\triangleleft$  and  $\triangleright$  to enable or disable DisplayPort input.

**NOTE:** You cannot disable your current input source. At anytime, a minimum of two input sources have to be enabled.

### PICTURE (in PC Mode)

Using the Picture menu, you can adjust the display settings of your projector. The Picture menu, provides the following options:



VIDEO MODE—Allows you to optimize the display image: Presentation, Bright, Movie, sRGB (provides more accurate color representation), and Custom (set your preferred settings). If you adjust the settings for Brightness, Contrast, Saturation, Sharpness, Tint, and Advanced, the projector automatically switches to Custom.

**NOTE:** If you adjust the settings for **Brightness**, **Contrast**, **Saturation**, Sharpness, Tint, and Advanced the projector automatically switches to Custom.


**BRIGHTNESS**—Use  $\triangleleft$  and  $\triangleright$  to adjust the brightness of the image.

**CONTRAST**—Use  $\triangleleft$  and  $\triangleright$  to adjust the display contrast.

Advanced—Press vi to activate Picture Advance Menu. See "PICTURE ADVANCED" on page 37.

### PICTURE (in Video Mode)

Using the Picture menu, you can adjust the display settings of your projectors. The Picture menu, provides the following options:

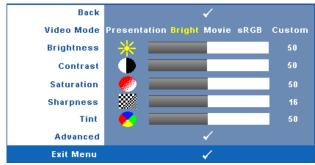

**VIDEO MODE**—Allows you to optimize the display image: **Presentation**, **Bright**, Movie, sRGB (provides more accurate color representation), and Custom (set your preferred settings). If you adjust the settings for Brightness, Contrast, Saturation, Sharpness, Tint, and Advanced, the projector automatically switches to Custom.

**NOTE:** If you adjust the settings for **Brightness**, **Contrast**, **Saturation**, Sharpness, Tint, and Advanced, the projector automatically switches to Custom.

**BRIGHTNESS**—Use  $\triangleleft$  and  $\triangleright$  to adjust the brightness of the image.

**CONTRAST**—Use  $\triangleleft$  and  $\triangleright$  to adjust the display contrast.

**SATURATION**—Allows you to adjust the video source from black and white to fully saturated color. Press  $\overline{\langle}$  to decrease the amount of color in the image and  $\overline{\rangle}$  to increase the amount of color in the image.

**SHARPNESS**—Press  $\triangleleft$  to decrease the sharpness and  $\triangleright$  to increase the sharpness.

**TINT**—Press  $\triangleleft$  to increase the amount of green in the image and  $\triangleright$  to increase the amount of red in the image (available for NTSC only).


Advanced—Press vi to activate Picture Advance Menu. See "PICTURE ADVANCED" below.



NOTE: Saturation, Sharpness, and Tint are only available when input source is from Composite or S-Video.

#### PICTURE ADVANCED

Using the Picture Advanced menu, you can adjust the display settings of your projector. The Picture Advanced menu provides the following options:

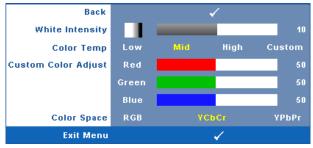

WHITE INTENSITY—Use  $\leq$  and  $\geq$  to adjust the display white intensity.


**COLOR TEMP**—Allows you to adjust the color temperature. The screen appears cooler at higher color temperatures and warmer at lower color temperatures. When you adjust the values in the **Color Adjust** menu, the Custom mode is activated. The values are saved in the Custom mode.

**CUSTOM COLOR ADJUST**—Allows you to manually adjust the colors red, green, and blue.

**COLOR SPACE**—Allows you to select the color space, options are: RGB, YCbCr, and YPbPr.

#### DISPLAY (in PC Mode)

Using the **Display** menu, you can adjust the display settings of your projector. The Picture menu, provides the following options:

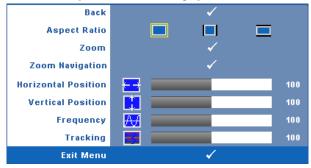

**ASPECT RATIO**—Allows you to select the aspect ratio to adjust how the image appears.

- Original Select Original to maintain the aspect ratio of image projected according to input source.
- 4:3 The input source scales to fit the screen and projects a 4:3 image.
- Wide The input source scales to fit the width of the screen to project a wide screen image.



**ZOOM**—Press **V** to activate **Zoom** menu.

Select the area to zoom and press  $\boxed{100}$  to view zoomed image.



Adjust the image scale by pressing  $\triangleleft$  or  $\geqslant$  and press  $\swarrow$  to view.



**ZOOM NAVIGATION**—Press M to activate **Zoom Navigation** menu.

Use  $\leq$   $\geq$   $\land$   $\lor$  to navigate projection screen.

**HORIZONTAL POSITION**—Press  $\leq$  to move the image to the left and  $\geq$  to move the image to the right.

**VERTICAL POSITION**—Press  $\leq$  to move the image down and  $\geq$  to move the image up.

**FREQUENCY**—Allows you to change the display data clock frequency to match the frequency of your computer graphics card. If you see a vertical flickering wave, use **Frequency** control to minimize the bars. This is a coarse adjustment.

**TRACKING**—Synchronize the phase of the display signal with the graphic card. If you experience an unstable or flickering image, use **Tracking** to correct it. This is a fine adjustment.

#### DISPLAY (in Video Mode)

Using the **Display** menu, you can adjust the display settings of your projector. The Picture menu, provides the following options:




**ASPECT RATIO**—Allows you to select the aspect ratio to adjust how the image appears.

- Original Select Original to maintain the aspect ratio of image projected according to input source.
- 4:3 The input source scales to fit the screen and projects a 4:3 image.
- Wide The input source scales to fit the width of the screen to project a wide screen image.



**ZOOM**—Press **I** to activate **Zoom** menu.

Select the area to zoom and press  $\swarrow$  to view zoomed image. Adjust the image scale by pressing  $\triangleleft$  or  $\searrow$  and press  $\bowtie$  to view.

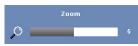

Adjust the image scale by pressing  $\triangleleft$  or  $\geqslant$  and press  $\swarrow$  to view.



**ZOOM NAVIGATION**—Press M to activate **Zoom Navigation** menu.

Use  $\leq$   $\geq$   $\land$   $\lor$  to navigate projection screen.

#### LAMP

Using the Lamp menu, you can adjust the display settings of your projector. The Lamp menu provides the following options:



LAMP MODE—Allows you to select between Normal and ECO mode.


Normal mode operates at full power level. ECO Mode operates at a lower power level which may provide longer lamp life, quieter operation, and dimmer luminance output on the screen.

**LAMP HOUR**—Displays the operating hours since the last lamp timer reset.

LAMP HOUR RESET—Select Yes to reset the lamp timer.

#### SET UP

The Set Up menu allows you to adjust settings for Language, Projector Mode, Keystone, Alert Volume, and Network.

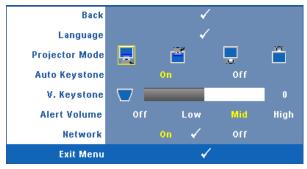

**LANGUAGE**—Allows you to set the language for the OSD. Press *int* to activate the **Language** menu.



**PROJECTOR MODE**—Allows you to select the projector mode, depending upon how the projector is mounted.

- 📃 Front Projection-Desktop This is the default option.
- Front Projection-Ceiling Mount The projector turns the image upside down for ceiling-mounted projection.
- Rear Projection-Desktop The projector reverses the image so that you can project from behind a translucent screen.
- Rear Projection-Ceiling Mount The projector reverses and turns the image upside down. You can project from behind a translucent screen with a ceiling-mounted projection.

**AUTO KEYSTONE**—Select **On** to enable the auto correction for vertical image distortion caused by tilting the projector.

**V. KEYSTONE**—Manually adjust the vertical image distortion caused by tilting the projector.

**ALERT VOLUME**—Allows you to set buzzer alert loudness (Off, Low, Mid or High) for power on/off, warning and command keys.

**NETWORK**—Select **On** to activate network connection. Select **Off** to disable network connection. Press **1** to activate **Network** menu. See "NETWORK" on page 42.

#### NETWORK

The Network menu allows you to configure the network connection settings.

Back				-			
DHCP		On			0	ff	
IP Address	192		168		4		137
Subnet Mask	255		255		255		0
Gateway	192		168		4		137
DNS	192		168				4
Store				$\checkmark$			
Reset Network		Yes				No	
Exit Menu				1			

**IP ADDRESS**—Automatically or manually assigns the IP address to the projector connected to the network.

SUBNET MASK—Configure the Subnet Mask of the network connection.

**GATEWAY**—Check the Gateway address with your network/system administrator if you configure it manually.

**DNS**—Check the DNS Server IP address with your network/system administrator if you configure it manually.

**STORE**—Press view the changes made in network configuration settings.

**RESET NETWORK**—Select Yes to reset network configuration.

#### INFORMATION

The Information menu displays the current projector settings.

Back	✓
Model Name	4310WX
Input Source	ANALOG RGB 1024X768 60Hz
Operating Hour	10 hr
PPID	CN-0W892J-S0081-46B-0208
IP Address	192.168.4.137
Exit Menu	✓

#### OTHERS

The Others menu allows you to change settings for Menu, Screen, Audio, Power, Security, and Closed Caption (for NTSC only). You can also perform Test Pattern and Factory Reset.



**MENU SETTINGS**—Select and press it to activate menu settings. The menu settings consists of the following options:



**MENU POSITION**—Allows you to change the position of the OSD menu on the screen.

**MENU TRANSPARENCY**—Select to change the transparency level of the OSD background.

**MENU TIMEOUT**—Allows you to adjust the time for an OSD timeout. By default, the OSD disappears after 20 seconds of non-activity.

**MENU LOCK**—Select On to enable Menu Lock and hide the OSD menu. Select OFF to disable the Menu Lock. If you want to disable the Menu Lock function and have the OSD disappear, press the Menu button on the control panel or remote control for 15 seconds, then disable the function.

**SCREEN SETTINGS**—Select and press *i* to activate screen settings. The screen settings menu consists of the following options:

Back		✓
Capture Screen		$\checkmark$
Screen	Dell	Captured
Reset		✓
Exit Menu		✓

**CAPTURE SCREEN**—Select and press is to capture the screen display, the following message appears on the screen.

Screen capture in progress	s
0	100%

**NOTE:** To capture a full image, ensure the input signal that is connected to the projector is 1280 x 800 resolution.

**SCREEN**—Select **Dell** to use the Dell logo as wallpaper. Select **Captured** to set the captured image as wallpaper.

**RESET**—Select and press in to delete the captured picture and set back to the default setting.

**AUDIO SETTINGS**—Select and press *M* to change audio settings. The audio settings menu consists of the following options:



**AUDIO INPUT**—Select the Audio input source, options are: Audio-A, Audio-B, Audio-C, HDMI and DisplayPort.

**VOLUME**—Press  $\triangleleft$  to decrease the volume and  $\geqslant$  to increase the volume.

**SPEAKER**—Select On to enable speaker. Select Off to disable speaker.

**MUTE**—Allows you to mute the sounds for audio input and audio output.

**POWER SETTINGS**—Select and press v to activate power settings. The power settings menu consists of the following options:

	0	-			
Back			<ul> <li>Image: A second s</li></ul>		
Power Saving	Off	30min	60min	90min	120min
Quick Shutdown		Yes		No	
Exit Menu			<ul> <li>Image: A second s</li></ul>		

**POWER SAVING**—Select Off to disable Power Saving mode. By default, the projector is set to enter power saving mode after 120 minutes of no activity. A warning message appears on screen showing a 60-second countdown before switching to power saving mode. Press any key buttons during countdown period to stop power saving mode.

You can also set a different delay period to enter power saving mode. The delay period is the time you want the projector to wait without an input signal. Power saving can be set to 30, 60, 90, or 120 minutes.

If an input signal is not detected during the delay period, the projector turns off the lamp and goes into power saving mode. If an input signal is detected within the delay period, the projector automatically turns on. If an input signal is not detected within two hours during power saving mode, the projector switches from Power Saving mode to Power Off mode. To turn on the projector press the Power button.

QUICK SHUTDOWN—Select Yes to turn off the projector with a single press of the Power button. This function allows the projector to quick power off with an accelerated fan speed. Slightly higher acoustic noise is expected during quick power off.



**NOTE:** Before you turn on the projector again, wait for 60 seconds to allow the internal temperature to stabilize. The projector will take a longer time to turn on if you try to power on immediately. Its cooling fan will run at full speed for about 30 seconds to stabilize the internal temperature.

**SECURITY SETTINGS**—Select and press *integration* to activate security settings. The security settings menu allows you to enable and set password protection.



**PASSWORD**—When Password Protect is enabled, a Password Protect screen requesting you to enter a password will be displayed when the power plug is inserted into the electrical outlet and the power for the projector is first turned on. By default, this function is disabled. You can enable this feature, by selecting **Enabled**. If the password has been set before, key in the password first and select the function. This password security feature will be activated the next time you turn on the projector. If you enable this feature, you will be asked to enter the projector's password after you turn on the projector:

1 First time password input request:

**a** Go to **Others** menu, press i and then select **Password** to **Enable** the password setting.



**b** Enabling the Password function will pop up a character screen, key in a 4-digit number from the screen and press 1.




- c To confirm, enter the password again.
- **d** If the password verification is successful, you may resume with accessing the projector's functions and its utilities.
- 2 If you have entered an incorrect password, you will be given another 2 chances. After the three invalid attempts, the projector will automatically turn off.



**NOTE:** If you forget your password, contact DELL<sup>™</sup> or a qualified service personnel.

- **3** To disable the password function, select Off to disable the function.
- 4 To delete the password, select Delete.

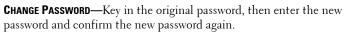



**CLOSED CAPTION**—Select **On** to enable close caption and activate the closed caption menu. Select an appropriate closed captions option: CC1, CC2, CC3, and CC4.


Back		<	·	
Select	CC1	CC2	CC3	CC4
Exit Menu		<ul> <li>✓</li> </ul>	1	

**NOTE:** Closed caption option is available for NTSC only.

**TEST PATTERN**—Test Pattern is used to test focus and resolution.

You can enable or disable the **Test Pattern** by selecting **Off**, 1 or 2. You can also invoke the **Test Pattern** 1 by pressing and holding down and buttons on the control panel simultaneously for 2 seconds. You can also invoke the test pattern 2 by pressing and holding down and buttons on the control panel simultaneously for 2 seconds.

Test Pattern 1:

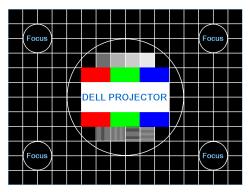

Test Pattern 2:



**FACTORY RESET**—Select and press *i* to reset all settings to its factory default, the warning message below appears.



Reset items include both computer sources and video source settings.

## Managing the Projector From Web Management

#### **Configuring the Network Setting**

If the projector is connected to a network, you can access the projector using a web browser by configuring the network setting (TCP/IP). When using the network function, the IP address should be unique. For configuring the network setting, refer to "NETWORK" on page 42.

#### **Accessing Web Management**

Use Internet Explorer 5.0 and above or Netscape Navigator 7.0 and above and enter the IP address. You can now access Web Management and manage the projector from a remote location.

#### **Managing Properties**

#### Home

			www.dell.com
DELL 4310WX Web Mana			
4310WX Web Mana	gement		
	Home		
Home			
Network Setting	Welcome to DELL 4310		
0	Projector Information		
Projector Status and Control	Model Name:	4310WX	
<u> </u>	Projector Name:		
E-mail Alert	Location:		
	Contact:		
Password Setting	Status:	Standby	
	Lamp Hours:		
Eirmware Update	Operation Hours:		
_	IP Address:	192.168.3.88	
	MAC Address:	00:1E:C9:BA:71:1C	
	Admin Password:	Not Set!	
	PPID:	CN-011111-SD081-111-1111	
	Language		
		Submit	
	English	v Submit	

- Access the Web Management Home page by entering the projector's IP address at the web browser. See "NETWORK" on page 42.
- Language: Allows you to set the language for web management.

#### **Network Settings**

See OSD section on page 42.

🜮 💶 🖓 4310WX Web Mana	gement			
ome	Network S	ettings		
stwork Setting	Model Name:	4310WX		
rojector Status and Control	Projector Name: Location:			
mail Alert	Contact:			
sword Setting		Save		
mware Update	O DHCP	<ul> <li>Manual</li> </ul>		
	IP Address	192.168.3.88		
	Subnet Mask	255.255.255.0		
	Gateway	192.168.3.254		
	DNS Server	192.168.1.167		
		Save		

- Set up the Model Name, Projector Name, Location and Contact information (up to 21 characters for each field). Press Save to store the settings.
- Choose **DHCP** to assign an IP address to the projector from a DHCP server automatically, or **Manual** to assign an IP address manually.

#### **Projector Status and Control Page**

DELL 4310WX Web Man	igement		w.	ww.
▶ Home	Projector S	tatus and Control		Ī
Network Setting	Projector Status		Refresh	
Projector Status and Control	Projector Status	Standby	Power ON Power OFF	
E-mail Alert	Power Saving	Select		
Password Setting	Alert Status		Clear	
Firmware Update	Image Control			
	Operation Mode	Normal Mode     OECO Mode		
	Projector Mode	Select ~		
	Source Select	Select 🗹		
	Video Mode	Select V		
	Blank screen	⊙ On ⊙ Off		
	Aspect Ratio	Original ○ 4:3 ○ Wide		
	Brightness	0 (0-100)	Set	
	Contrast	0 (0=100)	Set	
	Auto Adjust	]		
	Audio Control			
	Audio Input	Audio-A	_	
	Volume	0 (0-20)	Set	
	Speaker	O On Off		
	Alert Volume	Off 💌		
	Factory Reset			

- **Projector Status**: There are 4 status: Lamp On, Standby, Power Saving and Cooling. Click the **Refresh** button to refresh the status and control settings.
- Power Saving: Power Saving can be set to Off, 30, 60, 90, or 120 minutes. Refer to page 45.
- Alert Status: There are 4 error status: Lamp warning, Low lamp life, Temperature warning, and Non-original lamp error. Your projector might lock up in protection mode if any of the alerts is activated. To exit protection mode, click the Clear button to clear the Alert Status before you could Power ON your projector.
- **Projector Mode**: Allows you to select the projector mode, depending upon how the projector is mounted. There are 4 projection modes: Front Projection-Desktop, Front Projection-Ceiling Mount, Rear Projection-Desktop and Rear Projection-Ceiling Mount
- Source Select: The Source Select menu allows you to select your projector input source. You can select VGA-A, VGA-B, S-VIDEO, COMPOSITE VIDEO, HDMI and DisplayPort.
- Video Mode: Select a mode to optimize the display image based on how the projector is being used:

- Presentation: Best for presentation slides.

- Bright: Maximum brightness and contrast.
- Movie: For viewing movie & photo.
- sRGB: Provide a more accurate color representation.
- Custom: User preferred settings.
- Blank Screen: You can select On or Off.
- Aspect Ratio: Allows you to select the aspect ratio to adjust how the image appears.
- Brightness: Select value to adjust the brightness of the image.
- Contrast: Select value to adjust the display contrast.
- Audio Input: You can select Audio-A, Audio-B, Audio-C, HDMI and DisplayPort for the input source
- Volume: You can select the value  $(0 \sim 20)$  for the audio volume
- **Speaker**: You can select On to enable the audio function or select Off to disable the audio function.
- Alert Volume: Set the alert loudness (Off, Low, Mid, or High) for power on/off, warning and command keys.

#### E-mail Alert

	www.dell.com
DOLL 4310WX Web Manag	gement
E Home	E-mail Alert
Network Setting	E-mail Alert O Enable O bisable E-mail Alert Test
Projector Status and Control	0 [@]0 CC [@]
E-mail Alert	From
Password Setting	Subject 4310VVC: Alert
Eirmware Update	SMTP Setting
	Out going SMTP server
	User name
	Password
	Alert Condition
	Lamp warning
	Low lamp life
	Temperature warning Non-original lamp module
	Save

- E-mail Alert: You can set whether to be notified by email (Enable) or not (Disable).
- To/CC/From: You can enter email address of sender (From) and recipients (To/Cc) to receive notification when an abnormality or warning occurs.
- Alert Condition: You can select the abnormalities or warnings to be notified by email. When any of the alert conditions occur, an email will be sent to the recipients (To/Cc).
- Out going SMTP server, User name and Password should be provided by your network administrator or MIS.

#### **Password Setting**

					www.de
DELL 4310WX Web Man	agement				
Home	Password S	etting			
Network Setting	Plasse set your na	acciword if you or	nable this feature t	for first-time. If password is	
	set, you will require Management.	to enter with yo	our password upor	n you connect to the Web	
Projector Status and Control					
E-mail Alert	Administrator	O Enable	<ul> <li>Disable</li> </ul>	Submit	
Password Setting	New Password	U Enable	O Disable	Submit	
Firmware Update	Confirm Password				
innware opuate	Commin Password				
	Set Security For SNI				
	Write Community	private		Submit	

Use Password Setting to set up an administrator password to access the **Web Management**. When enabling password for the first time, set the password before enabling it. When the password function is enabled, the administrator password will be required for accessing the **Web Management**.

- New Password: Enter new password
- Confirm Password: Enter password again and submit
- Write Community: Set security for SNMP. Enter password and submit.

**NOTE:** Contact Dell if you forget your administrator password.

#### Login Page


	www.dell.com
DCLL 4310WX Web Management	
Websers to DELL	I310WX Web Management.
welcome to DELL 4	IS IOWX Web Management.
Administrator Password:	
	Login
	- Marine
Projector Information	
Projector Name:	
IP Address:	192.168.3.88

• Administrator Password: Enter the Administrator Password and click Login.

#### **Firmware Update**

DELL 4310WX Web Management	www.doll.
▶ Home	Firmware Update
Network Setting	Firmware update will take about a minute. Do not interrupt the process once it has begun. Keep the connection established until completion of
Projector Status and Control	process. The network system will auto reboot and you can re-login after update is complete.
E-mail Alert	Network Firmware Version: N03
Password Setting	
Firmware Update	Update Cancel

Use the Firmware Update page to update your projector's firmware. Press Update to start.

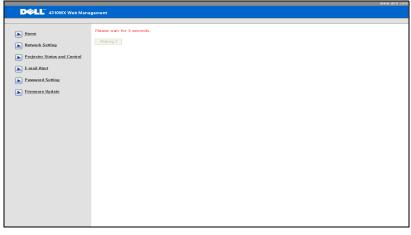

• Please wait till the count reaches 0.

	www.dell.
DELL" 4310WX Web Mana	igement
Home	Please wait for 3 seconds.
Network Setting	
Projector Status and Control	
E-mail Alert	
Password Setting	
Eirmware Update	
)	

• Wait for 3 seconds and it will proceed to the next step automatically.

Upgrade Firmware	
Please select a file (~.bin) to upgrade : D:VA-top\network FVV4310 Browse	
Upgrade Cancel	
(Upgrading firmware may take 60 seconds)	
Upgrade must NOT be interrupted !	

• Select the file to upgrade and click the **Upgrade** button. When upgrading is in progress, the **Cancel** button is disabled.

Please wait. Click on button to proceed after 8 seconds.	
Waiting(6)	

• Please wait till the count reaches 0.

Please wait. Click on button to proceed after 8 seconds.
Re Login

• When upgrade is complete, please click the **ReLogin** button to go back to the Web Management Home Page.

I would like remote access the projector via Internet. What is the better setting for the browser?	follow the st 1 Open Co General t Settings • 2 Some fire HTTP ap	eps below: <b>ntrol Panel</b> ab → Temp → Tick Even wall or anti-	for the browser, please $\rightarrow$ Internet Options $\rightarrow$ porary Internet Files $\rightarrow$ ry visit to the pages. virus may block the possible turn off the
I would like to remote access the projector via Internet. What socket port number should I open for it in the firewall?	The followir projector us	0	IP socket ports which
	UDP/TCP	Port Number	Description
	TCP	80	Web configuration (HTTP)
	UDP/TCP	25	SMTP: used for email routing between mail servers
	UDP/TCP	161	SNMP: Simple Network Management Protocol
	UDP	9131	AMX: used for AMX discovery

TIPS:

Why am I unable to access the projector via Internet?	<b>1</b> Check whether your computer/laptop is connected to the Internet.
	<b>2</b> Check with your MIS or network administrator whether your computer/laptop is in the same subnet.

Why am I unable to access the SMTP server?	<ol> <li>Check with your MIS or network administrator whether the SMTP server function is open for the projector and the IP assigned to the projector is allowed to access the SMTP server. The projector's SMTP socket port number is 25, this cannot be changed.</li> <li>Check if the out going SMTP server, user name, and password are set correctly.</li> <li>Some SMTP servers will check whether the mail address of "From" correlates with the "User name" and "Password". For example, you use test@dell.com as the mail address in "From". You should also use test@dell.com account information for the User name and the password to log in the SMTP server.</li> </ol>
Why am I unable to receive the test alert email even though the projector already indicates the test mail is already sent?	It could be because the SMTP server recognized the alert mail as a spam mail or because of the SMTP server restriction. Check with your MIS or network administrator for the SMTP server's setting.

# 4

# **Troubleshooting Your Projector**

If you experience problems with your projector, see the following troubleshooting tips. If the problem persists, contact Dell<sup>™</sup>. See Contacting Dell<sup>™</sup> on page 76.

#### Problem

No image appears on the screen



#### **Possible Solution**

- Ensure that the lens cap is removed and the projector is turned on.
- Ensure that the INPUT SELECT is set correctly in the OSD menu.
- Ensure the external graphics port is enabled. If you are using a Dell<sup>™</sup> portable computer, press m m (Fn+F8). For other computers, see your respective documentation. The output signal from the computer is not according to industry standards. Should this happen, upgrade the video driver of the computer. For Dell computer, see support.dell.com.
- Ensure that all the cables are securely connected. See "Connecting Your Projector" on page 9.
- Ensure that the pins of the connectors are not bent or broken.
- Ensure that the lamp is securely installed (see "Changing the Lamp" on page 69).
- Use Test Pattern in the Others menu. Ensure that the colors of the test pattern are correct.

Missing Input Source.	Go to Advanced Enable/Disable Sources,
Cannot switch to particular	ensure that particular Input Source is set to
Input Source.	Enable.

Problem <i>(continued)</i>	Possible Solution (continued)
Partial, scrolling, or incorrectly displayed image	<b>1</b> Press the <b>Auto Adjust</b> button on the remote control or the control panel.
	2 If you are using a Dell <sup>™</sup> portable computer, set the resolution of the computer to WXGA (1280 x 800) or XGA (1024 x 768):
	<ul> <li>a Right-click the unused portion of your Microsoft<sup>®</sup> Windows<sup>®</sup> desktop, click Properties and then select Settings tab.</li> <li>b Verify that the setting is 1280x800 or 1024 x 768 pixels for the external monitor port.</li> <li>c Press  (Fn+F8).</li> </ul>
	If you experience difficulty in changing resolutions or your monitor freezes, restart all the equipment and the projector.
	If you are not using a Dell <sup>™</sup> portable computer, see your documentation. The output signal from the computer may not be according to industry standards. Should this happen, upgrade the video driver of the computer. For a Dell computer, see <b>support.dell.com</b> .
The screen does not display your presentation	If you are using a portable computer, press Fn (Fn+F8).
Image is unstable or flickering	Adjust the tracking in the OSD <b>Display</b> sub- menu (in PC Mode only).
Image has vertical flickering bar	Adjust the frequency in the OSD <b>Display</b> sub- menu (in PC Mode only).
Image color is incorrect	<ul> <li>If the display receives the wrong signal output from the graphics card, please set the signal type to RGB in the OSD Display tab.</li> <li>Use Test Pattern in the Others menu. Ensure that the colors of the test pattern are correct.</li> </ul>
Image is out of focus	<ul> <li>1 Adjust the focus ring on the projector lens.</li> <li>2 Ensure that the projection screen is within the required distance from the projector (3.94 ft [1.2 m] to 32.81 ft [10 m]).</li> </ul>

Problem <i>(continued)</i>	Possible Solution (continued)
The image is stretched when displaying a 16:9 DVD	The projector automatically detects the input signal format. It will maintain the aspect ratio of the projected image according to input signal format with an Original setting.
	If the image is still stretched, adjust the aspectratio in the Set Up menu in the OSD.
Image is reversed	Select <b>Set Up</b> from the OSD and adjust the projector mode.
Lamp is burned out or makes a popping sound	When the lamp reaches its end of life, it may burn out and may make a loud popping sound If this occurs, the projector does not turn bac on. To replace the lamp, see "Changing the Lamp" on page 69.
LAMP light is solid amber	If the LAMP light is solid amber, replace the lamp.
LAMP light is blinking amber	If the LAMP light is blinking amber, Lamp module connection may be disrupted. Please check the lamp module and ensure that it is properly installed.
	If the LAMP light and the Power light are blinking amber, the lamp driver has failed an the projector will automatically shut down.
	If the LAMP and TEMP light are blinking amber and the Power light is solid blue, the color wheel has failed and the projector will automatically shut down.
	To clear the protection mode, press and hold the POWER button for 10 seconds.
TEMP light is solid amber	The projector has overheated. The display automatically shuts down. Turn the display of again after the projector cools down. If the problem persists, contact Dell™.

Problem (continued)	Possible Solution (continued)	
TEMP light is blinking amber	A projector fan has failed and the projector will automatically shut down. Try to clear the projector mode by pressing and holding the <b>POWER</b> button for 10 seconds. Please wait for about 5 minutes and try to power up again. If the problem persists, contact Dell <sup>™</sup> .	
The OSD does not appear on the screen	Try to press the Menu button on the panel for 15 seconds to unlock the OSD. Check the <b>Menu Lock</b> on page 44.	
The remote control is not operating smoothly or works only within a limited range	The battery may be low. Check if the laser beam transmitted from the remote is too dim. If so, replace with 2 new AAA batteries.	

## **Guiding Signals**

Projector Status	Description	Control Buttons			Indicator	
		Power	Menu	Others	TEMP (Amber)	LAMP (Amber)
Standby mode	Projector in Standby mode. Ready to power on.	BLUE Flashing	OFF	OFF	OFF	OFF
Warming up mode	Projector takes some time to warm up and power on.	BLUE	BLUE	BLUE	OFF	OFF
Lamp on	Projector in Normal mode, ready to display an image. Note: The OSD menu is not accessed.	BLUE	BLUE	OFF	OFF	OFF
Cooling mode	Projector is cooling to shutdown.	BLUE	OFF	OFF	OFF	OFF
Power Saving mode	Power Saving mode has been activated. The projector will automatically enter standby mode, if an input signal is not detected in two hours.	AMBER Flashing	OFF	OFF	OFF	OFF
Cooling before Power Saving mode	The projector takes 60 seconds to cool down before entering Power Saving mode.	AMBER	OFF	OFF	OFF	OFF
Projector overheated	Air vents might be blocked or ambient temperature may be above 35°C. The projector automatically shuts down. Ensure that the air vents are not blocked and that the ambient temperature is within operational range. If the problem persists, contact Dell.	OFF	OFF	OFF	AMBER	OFF
Lamp overheated	The lamp is overheated. The air vents may be blocked. The projector automatically shuts down. Turn the display on again after the projector cools down. If the problem persists, contact Dell.	BLUE	OFF	OFF	AMBER	OFF
Lamp driver overheated	The lamp driver is overheated. The air vents may be blocked. The projector automatically shuts down. Turn the display on again after the projector cools down. If the problem persists, contact Dell.	AMBER	OFF	OFF	AMBER	OFF
Fan breakdown	One of the fans has failed. The projector automatically shuts down. If the problem persists, contact Dell.	ÒFF	OFF	OFF	AMBER Flashing	OFF
Lamp driver breakdown	The lamp driver has failed. The projector automatically shuts down. Unplug the power cord after three minutes then turn the display on again. If this problem persists, contact Dell.	AMBER Flashing	OFF	OFF	OFF	AMBER Flashing
Color Wheel breakdown	Color wheel cannot start. The projector has failed and the projector automatically shuts down. Unplug the power cord after three minutes and then turn on the projector. If this problem persists, contact Dell.	BLUE	OFF	OFF	AMBER Flashing	AMBEF Flashing

Lamp failure	Lamp is defective. Replace the lamp.	OFF	OFF	OFF	OFF	AMBER
Fault - DC supply (+12V)	Power supply has been interrupted. The projector automatically shuts down. Unplug the power cord after three minutes and then turn on the projector. If this problem persists, contact Dell.	AMBER Flashing	OFF	OFF	AMBER	AMBER
Fault - DC supplies (secondary)	Power supply has been interrupted. The projector automatically shuts down. Unplug the power cord after three minutes and then turn on the projector. If this problem persists, contact Dell.	AMBER Flashing	OFF	OFF	AMBER	OFF
Lamp module connection failed	Lamp module connection may be disrupted. Check the lamp module and ensure that it is properly installed. If the problem persists, contact Dell.	OFF	OFF	OFF	OFF	AMBER Flashing

## **Changing the Lamp**

#### A CAUTION: Before you begin any of the procedures in this section, follow the Safety Instructions as described on page 7.

Replace the lamp when the message "Lamp is approaching the end of its useful life in the operation. Replacement suggested! www.dell.com/lamps" appears on the screen. If this problem persists after replacing the lamp, contact Dell<sup>™</sup>. For more information, see Contacting Dell<sup>™</sup>on page 76.



**CAUTION:** Use an original lamp to ensure safe and optimal working condition of your projector.



CAUTION: The lamp becomes very hot when in use. Do not attempt to replace the lamp until the projector has been allowed to cool down for at least 30 minutes.



CAUTION: Do not touch the bulb or the lamp glass at any time. Projector lamps are very fragile and may shatter if touched. The shattered glass pieces are sharp and can cause injury.



CAUTION: If the lamp shatters, remove all broken pieces from the projector and dispose or recycle according to state, local, or federal law. For more information see www.dell.com/hg.

- **1** Turn off the projector and disconnect the power cord.
- 2 Let the projector cool for at least 30 minutes.
- **3** Loosen the two screws that secure the lamp cover, and remove the cover.
- 4 Loosen the two screws that secure the lamp.
- **5** Pull the lamp up by its metal handle.

**NOTE:** Dell<sup>™</sup> may require lamps replaced under warranty to be returned to Dell<sup>™</sup>. Otherwise, contact your local waste disposal agency for the address of the nearest deposit site.

- 6 Replace with the new lamp.
- 7 Tighten the two screws that secure the lamp.
- 8 Replace the lamp cover and tighten the two screws.



**9** Reset the lamp usage time by selecting "Yes" for Lamp Reset in the OSD Lamp tab (see Lamp menu on page 40). When a new lamp module has been changed, the projector will automatically detect and reset the lamp hours.

#### CAUTION: Lamp Disposal (for the US only) (B) LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS. FOR MORE INFORMATION, GO TO WWW.DELL.COM/HG OR CONTACT THE ELECTRONIC INDUSTRIES ALLIANCE AT WWW.EIAE.ORG. FOR LAMP SPECIFIC DISPOSAL INFORMATION CHECK WWW.LAMPRECYCLE.ORG.

# 5

# **Specifications**

Light Valve	0.65" WXGA DMD Type A, DarkChip2™		
Brightness	3500 ANSI Lumens (Max.)		
Contrast Ratio	2000:1 Typical (Full On/Full Off)		
Uniformity	80% Typical (Japan Standard - JBMA)		
Number of Pixels	1280x800 (WXGA)		
Displayable Color	16.7M colors		
Color Wheel Speed	2X		
Projection Lens	F-Stop: F/ 2.55~2.83 Focal length, f=18.2~21.8 mm 1.2X manual Zoom Lens Throw ratio =1.28~1.56 wide and tele		
Projection Screen Size	36~358 inches (diagonal)		
Projection Distance			
Video Compatibility	Composite Video / S-Video: NTSC (J, M, 4.43), PAL (B, D, G, H, I, M, N, Nc, 60), SECAM (B, D, G, K, K1, L)		
	Component Video via VGA & HDMI: 1080i/p, 720p, 576i/p, 480i/p		
Power Supply	Universal AC90-264 50/60 Hz with PFC input		
Power Consumption	Normal mode: 370W ± 10% @ 110Vac (Network On)		
	Eco mode: 330W ± 10% @ 110Vac (Network On)		
	Power saving mode: <24W (Network On, fan speed at minimum)		
	Standby mode: 1.75W ± 10% @ 110Vac (Network On) < 1W (Network Off)		
Audio	2 speakers x 5watt RMS		

35 dB(A) Normal mode, 32 dB(A) Eco mode 6.35 lbs (2.88 kg)

Noise Level Weight Dimensions (W x H x D)

11.26 x 4.33 x 9.76 inches (286 x 110 x 247.8 mm)

	4.33"(110mm)
Environmental	Operating temperature: 5°C - 35°C (41°F- 95°F) Humidity: 80% maximum
	Storage temperature: 0°C to 60°C (32°F to 140°F) Humidity: 90% maximum
	Shipping temperature: -20°C to 60°C (-4°F to 140°F) Humidity: 90% maximum
I/O Connectors	Power: One AC power socket (3-pins - C14 inlet)
	VGA input: Two 15-pins D-sub connectors (Blue), VGA-A & VGA-B, for analog RGB/Component input signals.
	VGA output: One 15-pins D-sub connector (Black) for VGA-A loop through.
	S-Video input: One standard 4-pins min-DIN S- Video connector for Y/C signal.
	Composite video input: One Yellow RCA jack for CVBS signal.
	HDMI input: One HDMI connector for supporting HDMI 1.3. HDCP compliant.
	Analog Audio input: Two 3.5mm stereo mini phone jack (Blue) & one pair of RCA connector (Red/White).
	Variable audio output: One 3.5mm stereo mini phone jack (Green).

USB port: One USB slave for remote support.

RS232 port: One mini-DIN 6-pins for RS232 communication

RJ45 port: One RJ45 connector for control of projector through network.

12V output: One 12V DC / 200mA max. relay output for driving automatic screen.

DisplayPort: One DisplayPort (1.0) connector.

Philips 280W user-replaceable lamp (up to 2500 hours in eco mode)

Lamp



**NOTE:** The lamp life rating for any projector is a measure of brightness degradation only, and is not a specification for the time it takes a lamp to fail and cease light output. Lamp life is defined as the time it takes for more than 50 percent of a lamp sample population to have brightness decrease by approximately 50 percent of the rated lumens for the specified lamp. The lamp life rating is not guaranteed in any way. The actual operating life span of a projector lamp will vary according to operating conditions and usage patterns. Usage of a projector in stressful conditions which may include dusty environments, under high temperatures, many hours per day and abrupt powering-off will most likely result in a lamp's shortened operating life span or possible lamp failure.

#### **RS232 Pin Assignment**



#### **RS232 Protocol**

Communication Settings

Connection settings	Value	
Baud Rate:	19200	
Data Bits:	8	
Parity	None	
Stop Bits	1	

• Command types

To pop up the OSD menu and adjust the settings.

- Control command Syntax (From PC to Projector) [H][AC][SoP][CRC][ID][SoM][COMMAND]
- Example: Power ON Command (Send low byte firstly)
   --> 0xBE, 0xEF, 0x10, 0x05, 0x00, 0xC6, 0xFF, 0x11, 0x11, 0x01, 0x00, 0x01
- Control Commands List

To view the latest RS232 code, go to the Dell Support site at: support.dell.com.

Resolution	Refresh Rate (Hz)	Hsync Frequency (KHz)	Pixel Clock (MHz)
640 x 350	70.087	31.469	25.175
640 x 480	59.940	31.469	25.175
640 x 480 p60	59.940	31.469	25.175
720 x 480 p60	59.940	31.469	27.000
720 x 576 p50	50.000	31.250	27.000
720 x 400	70.087	31.469	28.322
640 x 480	75.000	37.500	31.500
848 x 480	60.000	31.020	33.750
640 x 480	85.008	43.269	36.000
800 x 600	60.317	37.879	40.000
800 x 600	75.000	46.875	49.500
800 x 600	85.061	53.674	56.250
1024 x 768	60.004	48.363	65.000
1280 x 720 p50	50.000	37.500	74.250
1280 x 720 p60	60.000	45.000	74.250
1920 x 1080 i50	50.000	28.125	74.250
1920 x 1080 i60	60.000	33.750	74.250
1280 x 720	59.855	44.772	74.500
1024 x 768	75.029	60.023	78.750
1280 x 800	59.810	49.702	83.500
1366 x 768	59.790	47.712	85.500
1360 x 768	60.015	47.712	85.500
1024 x 768	84.997	68.677	94.500
1440 x 900	59.887	55.935	106.500
1152 x 864	75.000	67.500	108.000
1280 x 960	60.000	60.000	108.000
1280 x 1024	60.020	63.981	108.000
1152 x 864	85.000	77.095	119.651
1400 x 1050	59.978	65.317	121.750
1280 X 800	84.880	71.554	122.500
1280 x 1024	75.025	79.976	135.000
1440 X 900	74.984	70.635	136.750
1680 x 1050	59.954	65.290	146.250
1280 x 960	85.002	85.938	148.500
1920 x 1080	60.000	67.500	148.500
1400 X 1050	74.867	82.278	156.000
1280 x 1024	85.024	91.146	157.000
1440 X 900	84.842	80.430	157.000
1600 x 1200	60.000	75.000	162.000

#### Compatibility Modes (Analog/Digital)

# **Contacting Dell**

For customers in the United States, call 800-WWW-DELL (800-999-3355).



**NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell<sup>™</sup> provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- Visit support.dell.com. 1
- 2 Verify your country or region in the Choose A Country/Region dropdown menu at the bottom of the page.
- Click Contact Us on the left side of the page. 3
- 4 Select the appropriate service or support link based on your need.
- 5 Choose the method of contacting Dell that is convenient for you.

# **Appendix: Glossary**

**ANSI LUMENS** — A standard for measuring the brightness. It is calculated by dividing a square meter image into nine equal rectangles, measuring the lux (or brightness) reading at the center of each rectangle, and averaging these nine points.

**ASPECT RATIO** — The most popular aspect ratio is 4:3 (4 by 3). Early television and computer video formats are in a 4:3 aspect ratio, which means that the width of the image is 4/3 times the height.

**Brightness** — The amount of light emitting from a display or projection display or projection device. The brightness of projector is measured by ANSI lumens.

**Color Temperature** — The color appearance of white light. Low color temperature implies warmer (more yellow/red) light while high color temperature implies a colder (more blue) light. The standard unit for color temperature is Kelvin (K).

**Component Video** — A method of delivering quality video in a format that consists of the luminance signal and two separate chrominance signals and are defined as Y'Pb'Pr' for analog component and Y'Cb'Cr' for digital component. Component video is available on DVD players.

**Composite Video** — A video signal that combines the luma (brightness), chroma (color), burst (color reference), and sync (horizontal and vertical synchronizing signals) into a signal waveform carried on a single wire pair. There are three kind of formats, namely, NTSC, PAL and SECAM.

**Compressed Resolution** — If the input images are of higher resolution than the native resolution of the projector, the resulting image will be scaled to fit the native resolution of the projector. The nature of compression in a digital device means that some image content is lost.

**Contrast Ratio** — Range of light and dark values in a picture, or the ratio between their maximum and minimum values. There are two methods used by the projection industry to measure the ratio:

- **1** *Full On/Off* measures the ratio of the light output of an all white image (full on) and the light output of an all black (full off) image.
- **2** ANSI measures a pattern of 16 alternating black and white rectangles. The average light output from the white rectangles is divided by the average light output of the black rectangles to determine the ANSI contrast ratio.

*Full On/Off* contrast is always a larger number than ANSI contrast for the same projector.

**dB** — decibel — A unit used to express relative difference in power or intensity, usually between two acoustic or electric signals, equal to ten times the common logarithm of the ratio of the two levels.

**Diagonal Screen** — A method of measuring the size of a screen or a projected image. It measures from one corner to the opposite corner. A 9FT high, 12FT wide, screen has a diagonal of 15FT. This document assumes that the diagonal dimensions are for the traditional 4:3 ratio of a computer image as per the example above.

**DisplayPort** — A digital display interface standard developed by the Video Electronics Standards Association (VESA). DisplayPort is designed for broad application in PCs, monitors, TV displays, projectors, and other sources of display.

**DHCP** — Dynamic Host Configuration Protocol — A network protocol that enables a server to automatically assign a TCP/IP address to a device.

**DLP<sup>®</sup>** — Digital Light Processing<sup>™</sup> — Reflective display technology developed by Texas Instruments, using small manipulated mirrors. Light passes through a color filter is sent to the DLP mirrors which arrange the RGB colors into a picture projected onto screen, also known as DMD.

**DMD** — Digital Micro-Mirror Device — Each DMD consists of thousands of tilting, microscopic aluminum alloy mirrors mounted on a hidden yoke.

**DNS** — Domain Name System — An internet service that translates domain names into IP addresses.

**Focal Length** — The distance from the surface of a lens to its focal point.

**Frequency** — It is the rate of repetition in cycles per seconds of electrical signals. Measured in Hz (Hertz).

**HDCP** — High-Bandwidth Digital-Content Protection — A specification developed by Intel<sup>™</sup> Corporation to protect digital entertainment across digital interface, such as DVI, HDMI.

**HDMI** — High-Definition Multimedia Interface — HDMI carries both uncompressed high definition video along with digital audio and device control data in a single connector.

Hz (Hertz) — Unit of frequency.

**Keystone Correction** — Device that will correct an image of the distortion (usually a wide-top narrow-bottom effect) of a projected image caused by improper projector to screen angle.

**Maximum Distance** — The distance from a screen the projector can be to cast an image that is usable (bright enough) in a fully darkened room.

Maximum Image Size — The largest image a projector can throw in a darkened

room. This is usually limited by focal range of the optics.

**Minimum Distance** — The closest position that a projector can focus an image onto a screen.

**NTSC** — National Television Standards Committee. North American standard for video and broadcasting, with a video format of 525 lines at 30 frames per second.

**PAL** — Phase Alternating Line. A European broadcast standard for video and broadcasting, with a video format of 625 lines at 25 frames per second.

**Reverse Image** — Feature that allows you to flip the image horizontally. When used in a normal forward projection environment text, graphics, etc. are backwards. Reverse image is used for rear projection.

**RGB** — Red, Green, Blue — typically used to describe a monitor that requires separate signals for each of the three colors.

**S-Video** — A video transmission standard that uses a 4-pin mini-DIN connector to send video information on two signal wires called luminance (brightness, Y) and chrominance (color, C). S-Video is also referred to as Y/C.

**SECAM** — A French and international broadcast standard for video and broadcasting, closely related to PAL but with a different method of sending color information.

SVGA — Super Video Graphics Array — 800 x 600 pixels count.

SXGA — Super Extended Graphics Array, — 1280 x 1024 pixels count.

UXGA — Ultra Extended Graphics Array — 1600 x 1200 pixels count.

VGA — Video Graphics Array — 640 x 480 pixels count.

XGA — Extended Video Graphics Array — 1024 x 768 pixels count.

WXGA — Wide Extended Graphics Array — 1280x800 pixels count.

**Zoom Lens** — Lens with a variable focal length that allows operator to move the view in or out making the image smaller or larger.

**Zoom Lens Ratio** — Is the ratio between the smallest and largest image a lens can projector from a fixed distance. For example, a 1.4:1 zoom lens ratio means that a 10 foot image without zoom would be a 14 foot image with full zoom.

## Index

### A

Adjusting the Projected Image 22 Adjusting the Projector Height 22 lower the projector Elevator button 22 Elevator foot 22 Tilt adjustment wheel 22 Adjusting the Projector Zoom and Focus 23 Focus ring 23 Zoom tab 23 Audio Input 45 Audio Settings 44 Audio-B 9 Audio-C 9 audio-C 9

#### C

Capture Screen 44 Changing the Lamp 69 Closed Caption 48 Connecting the Projector Composite video cable 15 Connecting a Computer Using a DisplayPort cable 13 Connecting a Computer with a RS232 cable 12

Connecting with a Component Cable 16 Connecting with a Composite Cable 15 Connecting with an HDMI Cable 17 Connecting with an S-video Cable 14 DisplayPort cable 13 HDMI cable 17, 18, 20 Power cord 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20 RS232 cable 12 S-video cable 14 To Computer 10 USB to USB cable 10 VGA to VGA cable 10, 11 VGA to YPbPr cable 16 Connection Ports Audio input connector 9 Audio output connector 9 Composite video connector 9 DisplayPort connector 9 Power cord connector 9 RS232 connector 9 S-video connector 9 USB remote connector 9 VGA-A input (D-sub) connector 9 VGA-A output (monitor loop-through) 9 VGA-B input (D-sub) connector

#### 9

Contact Dell 6, 65, 69 Control Panel 25

#### D

DC Adapter 9 Dell contacting 76

#### H

HDMI 9

#### Μ

Main Unit 7 Control panel 7 Elevator button 7 Focus ring 7 IR receiver 7 Lens 7 Zoom tab 7 Menu Position 43 Menu Settings 43 Menu Timeout 44 Menu Transparency 44 Mute 45

#### 0

On-Screen Display 33 Auto-Adjust 35 Display (in PC Mode) 37 Display (in Video Mode) 39 Input Select 34 Lamp 40 Main Menu 33 Others 43 Picture (in PC Mode) 35 Picture (in Video Mode) 36 Set Up 40

#### P

Password 46 phone numbers 76 Power Saving 45 Power Settings 45 Powering On/Off the Projector Powering Off the Projector 21 Powering On the Projector 21

#### Q

Quick Shutdown 45

#### R

Remote Control 28 IR receiver 26 Reset 44 Reset, Factory 49 RJ45 9

#### S

Screen 44

Screen Settings 44 Security Settings 46 Speaker 45 Specifications Audio 71 Brightness 71 Color Wheel Speed 71 Contrast Ratio 71 **Dimensions** 72 Displayable Color 71 Environmental 72 I/O Connectors 72 Lamp 73 Light Valve 71 Noise Level 72 Number of Pixels 71 Power Consumption 71 Power Supply 71 Projection Distance 71 Projection Lens 71 Projection Screen Size 71 RS232 Protocol 74 Uniformity 71 Video Compatibility 71 Weight 72 support contacting Dell 76

### Т

telephone numbers 76 Test Pattern 49 Troubleshooting 63 Contact Dell 63

#### V

Volume 45