




NOBO

X25M DLP™ Projector

User Manual





■ Usage Notice	
• Precautions	4
■ Introduction	
• Product Features	5
• Package Overview	6
• Product Overview	7
• <i>Main Unit</i>	7
• <i>Control Panel</i>	8
• <i>Connection Ports</i>	8
• <i>Remote Control</i>	9
■ Installation	
• Connecting the Projector	10
• Powering On/Off the Projector	11
• <i>Power On the Projector</i>	11
• <i>Power Off the Projector</i>	12
• <i>Warning Indicator</i>	12
• Adjusting the Projected Image	13
• <i>Adjusting the Projector Image Height</i>	13
• <i>Adjusting the Projector Zoom/Focus</i>	14
• <i>Adjusting Projected Image Size</i>	14
■ User Controls	
• Control Panel & Remote Control	15
• Using the Remote Control	16
• On-Screen Display Menus	17
• <i>How to Operate</i>	17
• <i>Language</i>	18
• <i>Image-I</i>	19
• <i>Image-II (Computer Mode)</i>	20
• <i>Image-II (Video Mode)</i>	21
• <i>Audio</i>	22
• <i>Management</i>	23
• <i>Lamp Setting</i>	24
■ Appendices	
• Troubleshooting	25
• Replacing the Lamp	28
• Specifications	29
• Compatibility Modes	30
• Ceiling Mount Installation	31



WARNING When presenting do not look into the projector's lens when the lamp is on.



WARNING Children should be supervised at all times when projector is in use.



WARNING To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.



WARNING Please do not open or disassemble the product as this may cause electric shock.



WARNING When changing the lamp, please allow unit to cool down, and follow all changing instructions.



WARNING This product will detect the life of the lamp itself. Please be sure to change the lamp when it shows warning messages.



WARNING Reset the "Lamp Reset" function from the On Screen Display "Lamp Setting" menu after replacing the lamp module (refer to page 28).



WARNING When switching the projector off, please ensure the projector completes its cooling cycle before disconnecting power.



WARNING Turn on the projector first and then the signal sources.



WARNING Do not use lens cap when projector is in operation.



WARNING When the lamp reaches the end of its life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, follow the procedures listed under "Replacing the Lamp" -page 28.

PRECAUTIONS

Follow all warnings, precautions and maintenance as recommended in this user's guide to maximise the life of your unit. Excessive use of your unit may invalidate your warranty (normal use defined as 8 hours a day 5 days a week).

DO

- Turn off the product before cleaning.
- Use a soft cloth moistened with mild detergent to clean the display housing.
- Disconnect the power plug from AC outlet if the product is not being used for a long period of time.

DON'T

- Block the slots and openings on the unit provided for ventilation.
- Use abrasive cleaners, waxes or solvents to clean the unit.
- Use under the following conditions:
 - In extremely hot, cold or humid environments.
 - In areas susceptible to excessive dust and dirt.
 - Near any appliance that generates a strong magnetic field.
 - Place in direct sunlight.

PRODUCT FEATURES

*This product is an XGA single chip 0.7" DLP™ projector.
Outstanding features include:*

- True XGA, 1024 x 768 addressable pixels
- Single chip DLP™ technology
- PAL, SECAM 625/576i\p NTSC 525/480i\p HD 720p/1080i
- High-tech DVI connection for digital signal with HDCP function and supports 480p, 576p, 720p and 1080i
- Full function remote control
- User friendly multilingual on screen display menu
- Advanced electronic keystone correction and high quality full screen image re-scaling
- User friendly control panel
- SXGA+, SXGA compression and VGA, SVGA re-sizing
- Mac compatible

PACKAGE OVERVIEW

*This projector comes with all the items shown below.
Check to make sure your unit is complete.
Contact your dealer immediately if anything is missing.*



Projector with lens cap



Remote Control



Batteries x 2



SCART RGB Adaptor
(For European Use Only)



S-Video Cable



Power Cord 1.8m



VGA Cable 1.8m



Composite Video
Cable 2.0m



Audio Cable Jack/Jack
1.8m



Quick Start Card





User's Guide




Warranty Card

PRODUCT OVERVIEW


MAIN UNIT

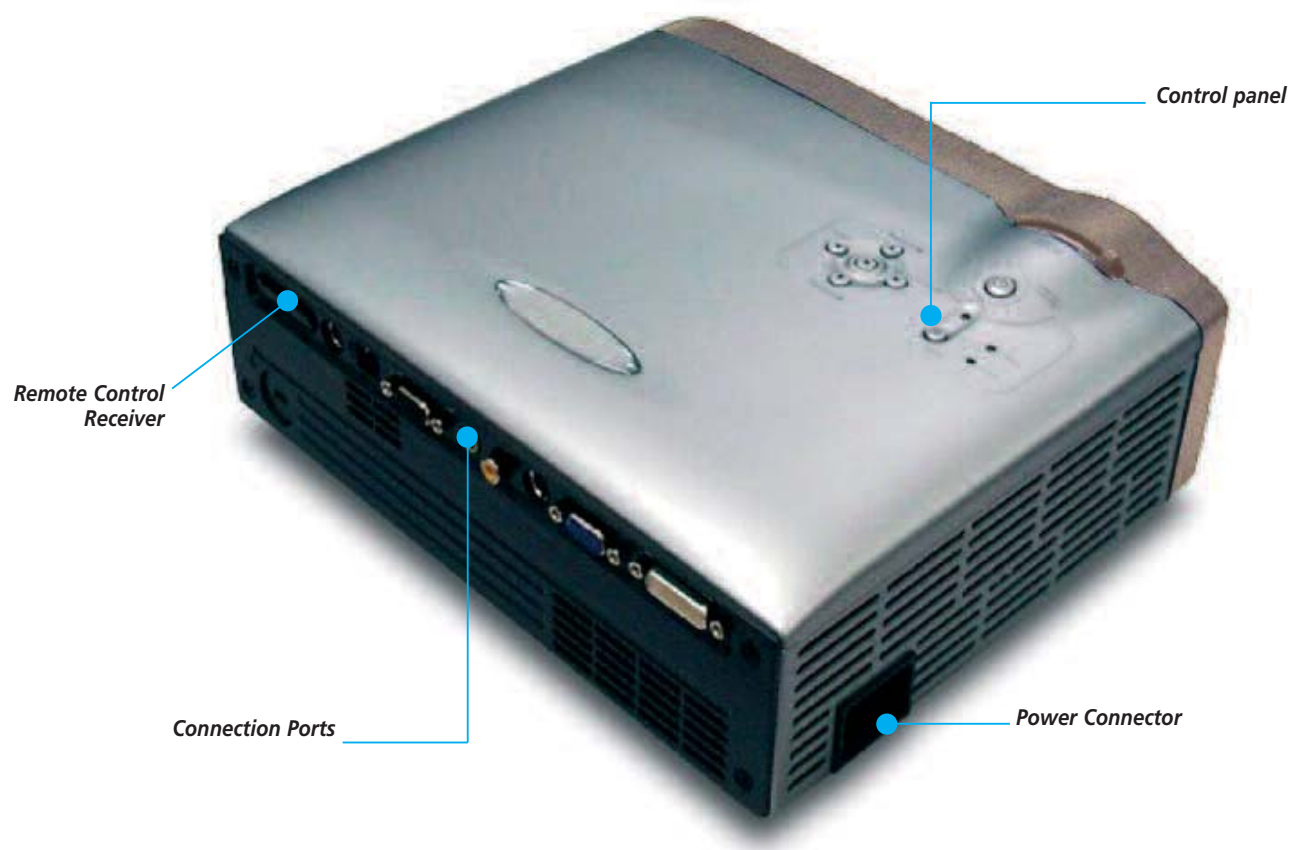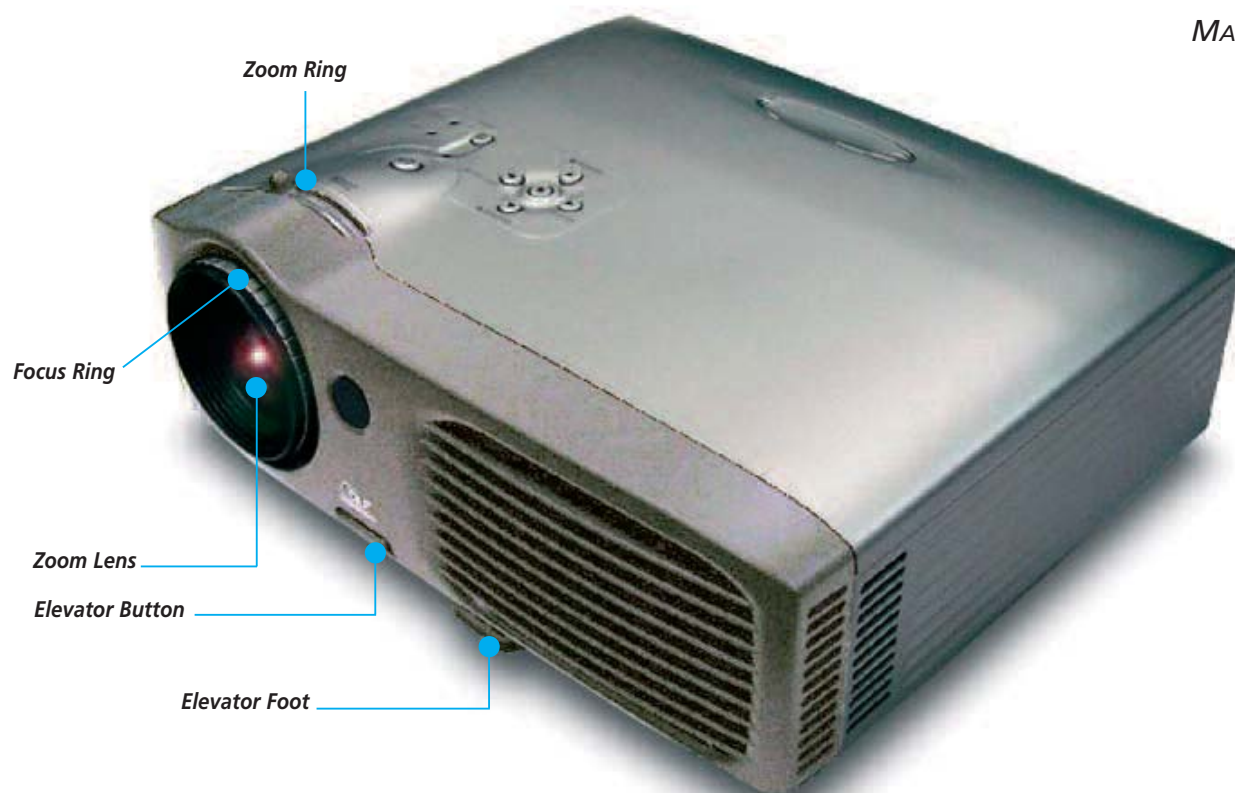


CONTROL PANEL

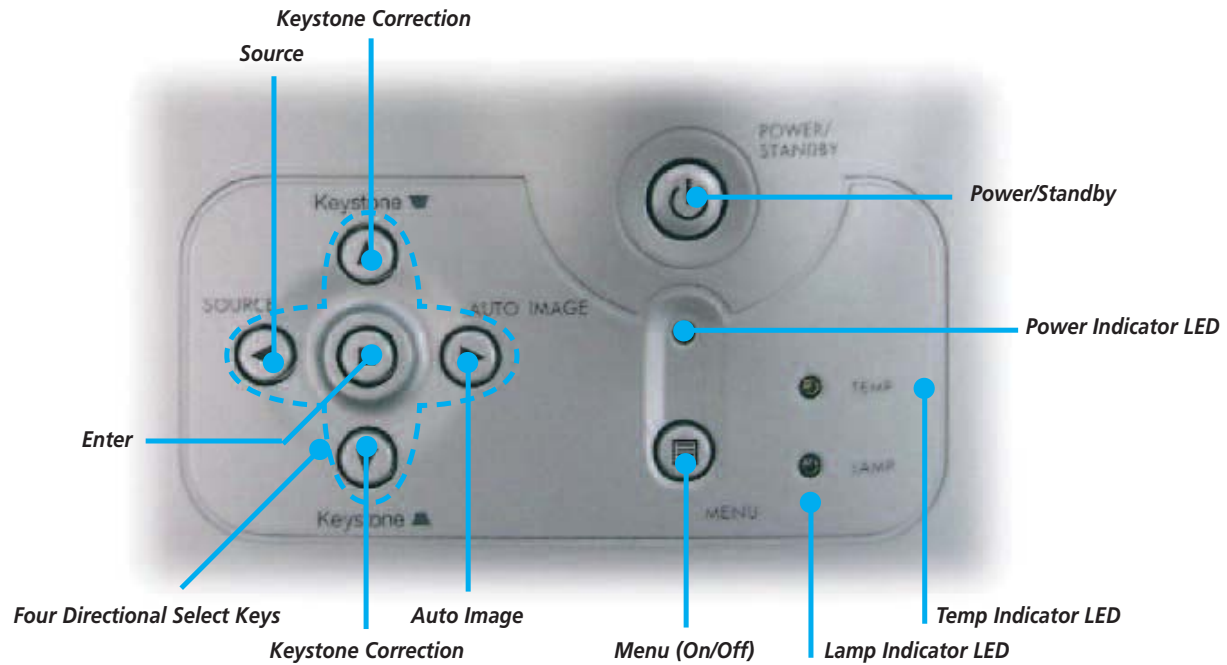

CONNECTION PORTS

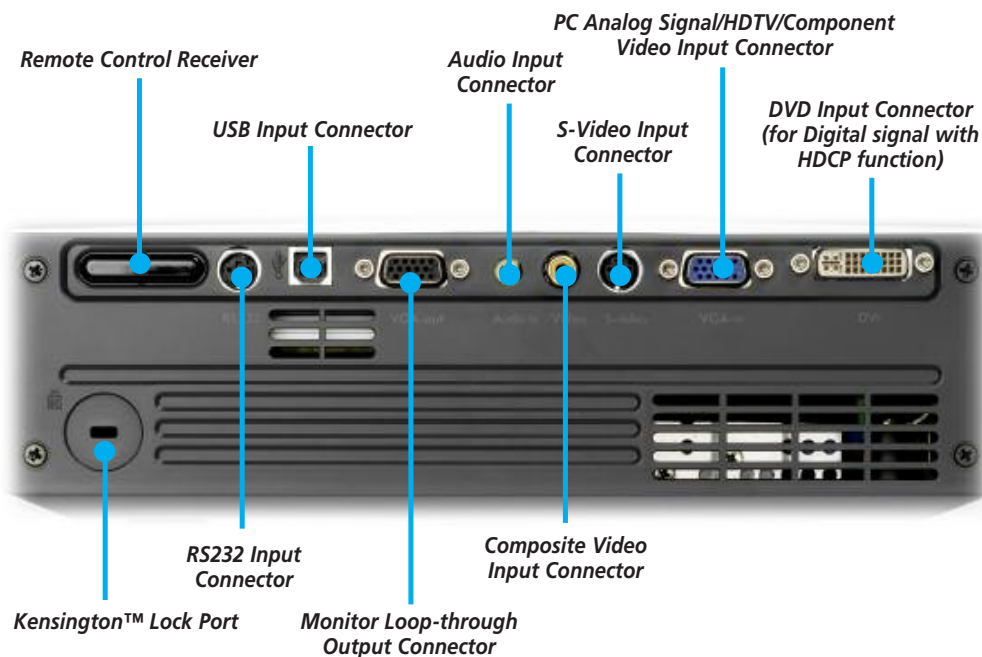


REMOTE CONTROL

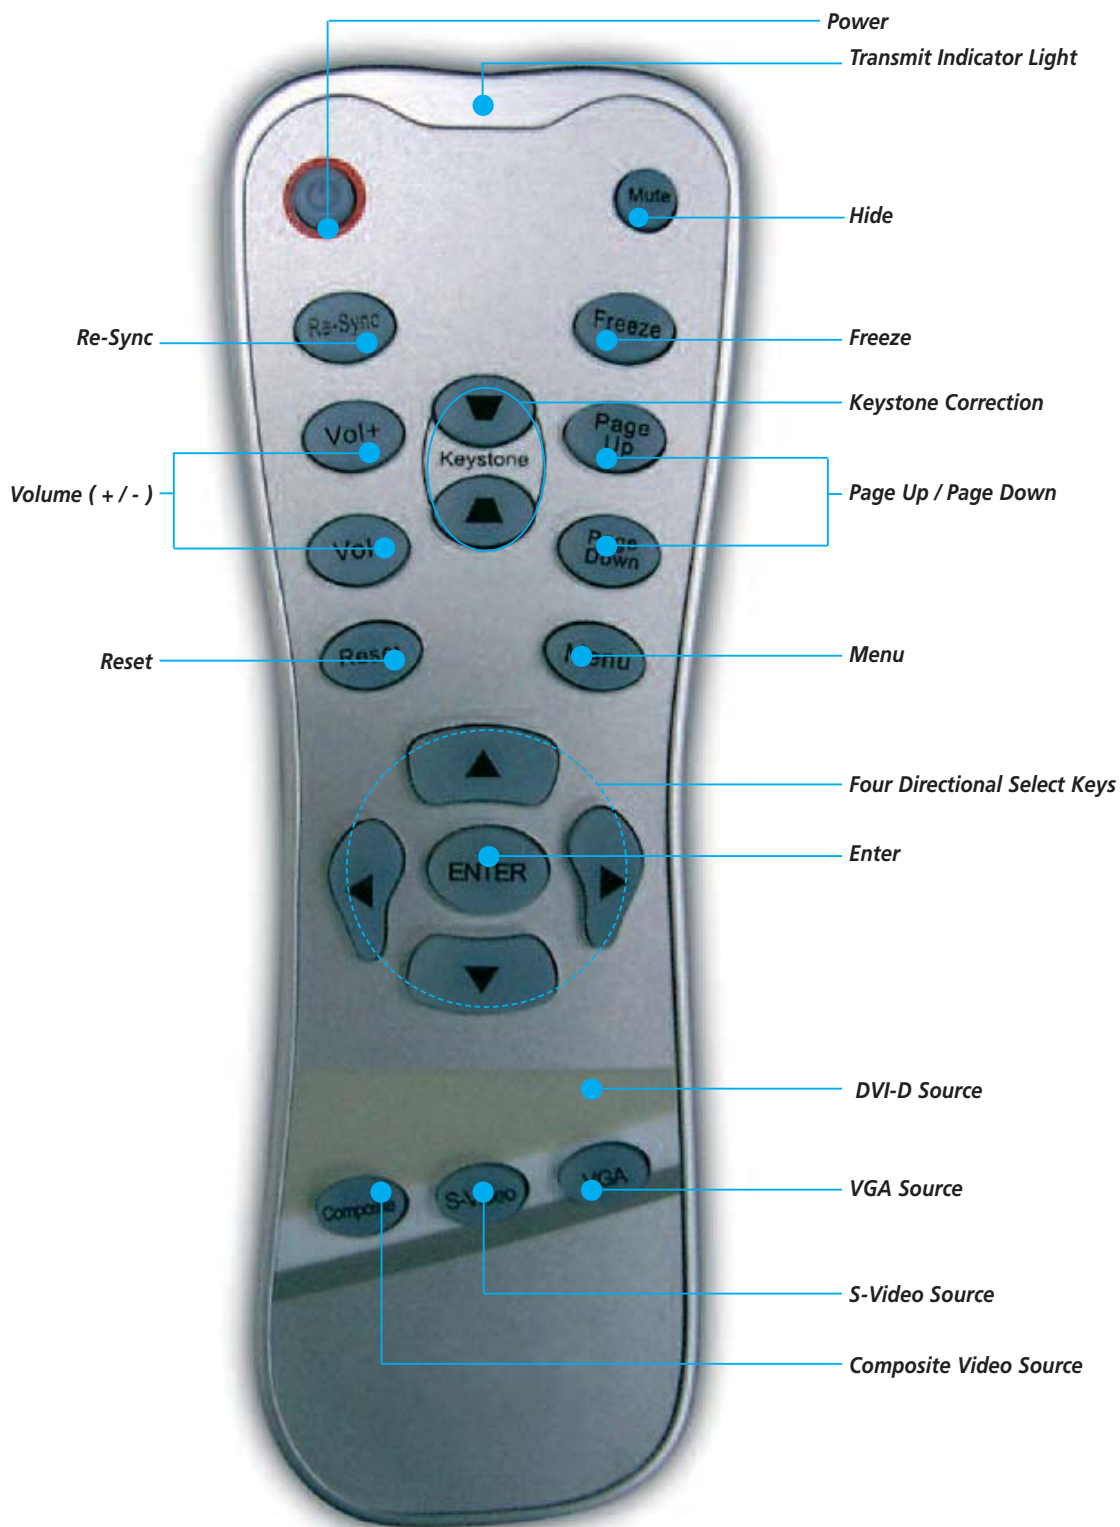

CONNECTING THE PROJECTOR

To ensure the projector works well with your computer, please set the display mode of your graphic card less than or equal to 1024 X 768 resolution. Make sure the timing of the display mode is compatible with the projector. Refer to the "Compatibility Modes" section on page 30.

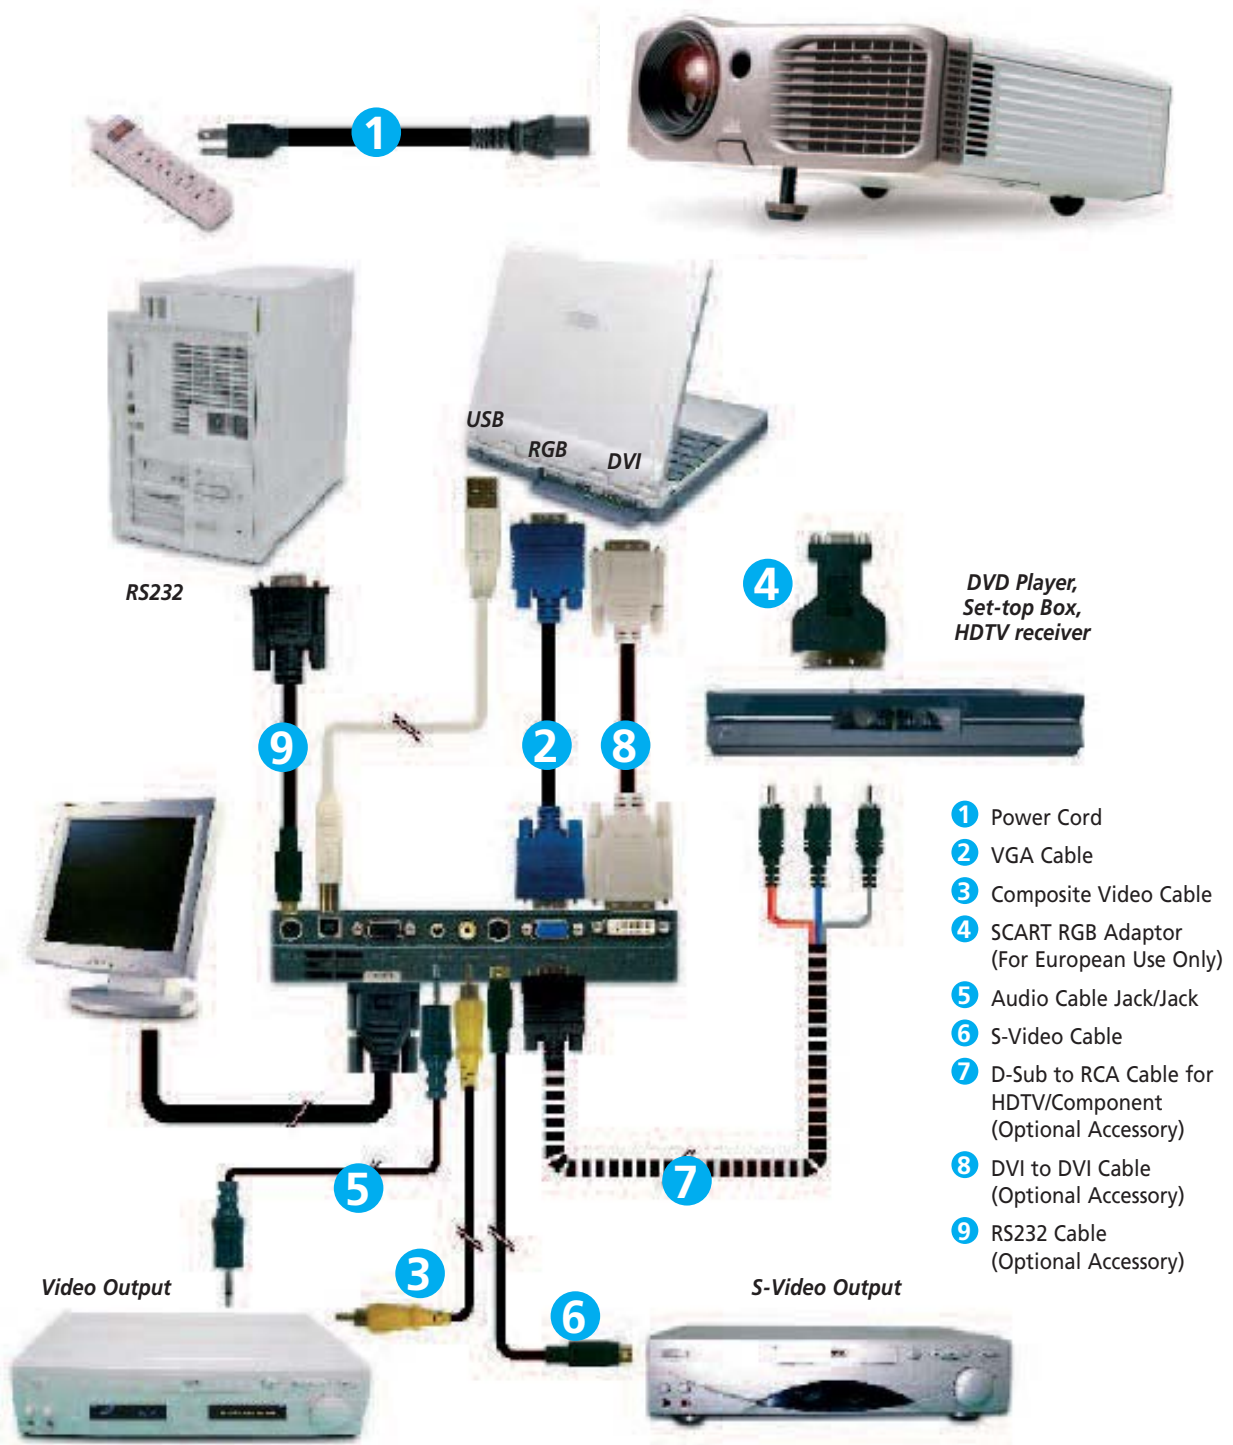

POWERING ON THE PROJECTOR

Turn on the projector first and then the signal sources.


If the screen displays "No Signal", please make sure the signal cables are securely connected.

If you connect multiple sources at the same time, use the "Source" button on the remote control or control panel to switch between them.

- 1 Remove the lens cap.
- 2 Ensure that the power cord and signal cable are securely connected. The Power LED will flash green.
- 3 Turn on the lamp by pressing "Power/Standby" button on the control panel. ① And the Power LED will turn green.
The first time you use the projector, you can select your preferred language from the quick menu after the start-up screen display.
- 4 Turn on your source (computer, notebook, video player, etc.). The projector will detect your source automatically.



POWERING OFF THE PROJECTOR

- 1 Press the "Power/Standby" button to turn off the projector lamp, you will see a message "Power off the lamp? Picture Mute" displayed on the projector's screen. Press the "Power/Standby" button again to confirm, otherwise the message will disappear after 5 seconds.
Please note that if the  key is pressed instead, the projector will enter the "Picture Mute" mode and no image will be displayed. To exit the "Picture Mute" mode, press the "Power/Standby" button again.
- 2 The cooling fans continue to operate for about 60 seconds for cooling cycle and the "Power/Standby" button will turn orange. When the light begins flashing, the projector has entered standby mode.
If you wish to turn the projector back on, you must wait until the projector has completed the cooling cycle and has entered standby mode. Once in standby mode, simply press "Power/ Standby" button to restart the projector.
- 3 Disconnect the power cord from the electrical outlet and the projector.
- 4 Do not turn on the projector immediately following a power off procedure.

Warning Indicator

When the "LAMP" indicator lights solid red, the projector will automatically shut itself down. Please contact your local reseller or service center.

When the "TEMP" indicator lights solid red for about 20 seconds, it indicates the projector has been overheated. You will see a message "Projector Overheated. Lamp will automatically turn off soon." on the on-screen display. The projector will automatically shut itself down. Under normal conditions, the projector can be switched on again after it has cooled down. If the problem persists, you should contact your local dealer or our service centre.

When the "TEMP" indicator flashes red for about 10 seconds, you will see a message "Fan fail. Lamp will automatically turn off soon" on the on-screen display. Please contact your local dealer or our service centre.



ADJUSTING THE PROJECTED IMAGE

ADJUSTING THE PROJECTOR IMAGE HEIGHT



The projector is equipped with an elevator foot for adjusting the image height.

To raise the projector

- 1 Press the elevator button ①.
- 2 Raise the image to the desired height angle ②, then release the button to lock the elevator foot into position.
- 3 Use ③ to fine-tune the display angle.

To lower the image

- 1 Press the elevator button.
- 2 Lower the image, then release the button to lock the elevator foot into position.
- 3 Use ③ to fine-tune the display angle.

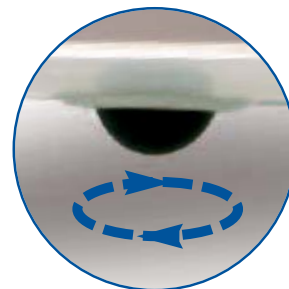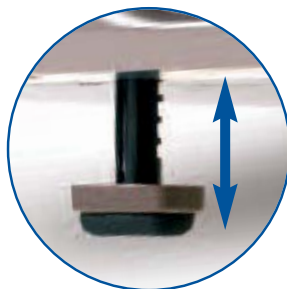


ADJUSTING THE PROJECTOR ZOOM / FOCUS

You may turn the zoom ring to zoom in or out. To focus the image, rotate the focus ring until the image is clear. The projector will focus at distances from 1.2 to 10.0 meters.



ADJUSTING PROJECTED IMAGE SIZE

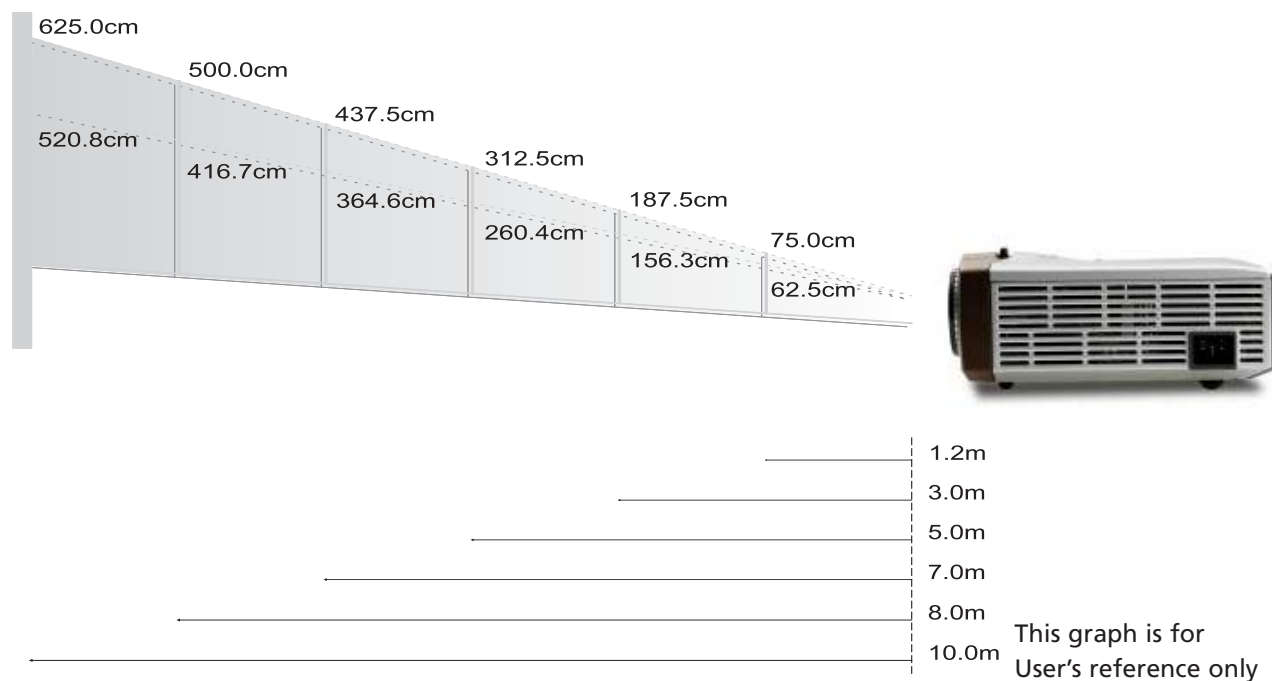

Screen (Diagonal)	Max (cm)	75.0	187.5	312.5	437.5	500.0	625.0
	Min (cm)	62.5	156.3	260.4	364.6	416.7	520.8
Screen Size	Max (W x H cm)	60.0 x 45.0	150.0 x 112.5	250.0 x 187.5	350.0 x 262.5	400.0 x 300.0	500.0 x 375.0
	Min (W x H cm)	50.0 x 37.5	125.0 x 93.8	208.3 x 156.2	291.7 x 218.8	333.4 x 250.0	416.6 x 312.5
Distance (m)		1.4	3.0	5.0	7.0	8.0	10.0

CONTROL PANEL & REMOTE CONTROL

There are two ways for you to control the functions: Remote Control and Control Panel.

Control Panel



Remote Control



USING THE CONTROL PANEL

Power / Standby

- Refer to the "Power On/Off the Projector" section on pages 11-12.

Source

- Press "Source" to choose RGB, Component-p, Component-i, S-Video, Composite Video and HDTV sources.

Menu

- Press "Menu" to launch the on screen display (OSD) menu. To exit OSD, press "Menu" again.

Keystone ▲▼

- Adjusts image distortion caused by tilting the projector (± 16 degrees).

Four Directional Select Keys

- Use ▲▼◀▶ to select items or make adjustments to your selection.

Enter

- Confirm your selection of items.

Re-Sync

- Automatically synchronises the projector to the input source.

USING THE REMOTE CONTROL

Power / Standby

- Refer to the "Power On/Off the Projector" section on pages 11-12.

Re-Sync

- Automatically synchronises the projector to the input source.

Volume + / -

- Increases/decreases speaker volume.

Reset

- Changes the adjustments and settings to the factory default value.

Hide

- Press "Hide" to hide image, press again to restore display of the image.

Keystone

- Adjusts image distortion caused by tilting the projector (± 16 degrees).



Page Up (Computer mode only)

- Use this button to page up. This function is only available when the projector is connected to a computer via an USB cable.


Page Down (Computer mode only)

- Use this button to page down. This function is only available when the projector is connected to a computer via an USB cable.

Freeze

- Press "Freeze" to pause the screen image.

Four Directional Select Keys

- Use  to select items or make adjustments to your selection.

Menu

- Press "Menu" to launch the on screen display menu.
To exit OSD, press "Menu" again.

Enter

- Confirm your selection of items.

VGA

- Press "VGA" to choose Analog RGB, component and HDTV source.

S-Video

- Press "S-Video" to choose S-Video source.

Composite

- Press "composite" to choose Composite video source.

DVI-D

- Press "DVI-D" to choose DVI-D connector.


ON SCREEN DISPLAY MENUS

HOW TO OPERATE

The Projector has multilingual On Screen Display (OSD) menus that allow you to make image adjustments and change a variety of settings. The projector will automatically detect the source.

How to Operate

- 1 To open the OSD menu, press "Menu" on the Remote Control or Control Panel.
- 2 When OSD is displayed, use ◀ ▶ keys to select any item in the main menu. While making a selection on a particular page, press "Enter" key to enter sub menu.
- 3 Use ▲ ▼ keys to select the desired item and adjust the settings by ◀ ▶ key.
- 4 Select the next item to be adjusted in the sub menu and adjust as described above.
- 5 Press "Menu" to confirm, and the screen will return to the main menu.
- 6 To exit, press "Menu" again. The OSD menu will close and the projector will automatically save the new settings.

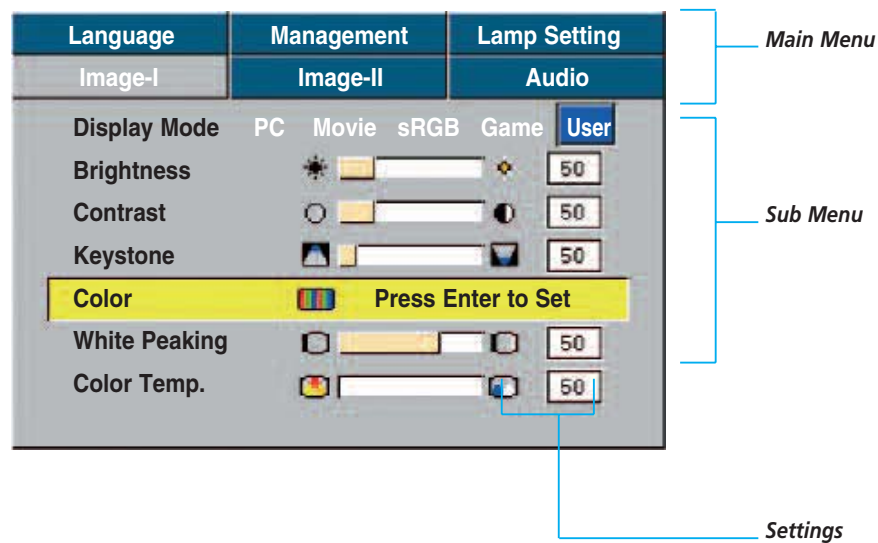

Computer / Video Mode

Image-I	Image-II	Audio
Language	Management	Lamp setting
English		
Deutsch		Portugês
Français		Nederlands
Italiano		Polska
Español		Svenska

LANGUAGE

Choose the multilingual OSD menu.

- Use the ▲ or ▼ key to select your preferred language.
- Press "Enter" to finalise the selection.

Computer / Video Mode

Language	Management	Lamp Setting
Image-I	Image-II	Audio
Display Mode	PC Movie sRGB Game User	
Brightness		50
Contrast		50
Keystone		50
Color	Press Enter to Set	
White Peaking		50
Color Temp.		50

IMAGE-I

Display Mode

There are many factory presets optimized for various types of images.

- PC : For computer or notebook.
- Movie : For home theatre.
- Game : For game.
- sRGB : For PC standard color.
- User : Memorise user's settings.

Brightness

Adjusting the brightness of the image.

- Press the to darken image.
- Press the to lighten the image.

Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image.

- Press the to decrease the contrast.
- Press the to increase the contrast.

Keystone (Keystone Correction)

Adjust image distortion caused by tilting projection. (± 16 degrees)

Color	
Red	50
Green	50
Blue	50
Exit	

Colour

Press "Enter" to adjust the red, green and blue colors.

White Peaking

Use the white peaking control to set the white peaking level of DMD chip. 0 stands for minimal peaking, and 10 stands for maximum peaking. If you prefer a stronger image, adjust towards the maximum setting. For a smooth and more natural image, adjust towards the minimum setting.

Colour Temp.

Adjust the colour temperature. At higher temperature, the screen looks colder; at lower temperature, the screen looks warmer.

Computer Mode

Language	Management	Lamp Setting
Image-I	Image-II	Audio
Frequency	<input type="checkbox"/> <input type="text"/>	<input type="checkbox"/> 50
Tracking	<input type="checkbox"/> <input type="text"/>	<input type="checkbox"/> 50
H. Position	<input type="checkbox"/> <input type="text"/>	<input type="checkbox"/> 50
V. Position	<input type="checkbox"/> <input type="text"/>	<input type="checkbox"/> 50
Degamma	<input type="checkbox"/> <input type="text"/>	<input type="checkbox"/> 50
Aspect Ratio		16:9
16:9 Image Position		Press Enter to Set

IMAGE-II (COMPUTER MODE)



Frequency

"Frequency" changes the display data frequency to match the frequency of your computer's graphic card. If you experience a vertical flickering bar, use this function to make an adjustment.



Tracking

"Tracking" synchronizes the signal timing of the display with the graphic card. If you experience an unstable or flickering image, use this function to correct it.

Horizontal Position

- Press the  to move the image left.
- Press the  to move the image right.

Vertical Position

- Press the  to move the image down.
- Press the  to move the image up.

Degamma

This allows you to choose a degamma table that has been fine-tuned to bring out the best image quality for the input.



Aspect Ratio

Use this function to choose your desired aspect ratio.



- 4:3 : The input source will be scaled to fit the projection screen.
- 16:9 : The input source will be scaled to fit the width of the screen.
- Window: When a 4:3 image is bigger than a 16:9 screen, select the "Window" mode to fit the image onto the screen without changing the projection distance.

16:9 Image Position

Adjust the image position to up or down, when you select the aspect ratio to 16:9.










- Press the  to move the image down.
- Press the  to move the image up.

16:9 Image Position

50

Video Mode

Language	Management	Lamp Setting
Image-I	Image-II	Audio
Degamma	 <input type="text"/>	 50
Saturation	 <input type="text"/>	 50
Tint	 <input type="text"/>	 50
Sharpness	 <input type="text"/>	 50
Aspect Ratio	 16:9	
16:9 Image Position	Press Enter to Set	

“Saturation”, “Tint” and “Sharpness” function is not supported under DVI-D mode.

IMAGE-II (VIDEO MODE)

Degamma

This allows you to choose a degamma table that has been finetuned to bring out the best image quality for the input.

Saturation

Adjusts a video image from black and white to fully saturated colour.

- Press the ◀ to decrease the amount of colour in the image.
- Press the ▶ to increase the amount of colour in the image.

Tint

Adjusts the color balance of red and green.

- Press the ◀ to increase the amount of green in the image.
- Press the ▶ to increase the amount of red in the image.

Sharpness

Adjusts the sharpness of the image.

- Press the ◀ to decrease the sharpness.
- Press the ▶ to increase the sharpness.

Aspect Ratio

Use this function to choose your desired aspect ratio.

- 4:3 : The input source will be scaled to fit the projection screen.
- 16:9 : The input source will be scaled to fit the width of the screen.
- Window: When a 4:3 image is bigger than a 16:9 screen, select the “Window” mode to fit the image onto the screen without changing the projection distance.

16:9 Image Position




50

16:9 Image Position

Adjust the image position to up or down, when you select the aspect ratio to 16:9.

- Press the ▼ to move the image down.
- Press the ▲ to move the image up.

Computer / Video Mode

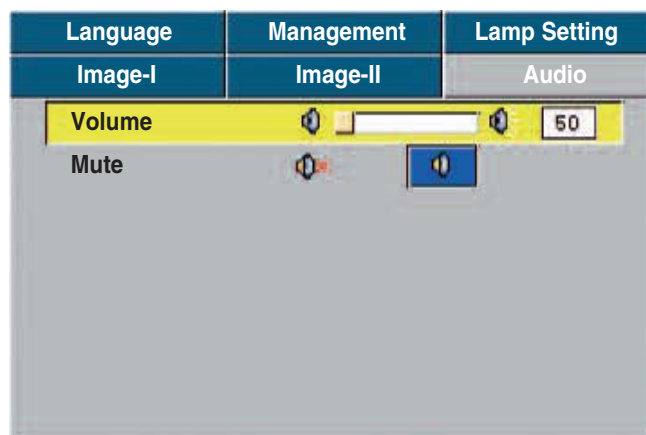

AUDIO





Volume

- Press the ◀ to decrease the volume.
- Press the ▶ to increase the volume.

Mute

- Choose the left icon to turn mute on.
- Choose the right icon to turn mute off.





Computer / Video Mode

Image-I	Image-II	Audio
Language	Management	Lamp Setting
Menu Location		
Projection		
Signal Type	RGB	Video
Source Lock	On	Off
High Altitude	On	Off
Reset	Yes	No

MANAGEMENT**Menu Location**

Choose the Menu location on the display screen.

Projection

-  Front-Desktop The factory default setting.
-  Rear-Desktop When you select this function, the projector reverses the image so you can project behind a translucent screen.
-  Front-Ceiling When you select this function, the projector turns the image upside down for ceiling-mounted projection.
-  Rear-Ceiling When you select this function, the projector reverses and turns the image upside down at same time. You can project from behind a translucent screen with ceiling mounted projection.

Signal Type

Select signal type RGB or Video sources.

Source Lock

When source lock is turned off, the projector will search for other signals if the current input signal is lost. When source lock is turned on, it will continue to search for the "lost signal" after "Source" is pressed.





High Altitude

Choose "ON" to turn on High Altitude mode, this operates the fans at full speed continuously to allow for proper high altitude cooling of the projector.

Reset

Choose "Yes" to return the display parameters on all menus to the factory default settings.

Computer / Video Mode

Image-I	Image-II	Audio
Language	Management	Lamp Setting
Lamp Hour	 <input type="text" value="50"/> 	50
Lamp Reset	Yes <input type="button" value="No"/>	
Lamp Reminding	<input checked="" type="button" value="Yes"/> No	
ECO Mode	<input checked="" type="button" value="On"/> <input type="button" value="Off"/>	
Auto Power Off	 <input type="text" value="180"/> 	180

LAMP SETTING**Lamp Hour**

Displays the lamp's elapsed operating time (in hours).

Lamp Reset

Turns the lamp hour counter to 0 hours.

Lamp Reminding

Choose this function to show or to hide the warning message when the changing lamp message is displayed. The message will show up 30 hours before end of life.

ECO Mode

Choose "On" to dim the projector lamp which will lower power consumption and extend the lamp life by up to 130%. Choose "Off" to return to normal mode.

Auto Power Off

Set the interval of power off the system if there is no signal input. (In minutes)

TROUBLESHOOTING

If you experience trouble with the projector, refer to the following information. If the problem persists, please contact your local reseller or service centre.

PROBLEM No image appears on the screen

- Ensure all the cables and power connections are correctly and securely connected as described in the "Installation" section.
- Ensure the pins of connectors are not crooked or broken.
- Check if the projection lamp has been securely installed. Please refer to the "Replacing the lamp" section.
- Make sure you have removed the lens cap and the projector is switched on.
- Ensure that the "Hide" feature is not enabled.

PROBLEM Partial, scrolling or incorrectly displayed image

- Press the "Re-Sync" button on the Remote Control or the Control Panel.
- If you use a PC:

If the resolution of your computer is higher than 1024 x 768.

Follow the steps outlined below to reset the resolution.

For Windows 3.x:

- 1 In the Windows Program Manager, click the "Windows Setup" icon in the Main group.
- 2 Verify that your display resolution setting is less than or equal to 1024 x 768.

For Windows 95,98,2000,XP:

- 1 Open "My Computer" icon, the "Control Panel" folder, and then double click on the "Display" icon.
- 2 Select the "Setting" tab.
- 3 In the "Desktop Area" you will find the resolution setting. Verify that the resolution setting is less than or equal to 1024 x 768 resolution.

If the projector is still not projecting the whole image, you will also need to change the monitor display you are using. Refer to the following steps.

- 4 Follow the above steps 1-2. Click on the "Advanced Properties" button.
- 5 Select the "Change" button under the "Monitor" tab.
- 6 Click on "Show all devices". Then select "Standard monitor types" under the "Manufacturers" box ; choose the resolution mode you need under the "Models" box.
- 7 Verify that the resolution setting of the monitor display is less than or equal to 1024 x 768.

If you are using a Notebook PC:

- 1 You are required to implement the above steps of resolution setting of the computer first.
- 2 Switch the Notebook PC display to the "external display only" or "CRT only" mode.

If you experience difficulty in changing resolutions or your monitor freezes, restart all the equipment and the projector.

PROBLEM: The screen of the Notebook or PowerBook computer is not displaying your presentation.**■ If you are using a Notebook PC:**

Some Notebook PCs may deactivate their screens when a second display device is in use. Refer to your computer's documentation for information on how to reactivate the monitor display.

■ If you are using an Apple PowerBook:

In Control Panels, open the PowerBook Display to select Video Mirroring "On".

PROBLEM Image is unstable or flickering

- Use "Tracking" to correct it. Refer to page 20.
- Change the monitor color setting from your computer.

PROBLEM Image has vertical flickering bar

- Use "Frequency" to make an adjustment. Refer to page 20.
- Check and reconfigure the display mode of your graphic card to make it compatible with the product. Refer to page 30.

PROBLEM Image is out of focus

- Adjusts the Focus Ring on the projector lens. Refer to page 14.
- Make sure the projection screen is between the required distance 1.2 to 10.0 meters from the projector.

PROBLEM The image is outstretched when displaying 16:9 DVD

The projector automatically detects 16:9 DVD and adjusts the aspect ratio by digitizing to full screen with 4:3 default setting.

If the image is still outstretched, you will also need to adjust the aspect ratio by referring to the following:

- Please select 4:3 aspect ratio type on your DVD player if you are playing a 16:9 DVD.
- If you can't select 4:3 aspect ratio type on your DVD player, please select 4:3 aspect ratio in the on screen menu.

PROBLEM Image is reversed

- Select "Management" from the OSD and adjust the projection direction. See page 23.

PROBLEM Lamp burns out or makes a popping sound

- When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the "Replacing the Lamp" section. See page 28.

PROBLEM LED lighting message

Message	Power LED Green	Temp LED	Lamp LED
Standby State (Input power cord)	Flashing	Off	Off
Lamp lighting	On	Off	Off
Power on	On	Off	Off
Power off (Cooling)	On	Off	Off
Error (Lamp fail)	Off	Off	On
Error (Thermal fail)	On	On	Off
Error (Fan lock fail)	Off	Flashing	Off
Error (Over Temp.)	Off	On	Off
Error (Lamp Breakdown)	Off	Off	On

PROBLEM Message Reminders

- "Lamp is approaching the end of its useful life in full power operation. Replacement Suggested!" will be shown about 10 seconds when lamp life is going to deplete.
- "Projector Overheated. Lamp will automatically turn off soon." will be shown when the system temperature is over heat.
- "Fan fail. Lamp will automatically turn off soon." will be shown when the fan is out of order.

REPLACING THE LAMP

The projector will detect the lamp life itself. It will show you a warning message "Lamp is approaching the end of its useful life in full power operation. Replacement Suggested!" When you see this message, change the lamp as soon as possible. Make sure the projector has been cooled down for at least 30 minutes before changing the lamp.

Lamp Changing Procedure:

- 1 Turn off the power to the projector by pressing the Power button.
- 2 Allow the projector to cool down at least 30 minutes.
- 3 Disconnect the power cord.
- 4 Use a screwdriver to remove the screw from the cover ①.
- 5 Push up and Remove the cover ②.
- 6 Remove the two screws from the lamp module ③.
- 7 Pull out the lamp module ④.

To replace the lamp module, reverse the previous steps.




WARNING

Lamp compartment is hot! Allow it to cool down before changing lamp!



WARNING

To reduce the risk of personal injury, do not drop the lamp module or touch the lamp bulb. The bulb may shatter and cause injury if it is dropped.

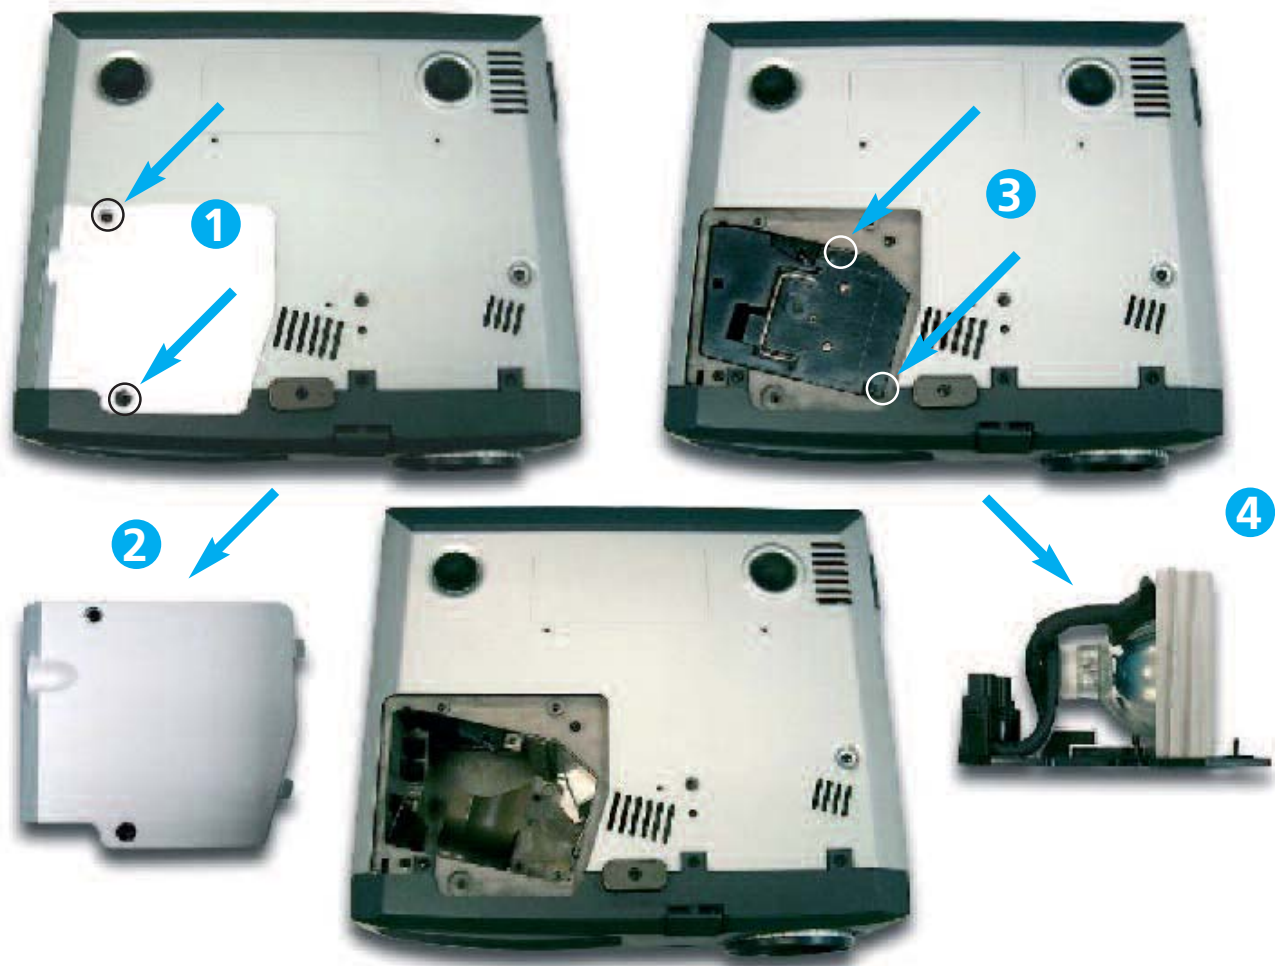

SPECIFICATIONS

Light Valve	Single Chip DLP™ Technology by Texas Instruments
Lamp	200W SHP User Replaceable Lamp
Number of Pixels	1024 pixels(H) X 768 lines(V)
Displayable Color	16.7M colors
Projection Lens	F/2.4~2.65. f 28-35.6mm
Projection Screen Size (Diag.)	0.63 to 6.25 meters diagonal
Projection Distance	1.2 to 10 metres
Video Compatibility	PAL, SECAM 625/576i\p NTSC 525/480i\p HD 720p/1080i
H. Frequency	31.5kHz~70kHz horizontal scan
V. Frequency	43Hz~85Hz vertical refresh
Power Supply	Universal AC input 100-240V; Input Frequency 50/60Hz
I/O Connectors	Power: AC power input socket
	Computer Input: One VGA for analog/component and HDTV signal
	Computer Output: One 15-pin D-sub computer output
	Video Input: One Composite video RCA input, One S-Video input
	USB Input: One USB connector
	Audio Input: One phone jack for audio input
Dimensions (W x H x D)	265 x 104 x 236mm
Environmental	Operating Temperature: 41 – 95°F (5 – 35°C) Humidity: 80% maximum (Non-condensing) Storage Temperature: -4 – 140°F (-20 – 60°C) Humidity: 80% maximum (Non-condensing)
Safety Regulation	FCC Class B, CE Class B, VCCI-II, UL, cUL, TÜV-GS, CCC (China),PSE,CB Report

COMPATIBILITY MODES

Remark!
 "*" compression
 computer image

MODE	RESOLUTION	(ANALOG)		(DIGITAL)	
		V.FREQUENCY (HZ)	H.FREQUENCY (KHZ)	V.FREQUENCY (HZ)	H.FREQUENCY (KHZ)
VESA VGA	640 x 350	70	31.5	70	31.5
VESA VGA	640 x 350	85	37.9	85	37.9
VESA VGA	640 x 400	85	37.9	--	--
VESA VGA	640 x 480	60	31.5	60	31.5
VESA VGA	640 x 480	72	37.9	72	37.9
VESA VGA	640 x 480	75	37.5	75	37.5
VESA VGA	640 x 480	85	43.3	85	43.3
VESA VGA	720 x 400	70	31.5	70	31.5
VESA VGA	720 x 400	85	37.9	85	37.9
SVGA	800 x 600	56	35.2	56	35.2
SVGA	800 x 600	60	37.9	60	37.9
SVGA	800 x 600	72	48.1	72	48.1
SVGA	800 x 600	75	46.9	75	46.9
SVGA	800 x 600	85	53.7	85	53.7
VESA XGA	1024 x 768	60	48.4	60	48.4
VESA XGA	1024 x 768	70	56.5	70	56.5
VESA XGA	1024 x 768	75	60.0	75	60.0
VESA XGA	1024 x 768	85	68.7	85	68.7
* VESA SXGA	1152 x 864	70	63.8	-	-
* VESA SXGA	1152 x 864	75	67.5	-	-
* VESA SXGA	1152 x 864	85	77.1	-	-
* VESA SXGA	1280 x 1024	60	63.98	60	63.98
* VESA SXGA	1280 x 1024	75	79.98	-	-
* VESA SXGA+	1400 x 1050	60	63.98	-	-
MAC LC 13"	640 x 480	66.66	34.98	-	-
MAC II 13"	640 x 480	66.68	35	-	-
MAC 16"	832 x 624	74.55	49.725	-	-
MAC 19"	1024 x 768	75	60.24	-	-
* MAC	1152 x 870	75.06	68.68	-	-
MAC G4	640 x 480	60	31.35	-	-
i Mac DV	1024 x 768	75	60	-	-
* i Mac DV	1152 x 870	75	68.49	-	-
* i Mac DV	1280 x 960	75	75	-	-

CEILING MOUNT INSTALLATION

Please note that damage resulting from incorrect installation will invalidate the warranty.

- 1 To prevent damaging your projector, please use the ceiling mount package for installation.
- 2 If you wish to use a third party ceiling mount kit, please ensure the screws used to attached a mount to the projector meet the following specifications:
 - Screw type: M2.6
 - Maximum screw length: 10mm
 - Minimum screw length: 8mm

